 



SERVICE MANUAL RA-3A CHASSIS


<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>	<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
KP-43T75	RM-Y906	US	SCC-P43CA	KP-53N77	RM-Y906	US	SCC-P43DA
KP-43T75	RM-Y906	Canadian	SCC-P43CA	KP-53N77	RM-Y906	Canadian	SCC-P43DA
KP-48S75	RM-Y906	US	SCC-P43BA	KP-53S75	RM-Y906	US	SCC-P43AA
KP-48S75	RM-Y906	Canadian	SCC-P43BA	KP-53S75	RM-Y906	Canadian	SCC-P43AA
				KP-61S75	RM-Y906	US	SCC-P43EA
				KP-61S75	RM-Y906	Canadian	SCC-P43EA



RM-Y906

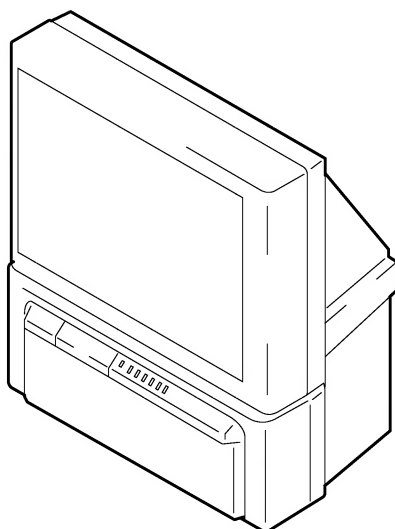

KP-43T75

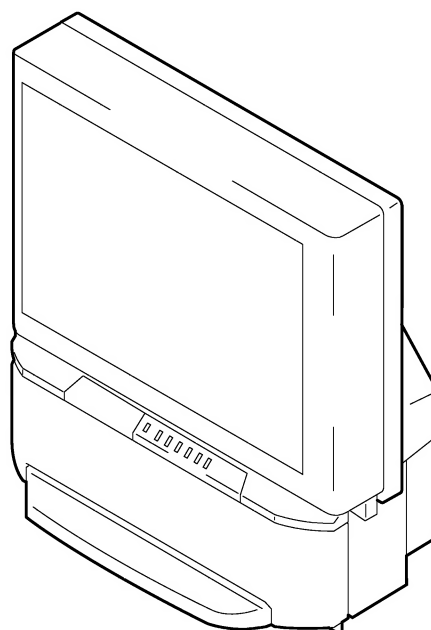

EXCEPT KP-43T75

* Please file according to model size. ☐

43 48 53 61

COLOR REAR VIDEO PROJECTOR
SONY®

SPECIFICATIONS

Projection system

3 picture tubes, 3 lenses, horizontal in-line system

Picture tube

7-inch high-brightness monochrome tubes (6.3 raster size),
with optical coupling and liquid cooling system

Projection lenses

High performance, large diameter hybrid lens F1.05

Television system

American TV standard

Channel coverage

VHF: 2–13/UHF: 14–69/CATV: 1 – 125

Antenna

75 ohm external terminal for VHF/UHF

Screen size (measured diagonally)

43 inches (KP-43T75)

48 inches (KP-48S75)

53 inches (KP-53S75/53N77)

61 inches (KP-61S75)

Inputs/outputs

VIDEO 1 IN

VIDEO 2 INPUT

S VIDEO IN (4-pin mini DIN):

Y: 1 Vp-p, 75-ohms unbalanced, sync negative

C: 0.286 Vp-p (Burst signal), 75 ohms

VIDEO (phono jack): 1 Vp-p, 75-ohms unbalanced, sync
negative

AUDIO (phono jacks): 500 mVrms (100% modulation),
Impedance: 47 kilohms

VIDEO 3 IN

S VIDEO IN (4-pin mini DIN):

Y: 1 Vp-p, 75-ohms unbalanced, sync negative

C: 0.286 Vp-p (Burst signal), 75 ohms

VIDEO (phono jack): 1 Vp-p, 75-ohms unbalanced, sync
negative

Y: 1 Vp-p, 75 ohms, sync negative

PB: 0.7 Vp-p, 75 ohms

PR: 0.7 Vp-p, 75 ohms

AUDIO (phono jacks): 500 mVrms (100% modulation),
Impedance: 47 kilohms

MONITOR OUT

VIDEO (phono jack): 1 Vp-p, 75-ohms unbalanced, sync
negative

AUDIO (phono jacks): 470 mVrms (100% modulation),
Impedance: 470 ohms

AUDIO (VAR/FIX) OUT (phono jacks): 500 mVrms
(100% modulation), Impedance: 470 ohms

CONTROL S OUT: minijack

Speaker

For KP-53N77

Tweeter: 66 mm (2 5/8") x 2

Woofer: 130 mm (5 1/8") x 2

Except for KP-53N77

100 mm (4") x 2

Speaker output

15W x 2 (Except for KP-53N77)

20 W x 2 (KP-53N77)

Power requirement

120 V AC, 60 Hz

Power consumption

In use (Max.): 160 W

In standby: 1 W

Dimensions (W/H/D)

965 x 1,058 x 510 mm (38 x 41 5/8 x 20 1/8 inches)
(KP-43T75)

1,105 x 1,338 x 579 mm (43 1/2 x 52 5/8 x 22 3/4 inches)
(KP-48S75)

1,216 x 1,417 x 632 mm (47 7/8 x 55 3/4 x 24 7/8 inches)
(KP-53S75)

1,216 x 1,417 x 632 mm (47 7/8 x 55 3/4 x 24 7/8 inches)
(KP-53N77)

1,370 x 1,560 x 670 mm (54 x 61 3/8 x 26 3/8 inches)
(KP-61S75)

Mass

64.6 kg (141 lbs 10 oz) (KP-43T75)

64 kg (141 lbs 2 oz) (KP-48S75)

67.6 kg (149 lbs) (KP-53S75)

75.2 kg (165 lbs 13 oz) (KP-53N77)

84.6 kg (186 lbs 8 oz) (KP-61S75)

Supplied accessories

Remote control RM-Y906 (1)

Batteries (2) size AA (R6)

Optional accessories

Connecting cables

RK-G34, RK-74A, RK-G69HG, VMC-10HG,

VMC-720M, VMC-810S/820S, YC-15V/30V

U/V mixer EAC-66

Design and specifications are subject to change without notice.

SAFETY CHECK-OUT

(US model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the condition of the monopole antenna (if any). Make sure the end is not broken off, and has the plastic cap on it. Point out the danger of impalement on a broken antenna to the customer, and recommend the antenna's replacement.
8. Check the B+ and HV to see they are at the values specified. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
9. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.



LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60-100 watts trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

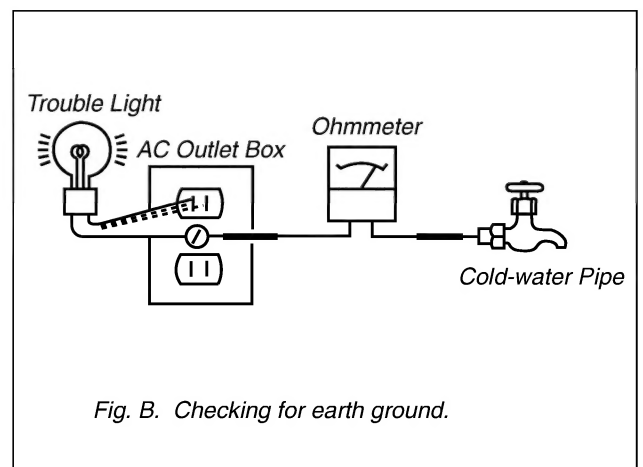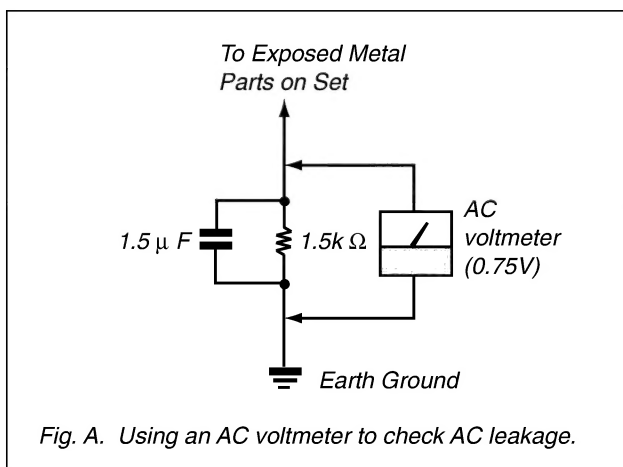

SELF DIAGNOSIS FUNCTION

1. Summary of Self-Diagnosis Function

- This device includes a self-diagnosis function.
- In case of abnormalities, the TIMER/STANDBY indicator automatically blinks. It is possible to predict the abnormality location by the number of blinks. The Instruction Manual describes blinking of the TIMER/STANDBY indicator.
- If the symptom is not reproduced sometimes in case of a malfunction, there is recording of whether a malfunction was generated or not. Operate the remote command to confirm the matter on the screen and to predict the location of the abnormality.

2. Diagnosis Items and Prediction of Malfunction Location


- When a malfunction occurs the TIMER/STANDBY indicator only blinks for one of the following diagnosis items. In case of two or more malfunctions, the item which first occurred blinks. If the malfunctions occurred simultaneously, the item with the lower blink count blinks first.
- The screen display displays the results regarding all the diagnosis items listed below. The display “0” means that no malfunctions occurred.

Diagnosis item	TIMER/STANDBY Indicator Number of blinks	Supposed malfunction	Condition	Self-diagnosis screen display, Diagnosis item: Results
• Power not ON	0	[Standby Power Supply System] F601 open. R607 open. Q601 short circuit [Main Power Supply System] IC601 and R612 are broken. VDR601 short-circuit	Cannot turn on the power. LED doesn't blink.	
+B OCP detection	2 times	Short circuit of power supply system in each circuit.	Goes to the standby mode Short circuit of +B line	2 : +B OCP 000
+B OVP detection	3 times	T603 pin 78 open. R672 open.	Goes to the standby mode Malfunction of power supply circuit	3 : +B OVP 000
Vertical deflection stop	4 times	IC1509(V out) is broken. Q1505(V Pulse Buffer) is broken.	Raster goes to one line horizontally. Aand then video signal is muted.	4 : V Stop 000
Video out abnormality detection	5 times	Video out, Q705, 732, 761 and others in C board circuit. Q218, 219, 220 (A board)	TIMER/STANDBY LED blinks approx. 30 seconds, and then blinks for the self diagnosis.	5 : AKB 000
Horizontal deflection stop	6 times	C515, 516 open. IC206(YC Jungle) is broken.	Raster doesn't appear.	6 : H Stop 000
Audio abnormality detection	8 times	IC406(Audio amp.) is broken. PS401, 402 open.	The sound is not out. Goes to the standby mode	8 : Audio 000

* : 000 the range of values for number of operations is 000-255. For 256 or higher there is no count up and the number remains at 255.

3. Blinking count display of TIMER/STANDBY indicator

* One blink is not used for self-diagnosis.

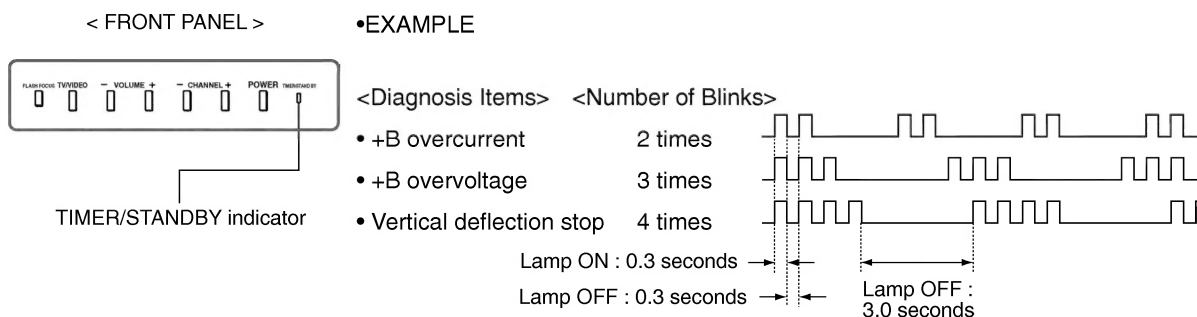

Release of TIMER/STANDBY indicator blinking.

 
- The TIMER/STANDBY indicator blinking display is released by turning OFF the power switch on the TV main unit or removing the plug from the power.

 
4. Self-diagnosis screen displays

- In cases of malfunctions where it is not possible to determine the symptom such as when the power goes off occasionally or when the screen disappears occasionally, there is a screen display on whether the malfunction occurred or not in the past (and whether the detection circuit operated or not) in order to allow confirmation.

<Screen Display Method>


- Quickly press the remote command button in the following order from the standby state.



Be aware that this differs from the method of entering the service mode (volume ).

Self-diagnosis screen display


Self Check		
2 : +B	OCP	000
3 : +B	OVP	000
4 : V	Stop	000
5 : AKB		000
6 : H	Stop	000
7 : HV		000
8 : Audio		000
101 : WDT		000

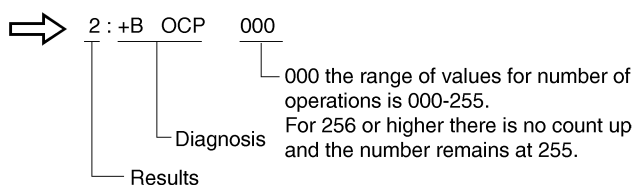

5. Self-Diagnosis Screen Display

- The results display is not automatically cleared. In case of repairs and after repairs, check the self-diagnosis screen and be sure to return the results display to “0”.
- If the results display is not returned to “0” it will not be possible to judge a new malfunction after completing repairs.
 
<Method of Clearing Results Display>

- Power off (Set to the standby mode)
- DISPLAY → Channel 5 → VOL  → POWER (Service Mode)
- Channel 8 → ENTER (Test reset = Factory preset condition)

<Method of Ending Self Diagnosis Screen>

- When ending the self-diagnosis screen completely, turn the power switch OFF on the remote commander or the main unit.

6. Self-diagnosis function operation

- OCP** Low B and +B line detect DET SHORT, and shut-down POWER ON RELAY.
Reset by turning power on/off.
In case of +B is loaded approx. 1.3A or more, microcomputer detects it via IC651.
- OVP** In case of +B becomes approx. 150V or more, POWER ON RELAY shuts down and microcomputer detects it via IC651.
Reset by turning power on/off just the same as OCP.
- V Stop** In case of microcomputer detects 2 seconds or more interval of V Pulse, Reference Pulse turns off by turning off the picture signal in YC Jungle IC (IC206).
After the picture signal turns off, V Pulse is regenerated 2 seconds or more, the picture signal turns on.
- AKB** IK detection. Makes LED blinking in case of microcomputer doesn't detect IK returns of IC206 CXA2147Q 30 seconds or more.
- H Stop** In case of HV becomes 33kV or more, IC502 detects it and shut-down H Drive Pulse.
Microcomputer receives H Stop data from IC206 and makes LED blinking.
- Audio** In case of DC component overlaps the output of Audio Amp., microcomputer detects it and makes LED blinking.
Microcomputer forces to shut down the power.

Self-diagnosis block diagram

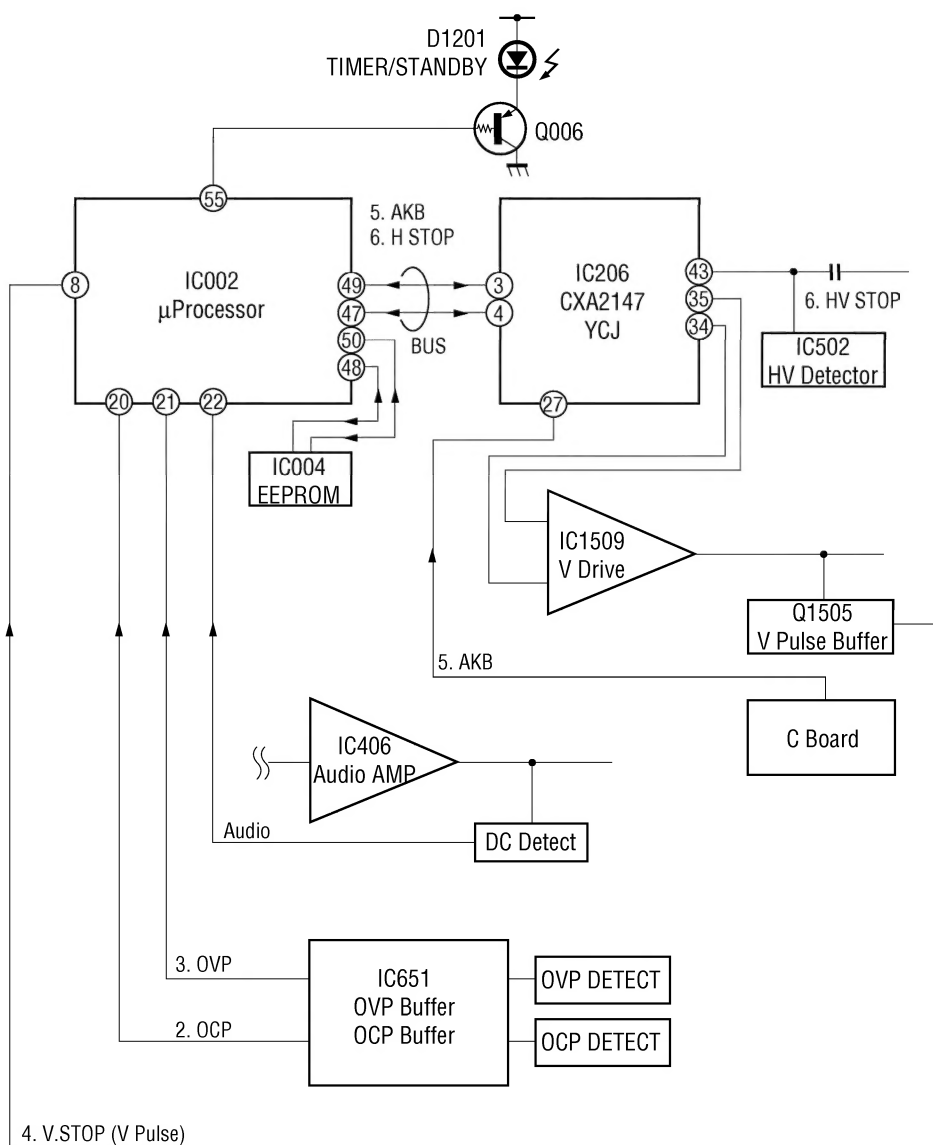


TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
	SELF DIAGNOSIS FUNCTION.....	4	5. CIRCUIT ADJUSTMENTS		
1. GENERAL			5-1.	TV Input Sub Contrast Adjustment (VPNT-SCON)	49
	Remote Control	9	5-2.	Video Input Sub-HUE and Sub-Color Adjustment (VPNT-SHUE, SCOL)	49
	Precautions	9	5-3.	Component Input Sub-HUE and SubColorAdjustment (DAC-UVSH, UVSC)	49
	Installing and Connecting the Projection TV	10	5-4.	P & P Sub Contrast Adjustment (SC-SYDR)	49
	Basic Set Up	15	5-5.	Sub-HUE, Sub-Color and Main Contrast Adjustment (MC-MYDR, MSHU, MSCL, SC-SSHU, SSCL)	50
	Using Your New Projection TV	16	5-6.	Bar Display Position Adjustment (OP-DISP)	50
	Adjusting Your SET UP (menus)	19	5-7.	PIP Position Adjustment (PI-PIPH, PIPV)	50
	Operating Video Equipment	30			
	Operating a Cable Box or Satellite Receiver (SAT)	31	6. DIAGRAMS		
	Troubleshooting	31	6-1.	Block Diagram (1)	51
2. DISASSEMBLY				Block Diagram (2)	53
	2-1. Rear Board Removal	33		Block Diagram (3)	59
	2-2. Chassis Assy Removal	33		Block Diagram (4)	63
	2-3. Service Position	33		Block Diagram (5)	65
	2-4. HA Board and HB Board Removal (Except KP-43T75)	33	6-2.	Frame Schematic Diagram	67
	2-5. HA Board and HB Board Removal(KP-43T75)	34	6-3.	Circuit Boards Location	70
	2-6. Mirror Cover Removal	34	6-4.	Printed Wiring Boards and Schematic Diagrams	70
	2-7. Beznet Assy Removal	34		• A (1/3)Board	71
	2-8. HC Board and S Board Removal	34		• A (2/3)Board	75
	2-9. A Board and G Board Removal	35		• A (3/3)Board	79
	2-10. Picture Tube Removal	35		• G Board	87
	2-11. High-Voltage Cable Installation and Removal	35		• CG Board	94
3. SET-UP ADJUSTMENTS				• CR Board	95
	3-1. Screen Voltage Adjustment (Coarse Adjustment)	36		• CB Board	95
	3-2. Screen (G2) Adjustment (Fine Adjustment)	36		• HA Board	97
	3-3. Deflection York Tilt Adjustment	36		• HC Board	97
	3-4. Focus Lens Adjustment	36		• HB Board	98
	3-5. Focus VR Adjustment	37	6-5.	Semiconductors	99
	3-6. 2-Pole Magnet Adjustment (Green, Red)	37			
	3-7. 4-Pole Magnet Adjustment	37	7. EXPLODED VIEWS		
	3-8. Defocus Adjustment (Blue)	37	7-1.	Cover (KP-43T75)	101
	3-9. Electrical Adjustment by Remote Commander	38	7-2.	Cover (KP-48S75)	102
	3-10. Registration Adjustment (PJE)	43	7-3.	Cover (KP-53N77/53S75/61S75)	103
	3-11. Auto Registration Error Code List	46	7-4.	Chassis (KP-43T75)	104
4. SAFETY RELATED ADJUSTMENTS			7-5.	Chassis (Except KP-43T75)	105
	4-1. HV Regulation Circuit Check and Adjustment	47	7-6.	Picture Tube	106
	4-2. HV Hold Down Circuit Operation and Adjustment ..	47	8. ELECTRICAL PARTS LIST		107
	4-3. +B Max Voltage Confirmation	47			
	4-4. +B OVP Confirmation	48			

(CAUTION)


SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.

THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

(ATTENTION)


APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION!!

AFIN D'EVITER TOUT RISQUE DE ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DEPANNAGE.

LE CHÂSSIS DE CE RECEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS À LA
SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MAPQUE  SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIÈCES CONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÈCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.


SECTION 1

GENERAL

The operating instructions mentioned here are partial abstracts from the Operating Instructions Manual. The page numbers of the Operating Instruction Manual remain as in the manual. (Part no : 4-077-171-11)

Remote Control

In the instructions that follow, we will refer to the buttons on your remote control. Keep this flap unfolded and use this page for reference.

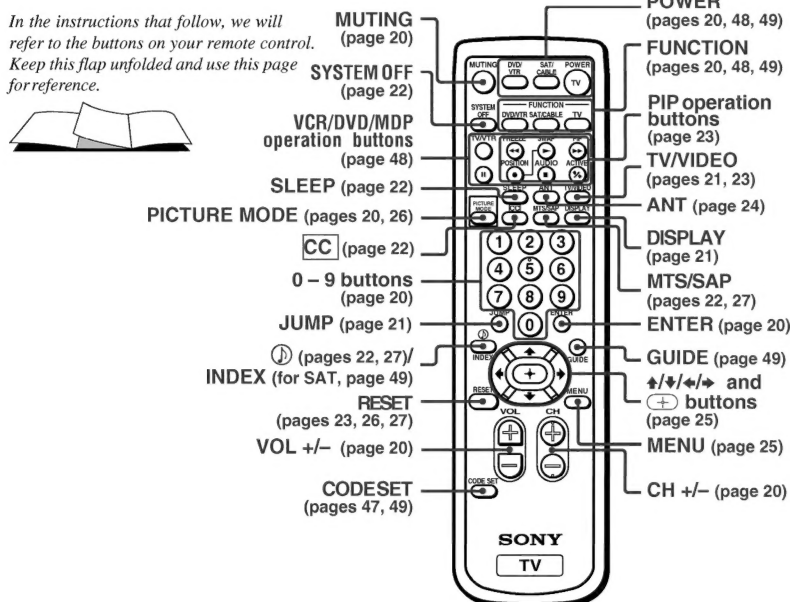

Getting to know the buttons on the remote control

Names of the buttons on the remote control are presented in different colors to represent the available functions.

Button color

Transparent Press to select the component you want to control; e.g. VTR (VCR)/MDP/DVD Player, SAT (satellite receiver)/CABLE, or projection TV.

Green Buttons relevant to power operations, like turning the projection TV, SAT/CABLE, or VTR (VCR)/MDP/DVD Player on or off

Label color

White TV/VTR (VCR)/MDP/DVD Player/SAT (satellite receiver)/CABLE operation buttons

Yellow PIP operation buttons

Blue SAT operation buttons

Green S-Link operation buttons

Pink DVD Player operation buttons

For a detailed explanation of most buttons, see "Watching the TV" on page 20.

Precautions

Safety

- Operate the projection TV only on 120 V AC.
- The plug is designed, for safety purposes, to fit into the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- If any liquid or solid object should fall inside the cabinet, unplug the projection TV immediately and have it checked by qualified service personnel before operating it further.
- If you will not be using the projection TV for several days, disconnect the power by pulling the plug itself. Never pull on the cord.

Note on cleaning

Clean the cabinet of the projection TV with a dry soft cloth. To remove dust from the screen, wipe it gently with a soft cloth. Stubborn stains may be removed with a cloth slightly dampened with solution of mild soap and warm water. Never use strong solvents such as thinner or benzine for cleaning.

If the picture becomes dark after using the projection TV for a long period of time, it may be necessary to clean the inside of the projection TV. Consult qualified service personnel.

Installing

- To prevent internal heat buildup, do not block the ventilation openings.
- Do not install the projection TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.
- Avoid operating the projection TV at temperatures below 5° C (41° F).
- If the projection TV is transported directly from a cold to a warm location, or if the room temperature changes suddenly, the picture may be blurred or show poor color. In this case, please wait a few hours to let the moisture evaporate before turning on the projection TV.
- To obtain the best picture, do not expose the screen to direct illumination or direct sunlight. It is recommended to use spot lighting directed down from the ceiling or to cover the windows that face the screen with opaque drapery. It is desirable to install the projection TV in a room where the floor and walls are not of a reflective material.

Installing and Connecting the Projection TV

Carrying Your Projection TV


Carrying the projection TV requires three or more people.

For KP-48S75/53S75/53N77/61S75


The projection TV has been equipped with casters for easy movement on a hard surface. Please move your projection TV using the casters.

Installing the Projection TV

Recommended viewing area (Horizontal)

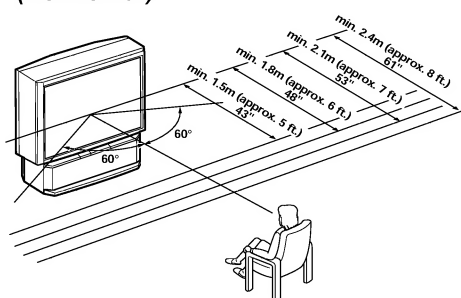

Recommended viewing area (Vertical)

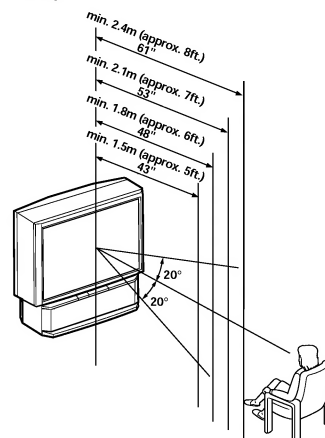

7

Installing and Connecting the Projection TV (continued)

 
Connector Types

You may find it necessary to use some of the following connector types during set up.

Coaxial cable

Standard TV cable and antenna cable

Plug Type



Push into connection.

Screw-on Type



Screw into connection.

S Video cable

High quality video cable for enhanced picture quality



Align guides and push into connection.

Audio/Video cable



Push into connection.

Video - Yellow
Audio (Left) - White
Audio (Right) - Red

Some DVD Players and DTV Receivers are equipped with the following three video connectors.

Y - Green
Pb (Cb, Cb or B-Y) - Blue
Pr (Cr, Cr or R-Y) - Red

CONTROL S cable


Sony cable for CONTROL S connection. This feature is exclusive to Sony products and allow greater control of all Sony equipment.



Push into connection.

About the CONTROL S OUT jack


To control other Sony equipment with the projection TV's remote control, connect the CONTROL S IN jack of the equipment to the CONTROL S OUT jack on the projection TV with the CONTROL S cable.

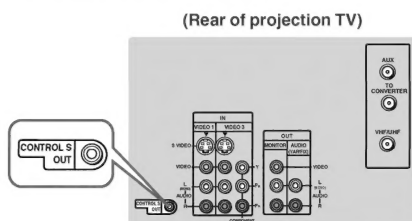


Making Connections

Connecting directly to a cable or an antenna


The connection you choose will depend on the cable found in your home. Newer homes will be equipped with standard coaxial cable (see **A**); older homes will probably have 300-ohm twin lead cable (see **B**); still other homes may contain both (see **C**). Use 75-ohm coaxial cable for improved picture quality (see **A**).

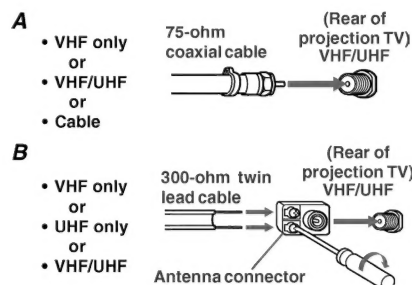

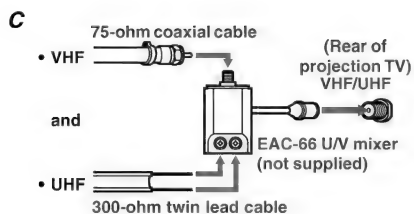


Cable or antenna

 This is the simplest connection. Connection is made directly from the cable or antenna to the projection TV.



Cable and antenna

You may find it convenient to use the following set up if your cable provider does not feature local channels that you are able to receive using an antenna.

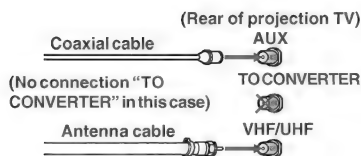


Select Cable or ANT mode by pressing ANT on the remote control.

Connecting a cable box


Some pay cable TV systems use scrambled or encoded signals that require a cable box* to view all channels.

Also, set "Cable" to "On" in the Channel Set Up menu (page 31).

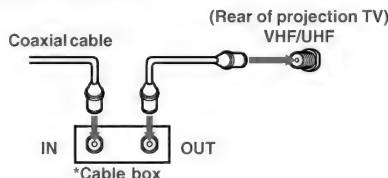

Cable box and cable

Some pay cable TV systems use scrambled or encoded signals requiring a cable box* only for certain channels (e.g. HBO, SHOWTIME, etc.)

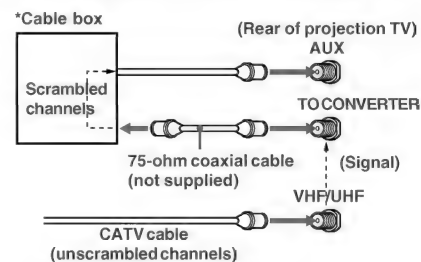

For this set up, you can switch between scrambled channels (through your cable box), and normal (CATV) channels by pressing ANT on your remote control.

Notes:

- You may be able to program your Sony remote control to operate your cable box. (see "Operating a Cable Box or Satellite Receiver (SAT)" on page 49)
- During PIP or Favorite Channel viewing, the AUX input can only be viewed in the main picture.

9

Installing and Connecting the Projection TV (continued)

Connecting a cable TV system/ antenna to a VCR



- 1 Attach the coaxial cable from the incoming cable connection or antenna to VHF/UHF IN on the VCR.
- 2 Using a coaxial cable, connect VHF/UHF OUT on the VCR to VHF/UHF on the projection TV.
- 3 Using AUDIO and S VIDEO* cables, connect AUDIO and S VIDEO OUT on the VCR to AUDIO and S VIDEO IN on the projection TV (White-AUDIO Left, Red-AUDIO Right**).

Connecting a VCR and projection TV to a cable box

- 1 Connect the single (input) jack of the splitter to the incoming cable connection, and connect the other two (output) jacks (using the coaxial cable) to IN on the cable box and VHF/UHF on the projection TV.
- 2 Using a coaxial cable, connect OUT on the cable box to VHF/UHF IN on the VCR.
- 3 Using AUDIO and S VIDEO* cables, connect AUDIO and S VIDEO OUT on the VCR to AUDIO and S VIDEO IN on the projection TV (White-AUDIO Left, Red-AUDIO Right**).

10

Disconnect all power sources before making any connections.
(Rear of projection TV)

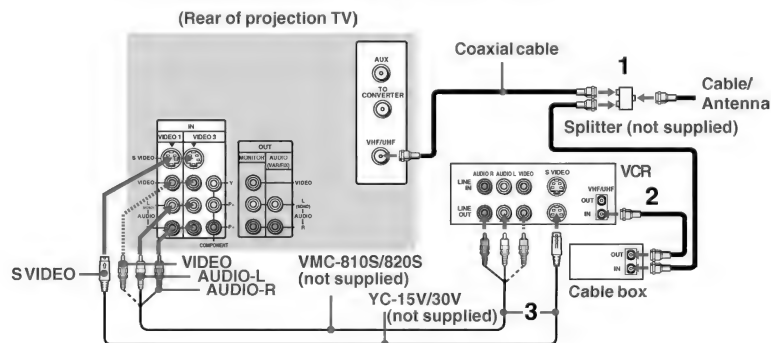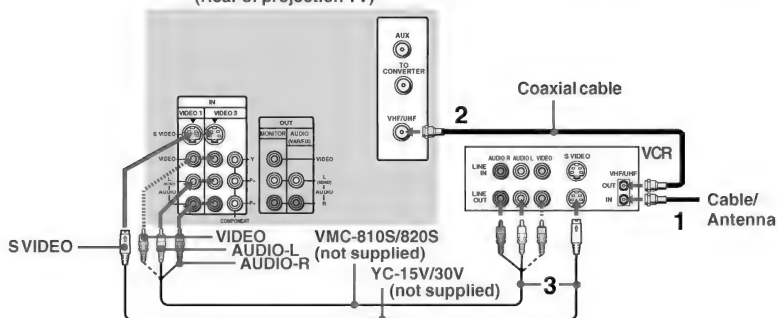

Note:


- To view scrambled channels through the cable box, select the video input which the cable box is connected to by pressing TV / VIDEO.
- * If your VCR is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.
- ** If you are connecting a monaural VCR, connect only the single audio output to the left (MONO) input on the projection TV.

Connecting a satellite receiver (SAT)

- 1 Connect the cable from the satellite antenna to the satellite receiver.
- 2 Attach the coaxial cable from the incoming cable connection or antenna to VHF / UHF IN on the projection TV.
- 3 Using AUDIO and S VIDEO cables, connect AUDIO and S VIDEO OUT on the satellite receiver to AUDIO and S VIDEO IN on the projection TV (White-AUDIO Left, Red-AUDIO Right).

Note:

- To view input from the satellite receiver, select the video input which the satellite receiver is connected to by pressing TV / VIDEO on the remote control.

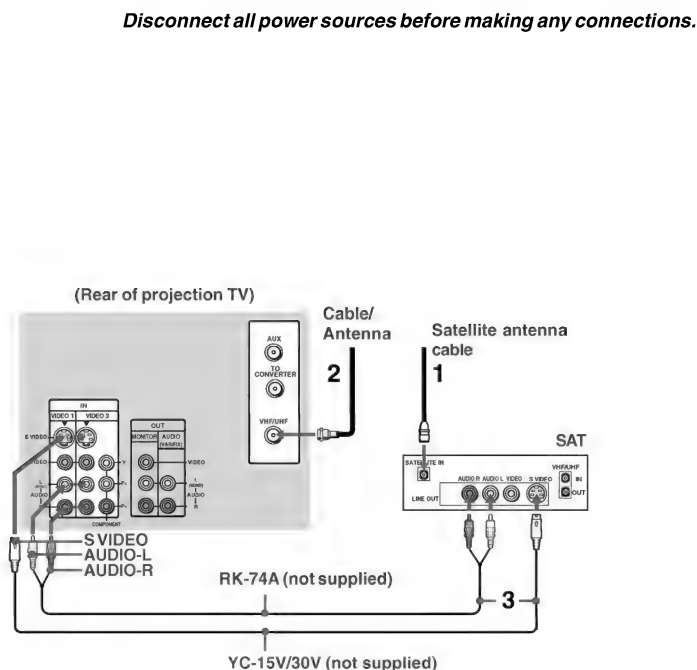

11


Installing and Connecting the Projection TV (continued)**Connecting a satellite receiver (SAT) and a VCR***Disconnect all power sources before making any connections.*

- 1 Connect the cable from the satellite antenna to the satellite receiver.
- 2 Attach the coaxial cable from the incoming cable connection or antenna to VHF / UHF IN on the VCR.
- 3 Using a coaxial cable, connect VHF / UHF OUT on the VCR to VHF / UHF IN on the projection TV.
- 4 Using AUDIO and S VIDEO* cables, connect AUDIO and S VIDEO OUT on the satellite receiver to AUDIO and S VIDEO IN on the VCR.
- 5 Using AUDIO and S VIDEO* cables, connect AUDIO and S VIDEO OUT on the VCR to AUDIO and S VIDEO IN on the projection TV (White-AUDIO Left, Red-AUDIO Right).

*If your VCR is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.

Note:

- To view input from the satellite receiver or VCR, select the video input which your satellite receiver or VCR is connected to by pressing TV / VIDEO on the remote control.

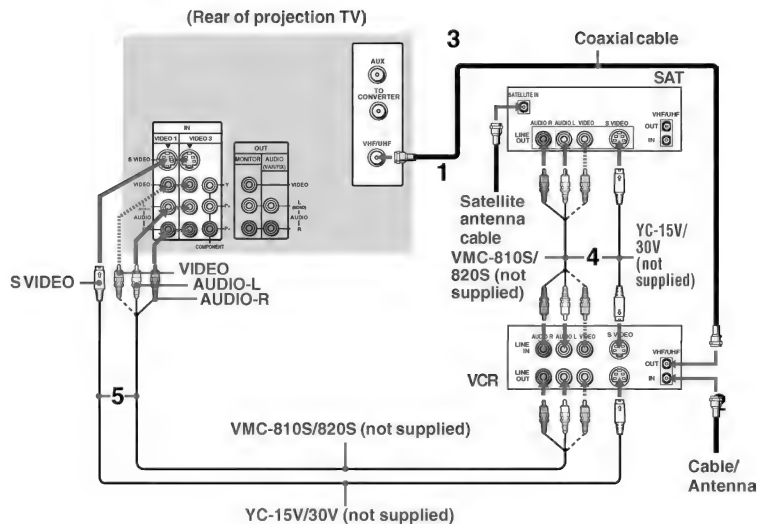

12

Connecting a DTV (digital television) receiver

Before connecting, be sure to read the Operating Instructions of the DTV receiver.

- 1 Attach the coaxial cable from the roof antenna to VHF/UHF IN (DTV) on the DTV receiver.
- 2 Using AUDIO and S VIDEO cables, connect AUDIO and S VIDEO OUT on the DTV receiver to AUDIO and S VIDEO IN on the projection TV (White-AUDIO Left, Red-AUDIO Right).

Note:

- If your DTV receiver supports 480i signal from YPbPr, you can connect Y, Pb and Pr of VIDEO OUT on the DTV receiver to Y, Pb and Pr of VIDEO 3 IN on the projection TV using VIDEO cables.



Connecting a camcorder

Use this connection to view a picture directly from your camcorder.

- 1 Using AUDIO and S VIDEO* cables, connect AUDIO and S VIDEO OUT on the camcorder to AUDIO and S VIDEO IN inside the drop-down panel on the front of the projection TV (White-AUDIO Left, Red-AUDIO Right**).
- 2 Press VIDEO 2 to select the video inputs from a camcorder.

* If your camcorder is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.

** If you are connecting a monaural camcorder, connect only the single audio output to the left (MONO) input on the projection TV.

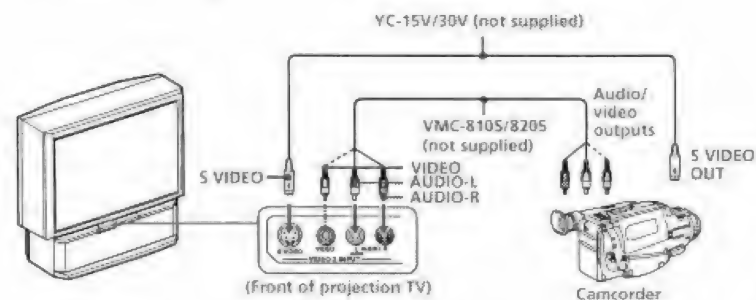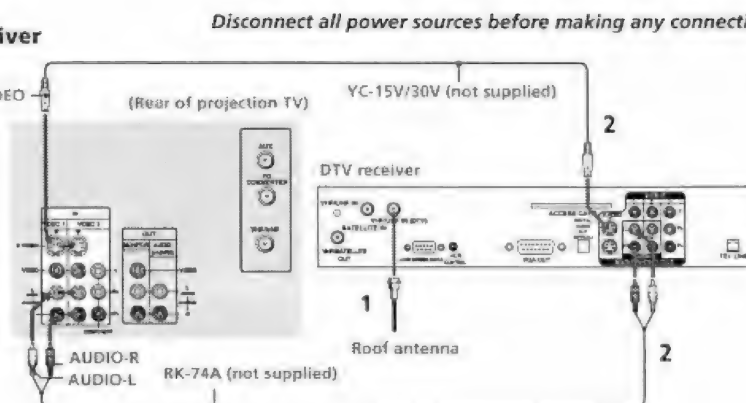

13

Installing and Connecting the Projection TV (continued)

Connecting two VCRs for tape editing


Disconnect all power sources before making any connections.

By connecting a second VCR to MONITOR OUT, you can record a program being played by the primary VCR to the second VCR or perform tape editing and dubbing.

- 1 Connect the VCR intended for playback using the connection instructions on page 6 of this manual.
- 2 Using an AUDIO/VIDEO cable, connect AUDIO and VIDEO IN on the VCR intended for recording to AUDIO and VIDEO OUT of MONITOR OUT on the projection TV.

Notes:

- Do not change the input signal while editing through MONITOR OUT.
- When connecting a single VCR to the projection TV: if VCR LINE OUT is connected to VIDEO IN on the projection TV, **do not** connect MONITOR OUT on the projection TV to the VCR LINE INPUT (see right). Doing so will cause program interference and other viewing problems.

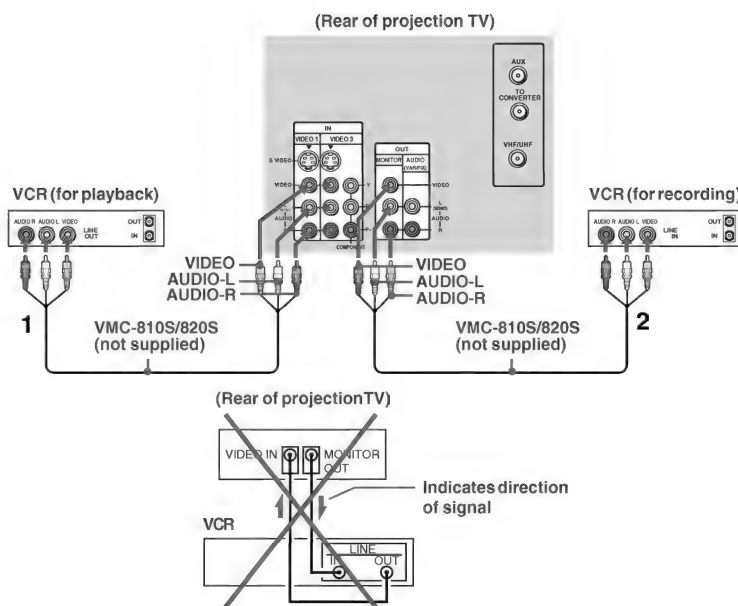

14

Connecting a DVD Player (Upper illustration)


Using an AUDIO and S VIDEO cables, connect AUDIO and S VIDEO IN on the projection TV to AUDIO and S VIDEO OUT on the DVD Player (White-AUDIO Left, Red-AUDIO Right).

Connecting a DVD Player with component video output connectors (Lower illustration)

- 1 Using an AUDIO cable, connect AUDIO of LINE OUT on the DVD Player to AUDIO of VIDEO 3 IN on the projection TV (White-AUDIO Left, Red-AUDIO Right).
- 2 Using three yellow VIDEO cables, connect Y, Pb, and Pr of COMPONENT VIDEO OUT on the DVD Player to Y, Pb, and Pr of VIDEO 3 IN on the projection TV.

Notes:

- Since the high quality pictures on a DVD disc contain a lot of information, picture noise may appear. In this case, adjust "Noise Reduction" in the Video menu. (see "Noise Reduction" on page 22)
- Some DVD Player terminals may be labeled differently. If so, connect as follows:
Connect Y (green) to Y.
Connect Pb (blue) to Cb, Cb or B-Y.
Connect Pr (red) to Cr, Cr or R-Y.

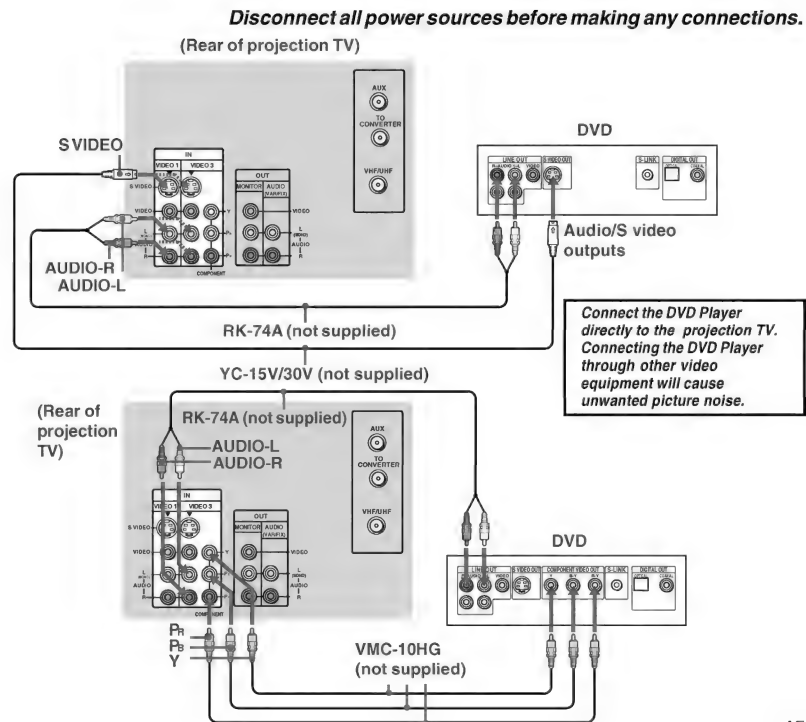

15

Installing and Connecting the Projection TV (continued)


Connecting an audio system

For more dynamic sound, connect an audio system to the projection TV.

- 1 Using an AUDIO cable, connect AUDIO (VAR/FIX) OUT on the projection TV to one of the unused Line inputs (e.g. Tape-2, AUX1, etc.) on the stereo.
- 2 Set the stereo to the chosen Line input and use the Audio menu to set the audio output and switch the TV's speakers off. (see "Audio Out" and "Speaker" on page 28)

Note:

- You can adjust VOLUME, "Bass," "Treble," "Balance," "MTS/SAP" and "Effect" with the supplied remote control. The control items except VOLUME can be adjusted only when "Audio Out" is set to "Variable" in the Audio menu. (see "Audio Out" on page 28)

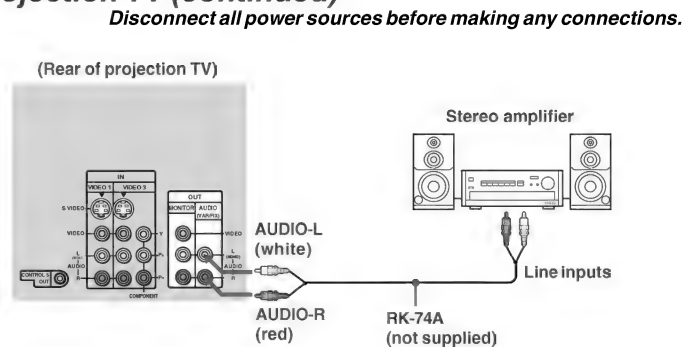


16

Connecting a Sony SAVA series speaker system

Use this connection to control the speaker's Dolby® Pro Logic surround system and super woofer mode with the remote control. (see "SAVA SP Control" on page 28)

- 1 Using the AUDIO cable supplied with the speaker to AUDIO (VAR/FIX) OUT on the projection TV.
- 2 Using the CONTROL S cable, connect CONTROL S IN on the speaker to CONTROL S OUT on the projection TV.

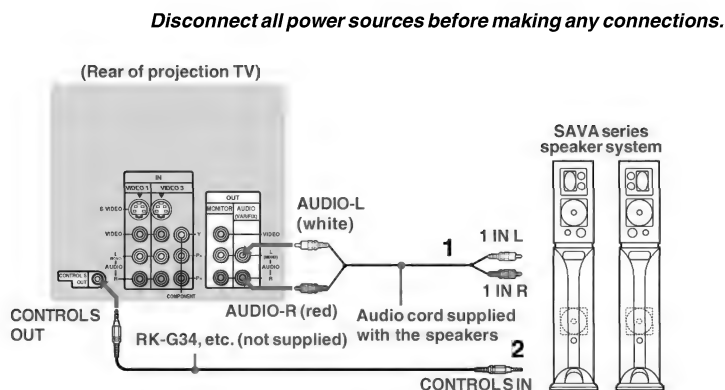

* Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under Canadian patent number 1,037,877. "Dolby," the double-D symbol and "Pro Logic" are trademarks of Dolby Laboratories Licensing Corporation.


17

Basic Set Up

Using the Remote Control

Inserting the batteries

Insert two size AA (R6) batteries (supplied) by matching the + and - on the batteries to the diagram inside the remote control's battery compartment.

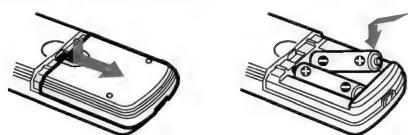

Notes:

- Remove the batteries to avoid damage from possible battery leakage whenever you anticipate that the remote control will not be used for an extended period.
- Handle the remote control with care. Avoid dropping it, getting it wet, or placing it in direct sunlight, near a heater or where the humidity is high.
- Your remote control can be programmed to operate most video equipment. (see "Operating Video Equipment" on page 47)

18

Setting Up the Projection TV Automatically

The AUTO SET UP feature will allow you to set the on-screen language and set all receivable channels.

The AUTO SET UP feature does not apply for installations that use a cable box for all channel selection.

You can also set up the projection TV manually. (see "Using the Channel Set Up menu" on pages 30 and 31)


Notes:

- Before you perform AUTO SET UP again, make sure that the input from ANT (not AUX) is selected by pressing ANT until "AUX" does not appear next to the channel number.
- Perform this function during the day, with the antenna and/or cable properly connected, to ensure that all available channels will be broadcasting and receivable.
- When you perform AUTO SET UP, all the settings in the Video, and Audio menus are reset to the factory settings.

Using the buttons on the front panel of the projection TV:





- 1 Press POWER to turn on the projection TV. The AUTO SET UP screen appears.

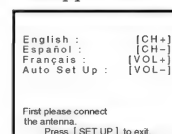


- 2 Press CHANNEL + to select English, CHANNEL - to select Español or VOLUME + to select Français.

 The screen will change to reflect your choice.

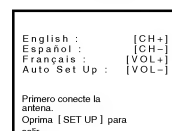

3 Press VOLUME – to continue.

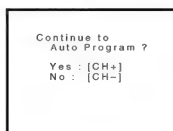


4 Press CHANNEL + to preset channels automatically.



“Auto Program” appears and the projection TV starts scanning and presetting channels automatically. While scanning, the received channel will be displayed on the sub screen. When all the receivable channels are stored, the lowest numbered channel is displayed.

 To perform AUTO SET UP again



Press SET UP inside the drop-down panel on the projection TV and perform steps 2-4 above.

Press SET UP again to exit.

Adjusting the Convergence Automatically (FLASH FOCUS)


The projection tube image appears on the screen in three layers (red, green and blue). If they do not converge, the color is poor and the picture blurs.

Before you use your projection TV, be sure to adjust the convergence.

The FLASH FOCUS feature allows you to adjust the convergence automatically.


Tips

- It is recommended to perform FLASH FOCUS about 30 minutes after the projection TV is first turned on.
- You can also perform FLASH FOCUS using the Set Up menu on page 31.

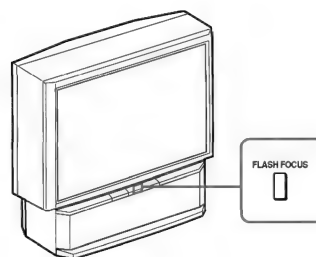

Press FLASH FOCUS.

The cross pattern appears and FLASH FOCUS begins to work. The adjustment is completed when the cross pattern becomes white.

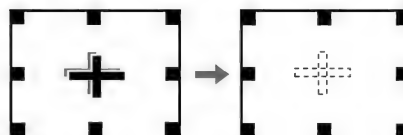

Note:

- FLASH FOCUS is canceled if you perform any other function while FLASH FOCUS is working.

19

Using Your New Projection TV

Watching the TV

Many TV features can be accessed directly through the remote control. The following chart will explain the function of some buttons found on your remote control.

Using the White Labeled Buttons for Projection TV Operations	
TV (FUNCTION)	Activates the remote control for use with the projection TV.
TV POWER	Turns the projection TV on and off. If a video input indication (e.g., VIDEO 1, VIDEO 2) appears on the screen, press TV/VIDEO until a channel number appears.
0-9 and ENTER	Use for direct channel selection. Press 0-9 to select a channel (for example, to select channel 10, press 1 and 0). The channel will change after 2 seconds, or you can press ENTER for immediate selection.
CH +/-	Press to scan through the channels (+ up or – down). Speed Surf 1 Press and hold CH + or – to change the channel number rapidly. 2 Release to display the desired channel.
VOL +/-	Press to adjust the volume (+ up or – down).
MUTING	Press to mute the sound. “Muting” will appear on the screen and will dim three seconds later. To restore sound, press again or press VOL +.

PICTURE MODE

Press PICTURE MODE repeatedly to directly choose one of five different video modes that best suits the program you are watching.

Vivid: Select for enhanced picture contrast and sharpness.

Standard: Select to display a standard picture for normal viewing environments.

Movie: Select to display a finely detailed picture for low light environments.

Personal 1, Personal 2: Select to customize the “Picture Adjustment” of the Video menu according to your personal preference.

When you select “Movie,” “Personal 1” and “Personal 2,” you can also perform the “Picture Adjustment” (such as “Brightness,” “Color,” etc.) to suit your taste. For details, see “Mode” on page 26.

20

Using the White Labeled Buttons for Projection TV Operations	
TV/VIDEO	Press repeatedly to scroll through available video inputs: TV, VIDEO 1, VIDEO 2 and VIDEO 3 . If you select "Skip" as a "Video Label" in the Set Up menu, your projection TV will skip the video input you selected. (see "Video Label" on page 35)
JUMP	Press to alternate or <i>jump</i> back and forth between two channels. The projection TV will jump between the current channel and the last channel selected using the 0-9 buttons.
FREEZE (yellow labeled button)	This is useful when you need to copy down information that appears on the TV's screen. Press to <i>freeze</i> the desired picture. The frozen picture is displayed in the window picture while viewing the normal picture of the current channel in the main picture. <div data-bbox="402 792 892 922" data-label="Image"> <p>The diagram shows a rectangular frame representing the TV screen. Inside, there's a larger area labeled 'Normal motion picture' showing a cake. In the bottom right corner of this area, there's a smaller rectangular window labeled 'Frozen picture' which also shows the same cake. A small number '6' is in the top right corner of the main frame.</p> </div> <p>To change the location of the window picture, press \blacktriangle, \blacktriangledown, \blacktriangleleft or \blacktriangleright. Press FREEZE again to display the normal picture.</p>
DISPLAY	Press to display the channel number, current time, channel caption (if set), and MTS/SAP mode (if SAP is selected). The SAP indication disappears and the other indications dim three seconds later. To turn the display off, press DISPLAY again.



(continued)



REFER TO THE
ILLUSTRATION OF THE
REMOTE CONTROL ON THE
INSIDE FRONT COVER OF
THIS MANUAL AS YOU
REVIEW THIS CHART

21

Using Your New Projection TV (continued)

Using the White Labeled Buttons for Projection TV Operations	
	Press repeatedly to scroll through available displays: XDS (Extended Data Service) Displays a network name, program name, program type, program length, program description, call letters and time of the show if the broadcaster offers this service. Caption Vision Displayed on the screen if the broadcaster offers this service. (see "Caption Vision" on page 34) No display "Off" appears and the display is canceled.
SLEEP	Press repeatedly until the projection TV displays the approximate time in minutes (30, 60, or 90) that you want the projection TV to remain on before shutting off automatically. Cancel by pressing until "Sleep Off" appears.
ANT (AUX input)	Press to change between the VHF/UHF input and the AUX input. (for detailed connection information, see "Cable and antenna" or "Cable box and cable" on page 9)
MTS/SAP	Press to scroll through the Multi-channel TV Sound (MTS) options: Stereo, SAP, Mono and Auto SAP . (see "MTS/SAP" on page 27)
	Press to select an audio option: Simulated, Surround, BBE and Effect Off . (see "Effect" on page 27)
TV/VTR	Press when you are finished using a VCR and you want to switch to the TV input. The VCR power will remain on.
SYSTEM OFF	Press to turn off the projection TV and all other Sony equipment.

22




REFER TO THE
ILLUSTRATION OF THE
REMOTE CONTROL ON THE
INSIDE FRONT COVER OF
THIS MANUAL AS YOU
REVIEW THIS CHART

Watching Two Programs at One Time — PIP

The Picture-in-Picture (PIP) feature allows you to view two channels simultaneously, one in the full size “main” picture and one in a smaller “window” picture.

You can move the window picture to any location on the screen.

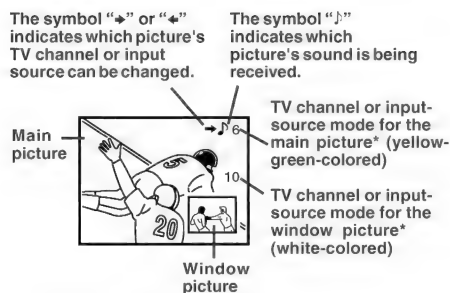

* It will dim in about 3 seconds.

Tip

If you press **RESET** in PIP mode, the window picture will move to the bottom right (factory-preset location).

Using the Yellow Labeled Buttons for PIP Operations

PIP 	Press to display a window picture. Each time you press this button, the picture size will change (1/9 → 1/16 → no display). To close the window picture, press PIP repeatedly until it disappears.
POSITION or 	Press POSITION repeatedly to change the location of the window picture (counterclockwise) around the main picture. You can also change the location by pressing the , , , or button. The window picture moves in the direction of the arrow indicated on the pressed button.
ACTIVE 	Press to select either the main or window picture in order to change the TV channel or video source using the white labeled buttons below. The symbol “1” (or “2”) will appear to indicate which picture's channel or input mode can be changed.
TV/VIDEO (white labeled button)	Press repeatedly to scroll through the available video inputs for the picture on which the symbol “1” (or “2”) is displayed. (see “TV/VIDEO” on page 21)

23

Using Your New Projection TV (continued)

Using the Yellow Labeled Buttons for PIP Operations

CH or JUMP and ENTER (white labeled button)	Press to select the TV channel on which the symbol “1” is displayed. (for details, see “Watching the TV” on page 20) Speed Surf 1 Press and hold CH + or – to change the channel number rapidly. 2 Release to display the desired channel.
ANT (white labeled button)	Press to change between the VHF/UHF input and the AUX input for the picture on which the symbol “1” (or “2”) is displayed.
AUDIO 	Press to alternate sound between the main picture and the window picture. The symbol “1” will appear for a few seconds to indicate which picture's sound is being received.
FREEZE 	This is useful when you need to copy down information of the main picture. Press to freeze the desired scene in the main picture. The frozen picture is displayed in the window picture while viewing the normal picture in the main picture. The window picture size is automatically changed to 1/9 if it was 1/16. Press again to resume normal PIP viewing.
SWAP 	Press to switch the audio and video of the main picture and the window picture. Each time you press SWAP, the picture and sound of the two will be exchanged.



REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART

Note:

- If one of the pictures received through PIP is snowy, the entire screen may become unstable. In this case, erase the snowy channel. (see “Channel Skip/Add” on page 31)

24

Adjusting Your SET UP (menus)

Learning Menu Selection


Use the MENU button to access a menu and use the \uparrow , \downarrow , \leftarrow , \rightarrow and \oplus buttons to alter the settings. Use the following example to learn how to modify settings.

- 1 Press the MENU button.

The main menu appears.




- 2 Press \uparrow or \downarrow to highlight the desired menu and press \oplus to activate it.

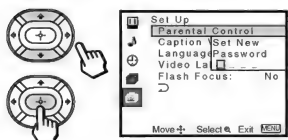

You may also press \rightarrow to activate your selection.

- 3 Press \uparrow or \downarrow to highlight the desired option.

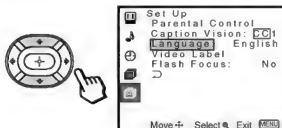


- 4 Press \oplus .

Options for your selection (Pop-up menu or Adjusting menu) will be displayed.



- 5 Press \uparrow or \downarrow to make your selection and press \oplus to activate it. The previous screen will reappear.

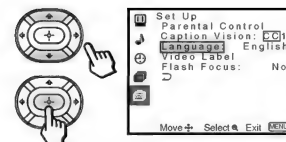

Some adjustment menus may require further operations. For details, see each menu option.

To return to the previous screen (except for the slider adjustment menus), choose " \rightarrow " at the bottom of the menu and press \oplus or \leftarrow .

- 6 Once you have completed all menu corrections, press MENU to exit the menu screens.



To exit from the menus at any time

Press MENU.


Tip

You can also use the MENU, \uparrow/\downarrow and \leftarrow/\rightarrow buttons inside the front drop-down panel of the projection TV for the menu selection.

25

Adjusting Your SET UP (menus) (continued)

Using the Video Menu

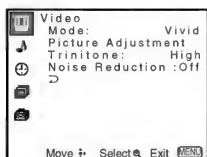

For detailed information on using the remote control to modify menu settings, refer to "Learning Menu Selection" on page 25.

To select the Video menu:

Display \rightarrow Highlight \oplus \rightarrow Select




To restore the factory settings

Press RESET on the remote control while the Video menu is selected. To restore each "Mode" to the factory setting, press RESET after selecting the mode to be reset.

Mode <i>Customized picture viewing</i>	<p>You can choose one of five different video modes that best suits the program you are watching. You can also perform the "Picture Adjustment" (such as "Brightness," "Color," etc.) for "Movie," "Personal 1" or "Personal 2" to suit your taste.</p> <p>Vivid: Select for enhanced picture contrast and sharpness.</p> <p>Standard: Select to display a standard picture for normal viewing environments.</p> <p>Movie: Select to display a finely detailed picture for low light environments.</p> <p>Personal 1, Personal 2: Select to customize the "Picture Adjustment" of the Video menu according to your personal preference.</p> <p>Press PICTURE MODE on the remote control for direct selection of a "Mode" setting.</p>
Picture Adjustment <i>Picture adjustment</i>	<p>First select "Movie," "Personal 1" or "Personal 2" from "Mode," then highlight the desired option using the \uparrow or \downarrow button and press \oplus to display the adjusting slider of the selected option.</p> <p>Picture: Adjust slider right (up) to increase picture contrast; left (down) to decrease it.</p> <p>Brightness: Adjust slider right (up) to brighten the picture; left (down) to darken it.</p> <p>Color: Adjust slider right (up) to increase color intensity; left (down) to decrease it.</p> <p>Hue: Adjust slider right (up) to increase the green tones; left (down) to increase the red tones.</p> <p>Sharpness: Adjust slider right (up) to sharpen the picture; left (down) to soften it.</p>
Trinitone <i>White intensity adjustment</i>	<p>High: Select to give the white colors a blueish tint.</p> <p>Medium: Select to give the white colors a neutral tint.</p> <p>NTSC Standard: Select to give the white colors a reddish tint.</p>
Noise Reduction <i>Noise reduction</i>	<p>Select On to reduce picture noise.</p> <p>Select Off to cancel the feature.</p> <p>"Noise Reduction" can be set separately from the "Mode" settings of the Video menu.</p>

26

Using the Audio Menu

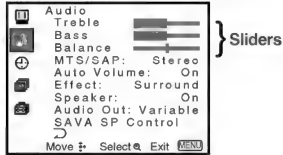

For detailed information on using the remote control to modify menu settings, refer to "Learning Menu Selection" on page 25.

To select the Audio menu:

Display → Highlight → Select



To restore the factory settings

Press RESET on the remote control while the Audio menu is selected.

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE symbol are the trademarks of BBE Sound, Inc.

Treble <i>Sound adjustment</i>	Adjust slider right (up) to increase high pitched sounds. Adjust slider left (down) to decrease high pitched sounds.
Bass <i>Sound adjustment</i>	Adjust slider right (up) to increase low pitched sounds. Adjust slider left (down) to decrease low pitched sounds.
Balance <i>Sound adjustment</i>	Adjust slider right (up) to emphasize right speaker volume. Adjust slider left (down) to emphasize left speaker volume.
MTS/SAP <i>Enjoy stereo, bilingual and mono programs.</i>	When the sound is intermittent due to poor reception conditions, select "Stereo" or "SAP." Stereo: Select for stereo reception when viewing a program broadcast in stereo. SAP: Select to listen to a bilingual broadcast. (non-SAP programs will be muted when this feature is selected) Mono: Select for mono reception. (use to reduce noise during stereo broadcasts) Auto SAP: Select to listen to SAP when a SAP program is broadcast and return to stereo reception automatically for non-SAP programs. Quick MTS access: Press on the remote control to cycle through the "MTS/SAP" options as follows: Stereo → SAP → Mono → Auto SAP.
Auto Volume <i>Adjust the sound level.</i>	On: Sound output coming from TV speakers have the volume level equalized for all channel audio inputs when broadcasts have different sound transmission levels. Off: Sound output coming from the TV speakers varies according to the received channel.
Effect <i>Customizes surround sound effects based on the program's audio type.</i>	"Effect" can only be set when "Speaker" is set to "On" or "Off." Simulated: Adds a surround-like effect to mono programs. Surround: Simulates sound with the atmosphere of a movie theater or a concert hall for stereo programs. BBE*: Centers the sound intensity to the front, creating an effect as if you were seated in front of an orchestra. Off: Normal stereo or mono reception. Quick Effect access: Press on the remote control to cycle through the "Effect" options as follows: Simulated → Surround → BBE → Effect Off.

(continued) 27

Adjusting Your SET UP (menus) (continued)

Speaker <i>Custom selection of audio output source</i>	On: Select to listen to the sound from the projection TV speakers alone. Off: Select to turn off the projection TV speakers and listen to the projection TV's sound only through an external audio system's speakers. SAVA SP: Select to turn off the projection TV speakers and listen to the projection TV's sound only through the Sony SAVA series speaker system. You can adjust volume, muting, "Surround Mode," and "Super Woofer Mode" with the projection TV's remote control. (see "SAVA SP Control" below)
Audio Out <i>Easy control of volume adjustment</i>	"Audio Out" can only be set when "Speaker" is set to "Off." Fixed: Sound output is held at a fixed level through the audio system. Use the AV receiver's remote control to adjust the volume. Variable: Sound output varies according to the TV settings. Useful when you want to use your remote control to control the output of a separate audio system.
SAVA SP Control <i>Controls Sony SAVA speaker's mode.</i>	"SAVA SP Control" can only be set when Sony SAVA speaker system is connected to the AUDIO (VAR/FIX) OUT connectors and "Speaker" is set to "SAVA SP." (see "Speaker" above) You can also adjust the SAVA speaker's volume using VOL +/- of the projection TV's remote control. Surround Mode: Select to activate the SAVA Speaker's surround mode. Super Woofer Mode: Select to activate the SAVA Speaker's super woofer mode.

⌚ Using the Timer Menu



After setting the clock you can use the timer to turn the projection TV on and off.

For detailed information on using the remote control to modify menu settings, refer to "Learning Menu Selection" on page 25.

To select the Timer ⌚ menu:

Display → Highlight → Select



Tip 💡


Set daylight saving time before setting the clock. Any loss of power will cause these settings to be erased.

Daylight Savings <i>Automatically adjusts the time.</i>	Spring: Select Yes to compensate for Daylight Saving Time. The current time automatically moves ahead one hour. Fall: Select No at the end of Daylight Saving Time. The current time moves back one hour.
Current Time <i>Necessary for the Timer.</i>	<ol style="list-style-type: none"> Press (+), then press ▲ or ▼ until the current day (Sun-Sat) is displayed, and press (+). Press ▲ or ▼ until the current hour (1-12) and AM/PM is displayed, and press (+). Press ▲ or ▼ until the current minute (00-59) is displayed, and press (+). The clock has now started. Press MENU to exit.
On/Off Timer <i>Wake up or scheduled viewing.</i>	<ol style="list-style-type: none"> Press ▲ or ▼ until the desired day or range of days (Every Sun-Sat, Every Mon-Fri, Sunday, Monday, ... Saturday, Every Sunday, ... Every Saturday) is displayed, and press (+). Press ▲ or ▼ until the time (hours and minutes) that you want the projection TV to remain on is displayed, and then press (+). Press ▲ or ▼ to set the time duration (maximum of 6 hours) and press (+). Press ▲ or ▼ to select the desired channel and press (+). The timer is now set. The TIMER/STAND BY indicator on your projection TV will be lit. Press MENU to exit. To cancel your timer setting, press RESET while in the On/Off Timer window. Performing Auto Program will erase all Timer settings.

29

📺 Adjusting Your SET UP (menus) (continued)

📺 Using the Channel Set Up Menu

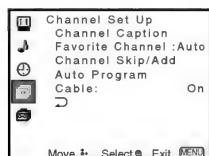

For detailed information on using the remote control to modify menu settings, refer to "Learning Menu Selection" on page 25.

To select the Channel Set Up 📺 menu:

Display → Highlight → Select



Channel Caption <i>Easy recognition of the channel you are watching</i>	You can add a caption for up to 32 channels of VHF/UHF input. With the Channel Caption window open: <ol style="list-style-type: none"> Press (+) and then press ▲ or ▼ to select the desired channel. You can view the channel that is selected with the Channel Caption menu in the sub screen. Press (+). Press ▲ or ▼ to display the first letter or number of the caption and press (+) to select it. Repeat until up to five digits are selected. Press (+). To erase a caption, press RESET.
Favorite Channel <i>User's favorite channels</i>	The Favorite Channel feature enables easy access to the eight channels that you preset (or the last channel that you were watching). (for details on how to set up this feature, see "Setting and Selecting Favorite Channel" on page 32)

30

Channel Skip/Add <i>Skips unnecessary channels.</i>	<p>After AUTO SET UP, you can erase unnecessary channels from the channel preset memory.</p> <p>With the Channel Skip/Add window open:</p> <ol style="list-style-type: none"> 1 Press \uparrow or \downarrow to select the desired channel. You can view the channel that is selected with the Channel Skip/Add menu in the sub screen. You can also use CH +/- or 0-9 and ENTER buttons. 2 Press \oplus. 3 Press \uparrow or \downarrow to select Skip, and press \oplus. The selected channel will be erased. If you want to re-enter the skipped channel, follow the steps above and select Add.
Auto Program <i>Automatic channel presetting</i>	<p>Select Yes to signal the projection TV to automatically program all receivable channels. When all the receivable channels are stored, the lowest numbered channel is displayed.</p> <p>Select No to cancel Auto Program.</p>
Cable <i>Cable system setting</i>	<p>Select On if your projection TV is connected to a cable system.</p> <p>Select Off if your projection TV is connected to an antenna.</p>



Adjusting Your SET UP (menus) (continued)

Setting and Selecting Favorite Channel

The Favorite Channel feature of your projection TV enables easy access to the eight channels that you preset (or the last channel that you were watching).


Your Favorite Channel options can be set automatically or manually.

The factory setting for "Favorite Channel" is "Auto."

When "Favorite Channel" is set to "Auto," the last eight channels selected with the 0-9 buttons will be set as Favorite Channel options. If you want to input your own selections as Favorite Channel settings, set to "Manual."


Setting Favorite Channel manually

- 1 Select "Favorite Channel" from the Channel Set Up menu. (see page 30)

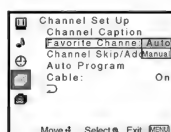


- 2 Press \uparrow or \downarrow to select "Manual" and press \oplus .

The Favorite Channel menu will appear. If you set Channel Caption names (e.g. CNN, HBO), they will also be displayed. (see "Channel Caption" on page 30)

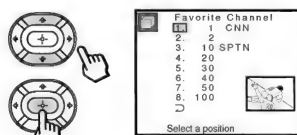


- 3 Press \uparrow or \downarrow to select a position (1-8), and press \oplus .

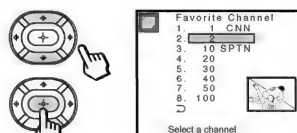

- 4 Press \uparrow or \downarrow to select a channel and press \oplus .

You have now selected a favorite channel.

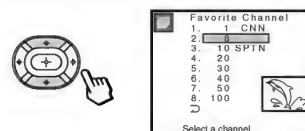

- 5 Use \uparrow and \downarrow to program other favorite channels. (Follow steps 3 and 4.)

- 6 Press MENU when you have finished.


Your favorite channels are now ready for use.

Changing Favorite Channel choices

You have the option of returning to the Favorite Channel screen to adjust any of your favorite channel choices.

Simply proceed as described in "Setting Favorite Channel manually" (skip step 2 if "Manual" is already selected).

When you reach step 3, select the position you want to change and press \oplus . Press \uparrow or \downarrow to select a new channel.

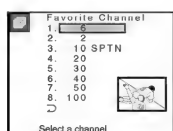


Press MENU when you are done.

Using Favorite Channel

You can use the Favorite Channel feature to directly select the channel you want to watch.


1 Press \oplus once.

The favorite channel menu and a window picture will be superimposed over the current channel. The window picture displays the channel selected from the menu.

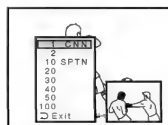

2 Press \uparrow or \downarrow to select the channel that you wish to view from the menu.

The picture of the selected channel will be displayed in the window picture.

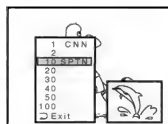

3 Press \oplus to select the channel.

The selected channel will be displayed for normal viewing.




To cancel the favorite channel menu before selecting a channel, press \uparrow or \downarrow to select "Exit" at the bottom of the menu and press \oplus .

33

Adjusting Your SET UP (menus) (continued)

Using the Set Up Menu

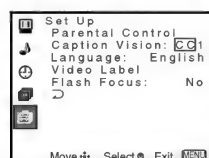

For detailed information on using the remote control to modify menu settings, refer to "Learning Menu Selection" on page 25.

To select the Set Up menu:

Display \rightarrow Highlight \rightarrow Select



Parental Control

Blocks programs unsuitable for children.

Allows you to block TV programs that you feel are unsuitable for your children.
(see "Using the Parental Control Feature" on page 36 for details)

Caption Vision

Television closed caption display

Some programs are broadcast with Caption Vision. To display "Caption Vision," select $\text{CC}1$, $\text{CC}2$, $\text{CC}3$, $\text{CC}4$, TEXT1, TEXT2, TEXT3 or TEXT4 from the menu. Then press the CC button until "Caption Vision" is displayed. $\text{CC}1$, $\text{CC}2$, $\text{CC}3$ or $\text{CC}4$ displays a printed version of the dialogue or sound effects of a program. (The mode should be set to $\text{CC}1$ for most programs.) TEXT1, TEXT2, TEXT3, or TEXT4 displays network/station information presented using either half or the whole screen.

Notes:

- Poor reception of TV programs can cause errors in Caption Vision and XDS. Captions may appear with a white box or other errors instead of the intended text.
- XDS, Caption Vision, and the status display cannot be used at the same time.



Language

Preferred language

Select from available languages (**English**, **Español** or **Français**) to display all menus in your language of choice.

Video Label Easy recognition of connected equipment (e.g. SAT, VHS, etc.)	<p>This feature allows you to label each input mode so that you can easily identify the connected equipment (e.g. you can label VIDEO 1 IN as VHS).</p> <p>With the Video Label window open:</p> <ol style="list-style-type: none"> 1 Press \uparrow or \downarrow to select the input mode you want to label and press \oplus. 2 Press \uparrow or \downarrow to select the label and press \oplus. <p>Video Label Options: VIDEO 1: VIDEO 1, VHS, 8mm, Beta, LD, SAT, DVD, AV RECEIVER, DTV, Skip VIDEO 2/3: VIDEO 2/VIDEO 3, VHS, 8mm, Beta, LD, SAT, DVD, DTV, Skip <i>If you select "Skip," your projection TV will skip this connection when you scan through video sources using the TV/VIDEO button.</i></p>
Flash Focus Automatic convergence adjustment	<p>Select Yes and press \oplus to start Flash Focus adjustment. When the adjustment is completed, the cross pattern on the screen becomes white. (for details, see page 19) Select No to cancel Flash Focus.</p>

35

Adjusting Your SET UP (menus) (continued)

Using the Parental Control Feature

The TV programs and movies shown on TV are given a rating signal based on the following rating systems.

In U.S.A.: U.S. Television Parental Guidelines to rate television programs (U.S. TV ratings), and Motion Picture Association of America (MPAA) Guidelines to rate movies including those shown on TV (movie ratings)

In Canada: Canadian English Language ratings to rate television programs in English, and Canadian French Language ratings to rate those in French.

To block programs you feel are unsuitable for your children, you need to set the TV for the desired rating systems. Sony's predetermined ratings are also available.


See pages 43 to 45 for a description of the ratings.

The Parental Control feature of the TV functions by receiving the rating signal from your local broadcasting station or cable service provider.


Activating the Parental Control Feature

First, set a password, then select your desired rating from Sony's predetermined ratings.

- 1 Select "Parental Control" from the Set Up menu. (see page 34)

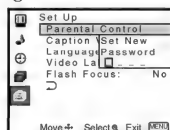


- 2 Enter a four digit password* using the 0-9 buttons.

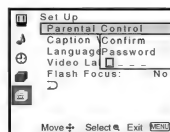

* Do not enter "4357" corresponding to "HELP" on a phone number pad. (see page 43)


- 3 To confirm the password, re-enter the same password with the 0-9 buttons. Your password is stored and the Parental Control menu automatically appears. If you want to change the password, see page 42.

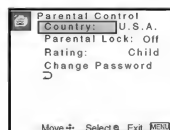


- 4 Make sure that "Country" is highlighted, and press \oplus .




- 5 Press \uparrow or \downarrow to select your country (U.S.A. or Canada), and press \oplus .

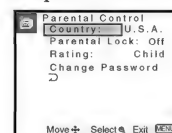


- 6 Press \uparrow or \downarrow to select "Parental Lock," and press \oplus .

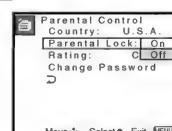

- 7 Press \blacktriangle or \blacktriangledown to select "On," and press (+).

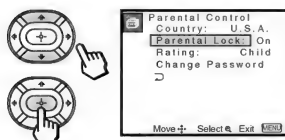

- 8 Press \blacktriangle or \blacktriangledown to select "Rating," and press (+).

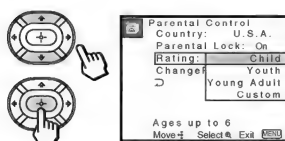

- 9 Press \blacktriangle or \blacktriangledown to select a desired rating ("Child," "Youth" and "Young Adult"), and press (+).


If you want to select the ratings from "Custom," go to step 4 of "Selecting a Custom Rating in U.S.A." on page 38 or "Selecting a Custom Rating in Canada" on page 41, according to your "Country" setting.

- 10 Press MENU to exit the menu.

To deactivate the Parental Control feature


If you set "Parental Lock" in the Parental Control menu to "Off," the Parental Control feature will not work and you can view all TV programs and movies shown on TV.

- 1 Select "Parental Control" from the Set Up menu. (see page 34)

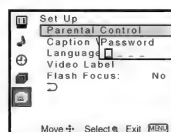

- 2 Enter your four digit password using the 0-9 buttons.


The Parental Control menu appears.

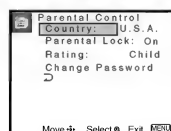

- 3 Press \blacktriangle or \blacktriangledown to select "Parental Lock," and press (+).



- 4 Press \blacktriangle or \blacktriangledown to select "Off," and press (+).

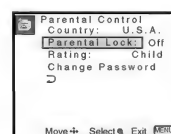

- 5 Press MENU to exit the menu.

Adjusting Your SET UP (menus) (continued)

To unlock the Parental Control feature temporarily

When you select a Parental Control program, no sound or picture except for a channel number will appear. The indicator is displayed. To view the program, follow the steps below.


- 1 Press ENTER to display the "Password" screen.
- 2 Enter your password using the 0-9 buttons. Parental Control will be canceled ("Parental Lock" set to "Off") until you turn your projection TV off.

Selecting a Custom Rating in U.S.A.

If you want to select the ratings to be blocked from "Custom" once you have activated the Parental Control feature (page 37), follow the procedure below.

For a detailed description of each rating, see "What the Ratings Mean" on pages 43 to 45.


- 1 Select "Parental Control" from the Set Up menu. (see page 34)

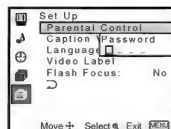


- 2 Enter your four digit password using the 0-9 buttons.

The Parental Control menu appears.


Make sure that "Country" is set to "U.S.A."

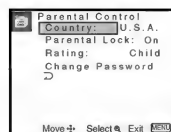

- 3 Press \blacktriangle or \blacktriangledown to select "Rating," and press (+).

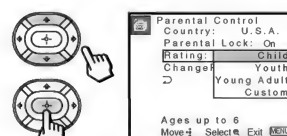


- 4 Press \blacktriangle or \blacktriangledown to select "Custom," and press (+).

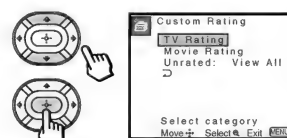


First, select a TV rating.


- 5 Press \blacktriangle or \blacktriangledown to select "TV Rating," and press \oplus .

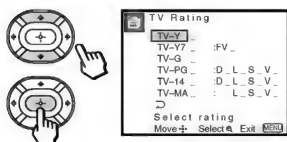

- 6 Press \blacktriangle or \blacktriangledown to select the TV rating to be blocked, and press \oplus .

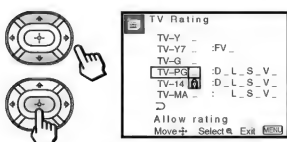


- 7 Press \blacktriangle or \blacktriangledown to select " \boxplus ," and press \oplus . The \boxplus indicator automatically appears beside the selected rating and all "higher" ratings, indicating that the programs that match the ratings will be blocked.

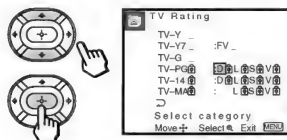

Some ratings have additional content ratings called "extenders." The extenders are defined as follows: D (sexually suggestive Dialog), FV (Fantasy Violence), L (coarse Language), S (Sexual situations) and V (Violence). By setting the extenders, you can define additional viewing limits. For more details of extenders, see page 45.

All of the extenders included in the selected ratings will be blocked. If you wish to allow any of them to be viewed, go to step 8.


- 8 Press \blacktriangle or \blacktriangledown to select the extender to be viewed, and press \oplus .

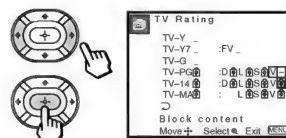

- 9 Press \blacktriangle or \blacktriangledown to select "-", and press \oplus .

"-" appears beside the selected extender, indicating that the programs that match the extender can be viewed.

If you select " \boxplus ," \boxplus is displayed to show that the programs that match the extender will be blocked again.

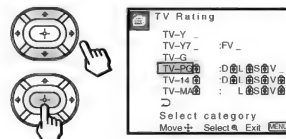

(continued)


39

Adjusting Your SET UP (menus) (continued)

- 10 Repeat steps 8 and 9 for other extenders.


All programs that match the ratings you select and higher, except for the extenders that were canceled, will be blocked.

- 11 After setting of the TV rating is complete, press \blacktriangle or \blacktriangledown to select ">," and press \oplus .

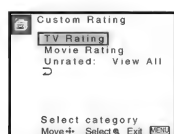


Second, select a movie rating.

- 12 Press \blacktriangle or \blacktriangledown to select "Movie Rating," and press \oplus .

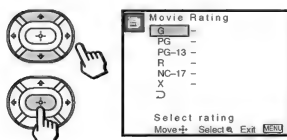


- 13 Press \blacktriangle or \blacktriangledown to select the movie rating to be blocked, and press \oplus .

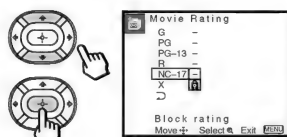

- 14 Press \blacktriangle or \blacktriangledown to select " \boxplus ," and press \oplus .

The \boxplus indicator automatically appears beside the selected rating and all "higher" ratings, indicating that the programs that match the ratings will be blocked.

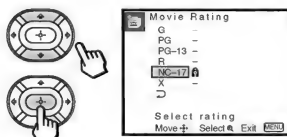


- 15 Press MENU to exit the menu.

To block TV programs and/or movies for which a rating signal is not given (NR and N/A)


For a description of the NR and N/A ratings, see page 44.

- 1 Perform steps 1-4 of "Selecting a Custom Rating in U.S.A." on page 38.

- 2 Press \blacktriangle or \blacktriangledown to select "Unrated," and press \oplus .

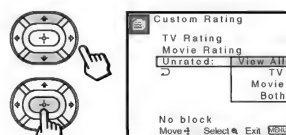

- 3 Press \uparrow or \downarrow to select the type of programs to be blocked, and press \oplus .

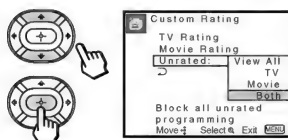

To block ...	Select ...
No program (to view any unrated TV program and movie)	View All
Unrated TV programs	TV
Unrated movies	Movie
Unrated TV programs and movies	Both


- 4 Press MENU to exit the menu.

Selecting a Custom Rating in Canada

If you want to select the ratings to be blocked from "Custom" once you have activated the Parental Control feature (page 37), follow the procedure below.


For a detailed description of each rating, see "What the Ratings Mean" on pages 45 and 46.

- 1 Select "Parental Control" from the Set Up menu. (see page 34)

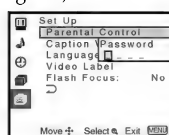


- 2 Enter your four digit password using the 0-9 buttons.


The Parental Control menu appears. Make sure that "Country" is set to "Canada."

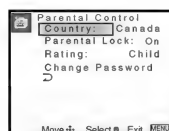

- 3 Press \uparrow or \downarrow to select "Rating," and press \oplus .

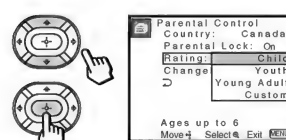



- 4 Press \uparrow or \downarrow to select "Custom," and press \oplus .

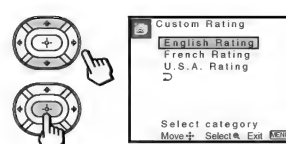


(continued)

Adjusting Your SET UP (menus) (continued)

- 5 Press \uparrow or \downarrow to select the rating you want to block, and press \oplus .
The selected rating appears.

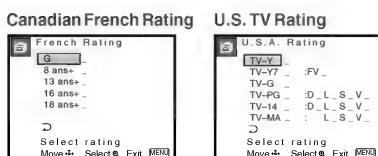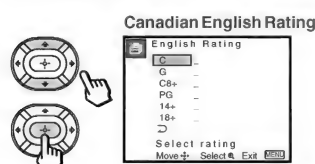


- 6 Press \uparrow or \downarrow to select the TV rating to be blocked, and press \oplus .

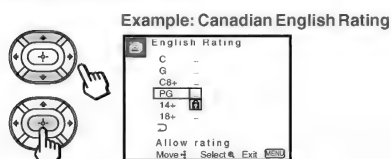

42

- 7 Press \uparrow or \downarrow to select "G," and press \oplus .
The \mathbb{G} indicator automatically appears beside the selected rating and all "higher" ratings, indicating that the programs that match the ratings will be blocked.

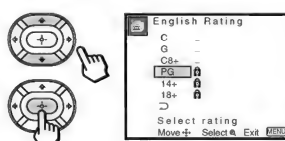


Some U.S. TV ratings have additional content ratings called "extenders," such as D, FV, L, S and V. By setting the extenders, see steps 7 to 10 of "Selecting a Custom Rating in U.S.A." on pages 39 and 40. For more details of extenders, see page 45.

All of the extenders included in the selected ratings will be blocked. If you wish to allow any of them to be viewed, go to step 8.

- 8 Press MENU to exit the menu.


Changing the Password

- 1 Select "Parental Control" from the Set Up menu. (see page 34)

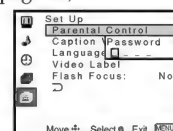


- 2 Enter your four digit password using the 0-9 buttons.


The Parental Control menu appears.

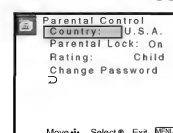

- 3 Press \uparrow or \downarrow to select "Change Password," and press \oplus .

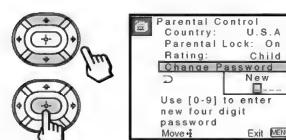

- 4 Enter a new four digit password using the 0-9 buttons.

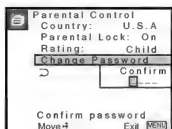

- 5 Enter the password set in step 4 again to confirm.

If you entered it incorrectly, "Password incorrect" appears.


Re-enter the correct password.

- 6 Press MENU to exit the menu.

If you have forgotten your password

In step 2 of "Changing the Password" on page 42, enter the master password "4357" (corresponding to "HELP" on a phone number pad). You can then store a new password.

Notes:

- If you entered "4357" as your password the first time, you cannot store a new password. (see step 2 of "Activating the Parental Control Feature" on page 36)
- When you select a Parental Control program and the  indicator is displayed on the screen, you cannot view that program even if you enter "4357." (see "To unlock the Parental Control feature temporarily" on page 38)

What the Ratings Mean

Ratings in U.S.A.

Sony's predetermined ratings

These are original ratings that Sony predetermined according to the viewer's age. Each rating allows you to view the certain programs, as follows.

See pages 44 and 45 for a description of each rating.

Child: Suitable for children under the age of 6.
Viewable U.S. movie ratings: G, NR, and N/A
Viewable U.S. TV ratings: TV-Y, TV-G, and TV-NR

Youth: Suitable for children aged 7 and older.
Viewable U.S. movie ratings: G, PG, NR, and N/A
Viewable U.S. TV ratings: TV-Y, TV-Y7, TV-G, TV-PG, and TV-NR

Young Adult: Suitable for children aged 13 and older.
Viewable U.S. movie ratings: G, PG, PG-13, NR, and N/A
Viewable U.S. TV ratings: TV-Y, TV-Y7, TV-G, TV-PG, TV-14, and TV-NR

(continued)

43

Adjusting Your SET UP (menus) (continued)

U.S. movie ratings

U.S. movie ratings are for movies (including those shown on TV) rated according to the Motion Picture Association of America (MPAA) Guidelines.

G (General Audiences—All Ages

Admitted): In G-rated films no strong words are used, the violence is at a minimum, nudity and sex scenes are not present, nor is there any drug use.

PG (Parental Guidance Suggested. Some Material May Not Be Suitable For Children):

This is a film which may need to be monitored first by parents.

PG-13 (Parents Strongly Cautioned. Some Material May Be Inappropriate For Children Under 13): Parents are alerted to be very careful about the attendance of their under-teenage children when viewing.

R (Restricted, Under 17 Require Accompanying Parent Or Adult Guardian): This film includes hard language, tough violence, nudity, drug abuse or other elements of concern.

NC-17 or X (No One 17 Or Under Admitted.):

This is a film that most parents would consider not suitable for children aged 17 and under. There may be violence, sex, aberrational behavior, drug abuse or other elements of concern.

NR (Not Rated): This is a film that a producer has not rated, intending to have his film widely released.

N/A (Not Applicable): This is a film that a producer considers outside the scope of the MPAA ratings.

Note:

- NR and N/A ratings are shown together as "Unrated" in the menu.

U.S. TV ratings

U.S. TV ratings are for TV programs rated according to the U.S. Television Parental Guidelines.

TV-Y (All Children): This program is designed for young children aged 2-6 and is appropriate for all children.

TV-Y7 (Directed to Older Children): This program is designed for children aged 7 and above. Themes and elements in this program may include mild fantasy violence or slapstick violence, or may frighten children under the age of 7.

TV-G (General Audience): Most parents would find this program suitable for all ages. It contains little or no violence, no strong language and little or no sexual dialog or situations.

TV-PG (Parental Guidance Suggested): This program contains some material that parents may find unsuitable for younger children.

TV-14 (Parents Strongly Cautioned): This program contains some material that many parents would find unsuitable for children under the age of 14.

TV-MA (Mature Audience Only): This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under the age of 17.

TV-NR (Not Rated/Unrated): This is a program broadcast without any rating, such as news, news flashes or sports.

Note:

The TV-NR rating is shown as “Unrated” in the menu.

About the extenders of U.S. TV ratings

TV-Y7, TV-PG, TV-14 and TV-MA ratings have additional content ratings called “extenders” to define additional viewing limits. The extenders are defined as follows:

D (sexually suggestive Dialog): Programs containing suggestive dialog, or sexual innuendo

FV (Fantasy Violence): Programs containing cartoon violence occurring in TV-Y7 programs only

L (coarse Language): Programs containing coarse language

S (Sexual situations): Programs containing sexual content

V (Violence): Programs containing violence. There may be some profanity, violence or brief nudity in these programs.

Ratings in Canada

Sony's predetermined ratings

These are original ratings that Sony predetermined according to the viewer's age. Each rating allows you to view the certain programs, as follows.

See the right column and page 46 for a description of each rating.

Child: Suitable for children under the age of 7.

Viewable Canadian English Language ratings: C and G

Viewable Canadian French Language ratings: G

Viewable U.S. TV ratings: TV-Y, TV-G, and TV-NR

Youth: Suitable for children aged 8 and older.

Viewable Canadian English Language ratings: C, G, C8+ and PG

Viewable Canadian French Language ratings: G and 8 ans+

Viewable U.S. TV ratings: TV-Y, TV-Y7, TV-G, TV-PG, and TV-NR

Young Adult: Suitable for children aged 14 and older.

Viewable Canadian English Language ratings: C, G, C8+, PG and 14+

Viewable Canadian French Language ratings: G, 8 ans+, 13 ans+

Viewable U.S. TV ratings: TV-Y, TV-Y7, TV-G, TV-PG, TV-14, and TV-NR

Canadian English Language ratings

The Canadian English Language Ratings are for TV programs in English broadcast in Canada.

C (Programming intended for children under age 8): There will be no realistic scenes of violence or no offensive language, nudity or sexual content. Careful attention is paid to themes, which could threaten children's sense of security and well-being.

G (General Audience): Will contain very little violence, either physical or verbal or emotional. There may be some inoffensive slang, no profanity and no nudity.

(continued)

45

Adjusting Your SET UP (menus) (continued)

C8+ (Programming generally considered acceptable for children 8 years and over to watch on their own): Violence will not be portrayed as the preferred, acceptable, or only way to resolve conflict; or encourage children to imitate dangerous acts which they may see on television. There will be no profanity, nudity or sexual content.

PG (Parental Guidance): Programming intended for a general audience but which may not be suitable for younger children. Parents may consider some content inappropriate for unsupervised viewing by children aged 8 - 13.

14+ (Programming contains themes or content which may not be suitable for viewers under the age of 14): Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens.

18+ (Adult): May contain violence integral to the development of the plot, character or theme, intended for adult audiences. May contain graphic language and explicit portrayals of nudity and/or sex.

E (Exempt): Exempt programming includes: news, sports documentaries and other information programming: talk shows, music videos, and variety programming.

Note:

The E (Exempt) rating is not shown in the menu.

Canadian French Language ratings

The Canadian French Language Ratings are for TV programs in French broadcast in Canada.

G (General): Programming intended for audience of all ages. Contains no violence, or the violence it contains is minimal or is depicted appropriately with humor or caricature or in an unrealistic manner.

8 ans+ (8+ General - Not recommended for young children): Programming intended for a broad audience but contains light or occasional violence that could disturb young children. Viewing with an adult is recommended for young children (under the age of 8).

13 ans+ (Programming may not suitable for children under the age of 13): Viewing with an adult is strongly recommended for children under 13.

16 ans+ (Programming is not suitable for children under the age of 16): Contains frequent scenes of violence or intense violence.

18 ans+ (Programming restricted to adults): Contains constant violence or scenes of extreme violence.

E (Exempt): Exempt programming.

Note:

The E (Exempt) rating is not shown in the menu.

46

 
Operating Video Equipment

Setting the Manufacturer's Code

You can use the supplied remote control to operate Sony or non-Sony video equipment that has an infrared sensor.

Press CODE SET, DVD/VTR (FUNCTION), and the 0-9 buttons to enter the manufacturer's code number (see the following chart), then press ENTER.

For example, to operate a Sony 8mm VCR:



If the remote control doesn't work

- See the tips on page 49.

VCR manufacturer code numbers

Manufacturer	Code
Sony (VHS VCR)	301
Sony (8mm VCR)	302
Sony (Beta, ED Beta, VCRs)	303
Aiwa	338
Admiral (M. Ward)	327
Audio Dynamic	314, 337
Bell & Howell (M. Ward)	330
Broksonic	319, 317
Canon	309, 308
Citizen	332
Craig	302, 332
Curtis Mathis	304, 338, 309
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318, 341
Fisher	330, 335
Funai	338
General Electric	329, 304, 309
Go Video	340, 339, 322
Goldstar	332
Hitachi	306, 304, 305, 338
Instant Replay	309, 308
JC Penney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337
Kenwood	314, 336, 332, 337
LXI (Sears)	332, 305, 330, 335, 338
Magnavox	308, 309, 310
Marantz	314, 336, 337
Marta	332
Memorex	309, 335

Minolta	305, 304
Mitsubishi/MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Optimus	327
Panasonic	308, 309, 306, 307
Pentax	305, 304
Philco	308, 309
Philips	308, 309, 310
Pioneer	308
Quasar	308, 309, 306
RCA/PROSCAN	304, 305, 308, 309, 311, 329, 312, 313, 310
Realistic	309, 330, 328, 335, 324, 338
Sansui	314
Samsung	322, 313, 321
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Signature 2000 (M. Ward)	338, 327
Sylvania	308, 309, 338, 310
Symphonic	338
SV2000	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Teknica	338
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	330, 314, 336, 337
Zenith	331

47

Operating Video Equipment (continued)

MDP manufacturer code numbers

Manufacturer	Code
Sony	701
Panasonic	704, 710
Mistubishi	702

DVD Player manufacturer code numbers

Manufacturer	Code
Sony	751
Panasonic	753
Pioneer	752
RCA	755
Toshiba	754

Tips

- In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied remote control. In this case, please use the equipment's own remote control.
- When you remove the batteries, the code number may revert to the factory setting.

To operate video equipment

- 1 Press DVD/VTR (FUNCTION).
- 2 Use the VCR/DVD/MDP operation buttons indicated in the following tables.

Operating a VCR using the remote control

To turn On/Off	Press DVD/VTR (POWER). [Green Button]
To select a channel	Press the 0 – 9 buttons.
To change channels	Press CH +/-.
To record	Press ■ while pressing ● .
To play	Press ▶ .
To stop	Press ■ .
To fast forward	Press ▶▶ .
To rewind the tape	Press ◀◀ .
To pause	Press . Press again to resume normal playback.
To search the picture forward or backward	Press ▶▶ or ◀◀ during playback. Release to resume normal playback.
To change input mode	Press TV/VTR.

Operating an MDP using the remote control

To turn On/Off	Press DVD/VTR (POWER). [Green Button]
To play	Press ▶ .
To stop	Press ■ .
To pause	Press . Press again to resume normal playback.

To search the picture forward or backward

Press **▶▶** or **◀◀** during playback. Release to resume normal playback.

To search a chapter forward or backward

Press CH +/-.

Operating a DVD Player using the remote control

To turn On/Off	Press DVD/VTR (POWER). [Green Button]
To play	Press ▶ .
To stop	Press ■ .
To pause	Press . Press again to resume normal playback.
To step through different tracks of an audio disc	Press ▶▶ to step forward or ◀◀ to step backward.
To step through different chapters of a video disc	Press CH + to step forward or CH – to step backward.
To select tracks directly	Press 0-9 buttons.
To display the menu (Set up)	Press MENU.

48

 
Operating a Cable Box or Satellite Receiver (SAT)

Setting the Manufacturer's Code

You can program the supplied remote control to operate a cable box or satellite receiver.

Press CODE SET, SAT / CABLE (FUNCTION), and the 0-9 buttons to enter the manufacturer's code number (see the following chart), then press ENTER.

For example, to operate a Sony satellite receiver:



Manufacturer code numbers (cable box)

Manufacturer	Code
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G.I	201, 202, 203, 204, 205, 222, 206, 207, 208, 218
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213

Manufacturer code numbers (satellite receiver)

Manufacturer	Code number
Sony	801 (preset code for remote control)
General Electric	802, 808
Hitachi	805
Hughes	804
Panasonic	803
RCA/PROSCAN	802
Toshiba	806, 807

To operate the cable box or satellite receiver (SAT)

- 1 Press SAT / CABLE (POWER) [Green Button] to turn on/off the cable box or satellite receiver.
- 2 Press SAT / CABLE (FUNCTION).
- 3 For other operations, refer to the operating instructions that come with the equipment.
The GUIDE and INDEX (blue-labeled) buttons can be used only with a satellite receiver.

If the remote control doesn't work

- Try repeating the set up procedures using the other codes listed for your equipment.

To operate the projection TV

Press TV (FUNCTION). Then use the projection TV control buttons to control the projection TV.

Tips

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, you may not be able to operate your equipment with the supplied remote control. In this case, use the equipment's own remote control unit.
- Whenever you remove the batteries — to replace them, for example — if too much time is taken, the code numbers may revert to the factory setting and must be reset.

49

Troubleshooting

If, after reading the following instructions, you have additional questions related to the use of your Sony projection TV, please call one of the following numbers (English only).

Customers in the continental United States contact the Direct Response Center at: 1-800-222-SONY (7669)

Customers in Canada contact the Customer Relations Center at: (416) 499-SONY (7669)


The picture turns off and the TIMER/STAND BY indicator on the front panel flashes (self-diagnosis function)	<ul style="list-style-type: none"> • The projection TV is equipped with a self-diagnosis function. If there is a problem with your projection TV, the TIMER/STAND BY indicator on the front panel will flash repeatedly. Counting the number of flashes helps you inform qualified Sony personnel of the projection TV's condition. 1 Count how many times the TIMER/STAND BY indicator flashes in total. It flashes twice at 3 seconds' intervals. If, for example, the indicator flashes twice, stops flashing for 3 seconds, and flashes twice again, that counts as twice. 2 Press POWER on the projection TV to turn it off, then inform qualified Sony personnel or the above Direct Response Center of the number of flashes.
No picture (screen not lit), no sound	<ul style="list-style-type: none"> • Make sure the power cord is plugged in. • Operate with the buttons on both the projection TV and the remote control. • Check to see if the TV/VIDEO setting is correct: when watching TV, set to TV, and when watching video tapes, set to VIDEO 1, 2, or 3. • Try another channel. <i>It could be station trouble.</i> • Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (see "To perform AUTO SET UP again" on page 19) • The Parental Control feature is activated. (see "To deactivate the Parental Control feature" on page 37)
Remote control does not operate	<ul style="list-style-type: none"> • Batteries could be weak. Replace the batteries. • Press TV (FUNCTION) when operating your projection TV. • Make sure the projection TV's power cord is connected securely to the wall outlet. • Locate the projection TV at least 3-4 feet away from fluorescent lights. • Check the polarity of the batteries.
Dark, poor or no picture (screen lit), good sound	<ul style="list-style-type: none"> • Adjust "Picture" in the Video menu. (see "Picture Adjustment" on page 26) • Adjust "Brightness" in the Video menu. (see "Picture Adjustment" on page 26) • Check antenna/cable connections. • Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (see "To perform AUTO SET UP again" on page 19) • Adjust the convergence again using the FLASH FOCUS button. (see "Adjusting the Convergence Automatically (FLASH FOCUS)" on page 19)
Good picture, no sound	<ul style="list-style-type: none"> • Press MUTE so that "Muting" disappears from the screen. (see "MUTING" on page 20) • Check the MTS/SAP setting in the Audio menu. (see "MTS/SAP" on page 27) • Make sure "Speaker" is set to "On" in the Audio menu. (see "Speaker" on page 28) • Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (see "To perform AUTO SET UP again" on page 19)

50


Cannot receive upper channels (UHF) when using an antenna	<ul style="list-style-type: none"> • Make sure "Cable" is "Off" in the Channel Set Up menu. (see "Cable" on page 31) • Use "Auto Program" to add receivable channels that are not presently in the TV's memory. (see "Auto Program" on page 31)
No color	<ul style="list-style-type: none"> • Adjust "Color" in the Video menu. (see "Picture Adjustment" on page 26) • Black and white programs cannot be seen in color. • Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (see "To perform AUTO SET UP again" on page 19)
Only snow and noise appear on the screen	<ul style="list-style-type: none"> • Check the "Cable" setting in the Channel Set Up menu. (see "Cable" on page 31) • Check the antenna/cable connections. • Make sure the channel is broadcasting programs. • Press ANT to change the input mode. (see "ANT" on page 22)
Dotted lines or stripes	<ul style="list-style-type: none"> • Adjust the antenna. • Keep the projection TV away from noise sources such as cars, neon signs or hair-dryers.
TV is fixed to one channel	<ul style="list-style-type: none"> • Use "Auto Program" to add receivable channels that are not presently in TV's memory. (see "Auto Program" on page 31)
Double images or ghosts	<ul style="list-style-type: none"> • Use a highly directional outdoor antenna or a cable (when the problem is caused by reflections from nearby mountains or tall buildings).
Cannot operate the menu	<ul style="list-style-type: none"> • If the item you want to choose appears in gray, you cannot select it. • Press the projection TV's power button off and on again.
Cannot receive any channels when using cable TV	<ul style="list-style-type: none"> • Make sure "Cable" is "On" in the Channel Set Up menu. (see "Cable" on page 31) • Use "Auto Program" to add receivable channels that are not presently in the TV's memory. (see "Auto Program" on page 31)
Cannot gain enough volume when using a cable box	<ul style="list-style-type: none"> • Increase the volume at the cable box. Then press TV (FUNCTION) and adjust the projection TV's volume.
Favorite Channel does not display your choices	<ul style="list-style-type: none"> • Verify that "Favorite Channel" is set to "Manual" in the Channel Set Up menu. (see "Setting Favorite Channel manually" on page 32)
Some video sources do not appear when you press TV/VIDEO	<ul style="list-style-type: none"> • Ensure that "Video Label" is not set to "Skip." (see "Video Label" on page 35)
Recording through MONITOR OUT does not function properly when recording in PIP mode	<ul style="list-style-type: none"> • MONITOR OUT will not record both images in PIP. Only the main picture will be recorded. • If you are recording the main picture and you switch to the sound of the sub picture using the AUDIO button, the main picture will be recorded with sound from the other program.
Cannot play shooting games	<ul style="list-style-type: none"> • Some shooting games which involve pointing a light beam at the TV screen with an electronic gun or rifle cannot be used with this projection TV. For details, see the instruction manual supplied with the video game software.

SECTION 2 DISASSEMBLY


2-1. REAR BOARD REMOVAL

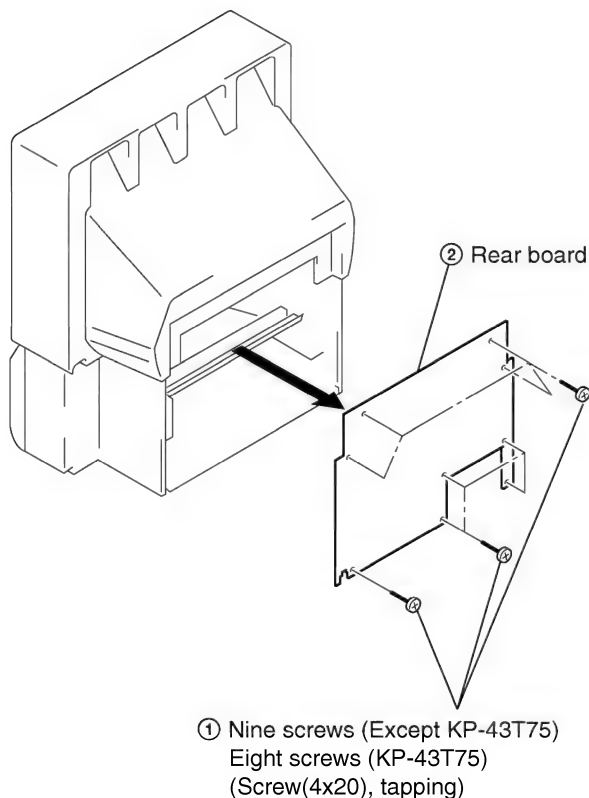


2-2. CHASSIS ASSY REMOVAL

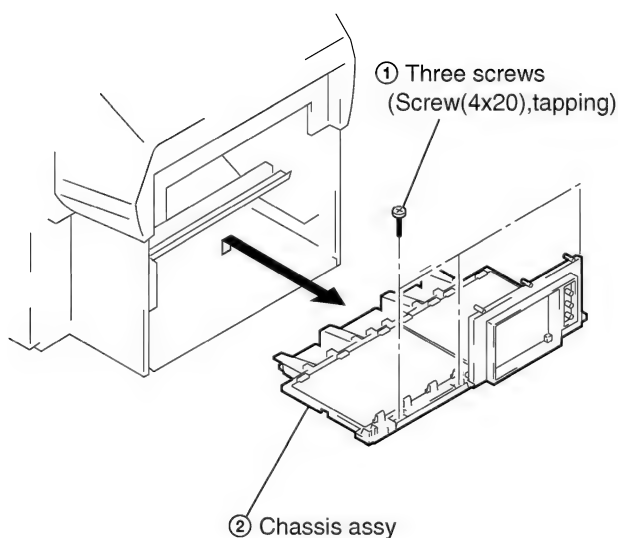


2-3. SERVICE POSITION

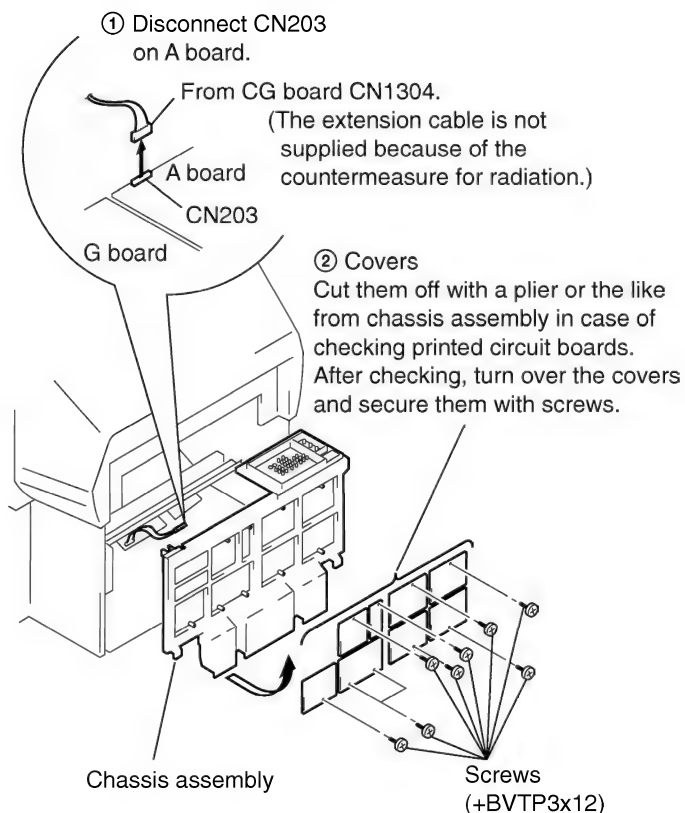

2-4. HA BOARD AND HB BOARD REMOVAL (EXCEPT KP-43T75)

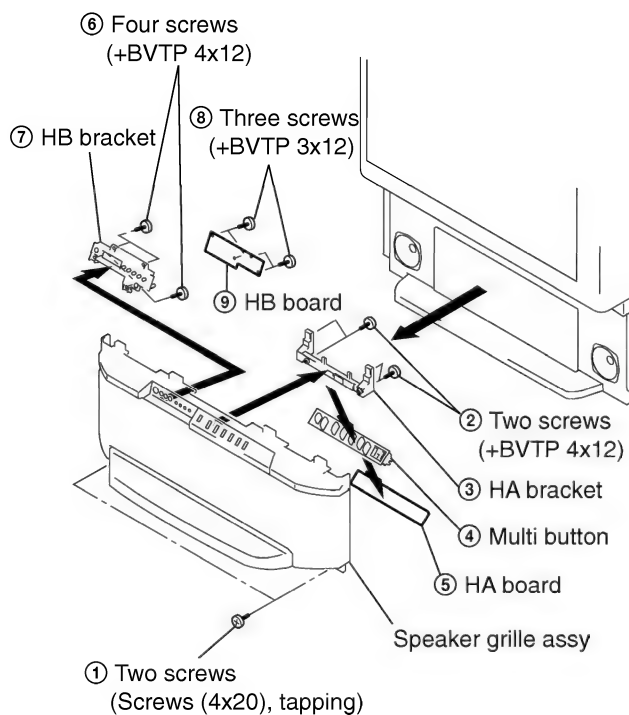


2-5. HA BOARD AND HB BOARD REMOVAL (KP-43T75)

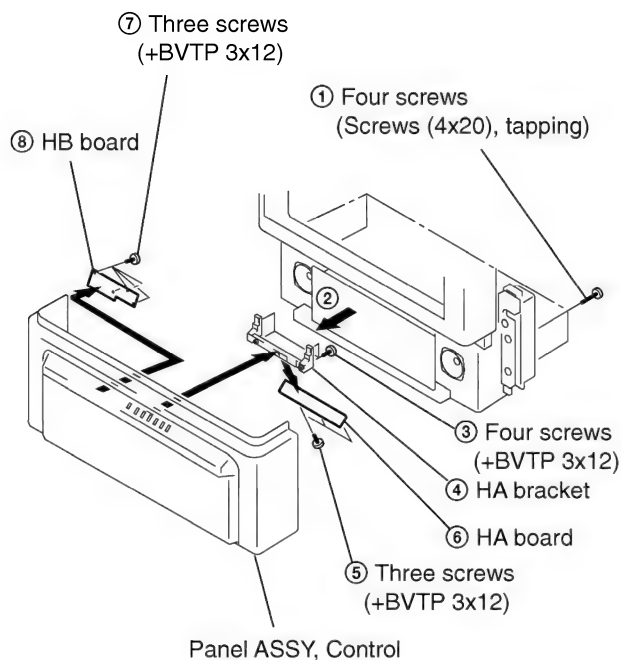


2-6. MIRROR COVER REMOVAL

- ① Seventeen screws(KP-43T75)
Twenty four screws
(KP-48S75)
Nineteen screws
(KP-53N77/53S75)
Twenty three screws (KP-61S75)
(Screw(4x20), tapping)

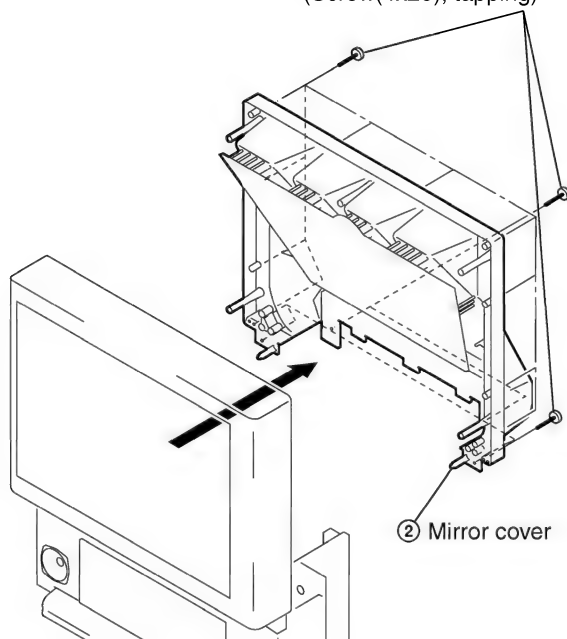


2-7. BEZNET ASSY REMOVAL


- ② Eleven screws (KP-43T75)
Twelve screws (KP-48S75)
Fifteen screws (KP-53N77/53S75)
Fourteen screws (KP-61S75)
(Screws(4x20), tapping)

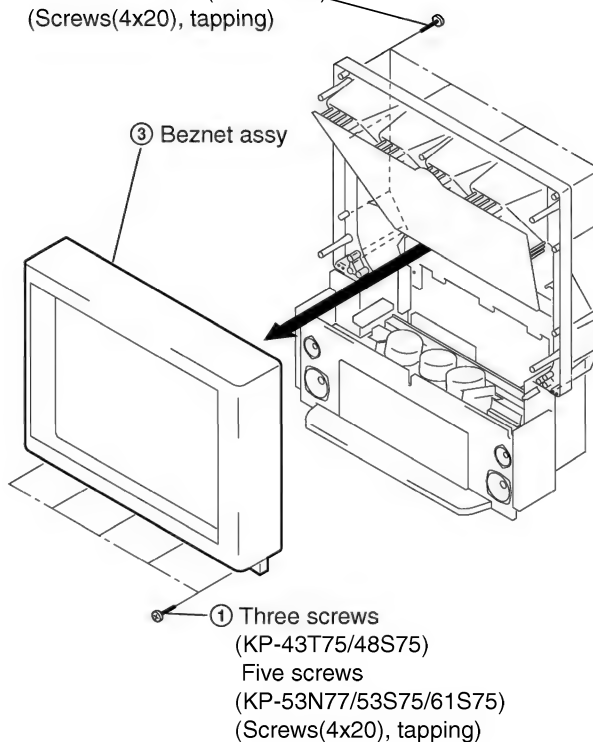

2-8. HC BOARD AND S BOARD REMOVAL

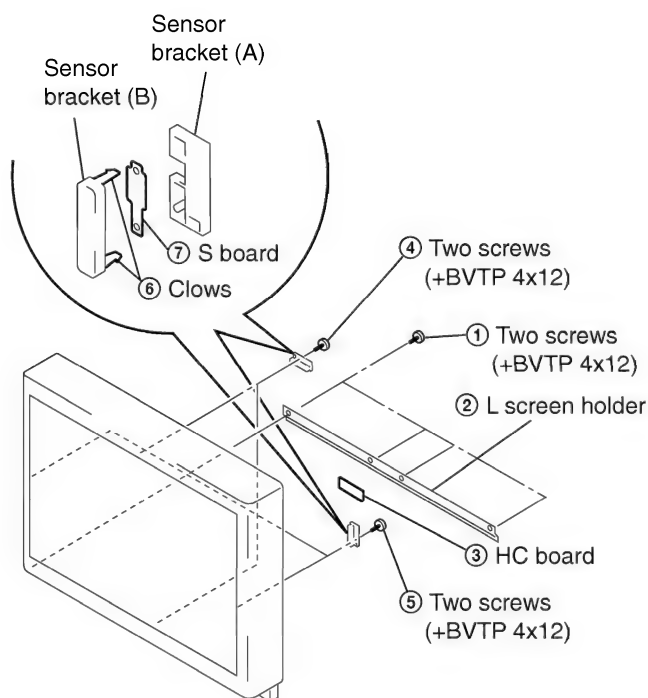


2-9. A BOARD AND G BOARD REMOVAL

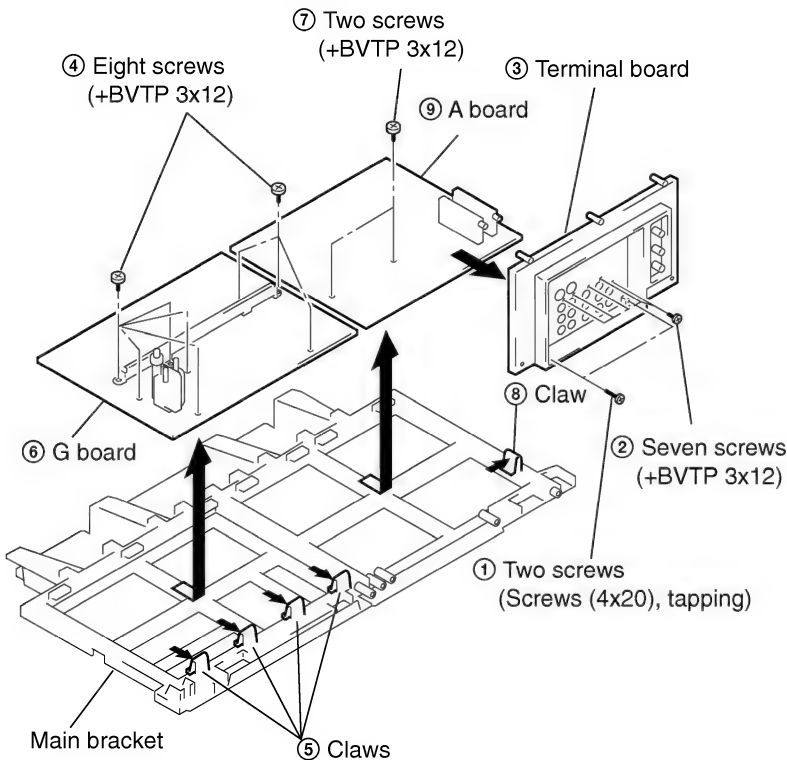


2-10. PICTURE TUBE REMOVAL

CAUTION: Removing the arrow-marked screws is strictly prohibited. If removed, it may cause liquid spill.

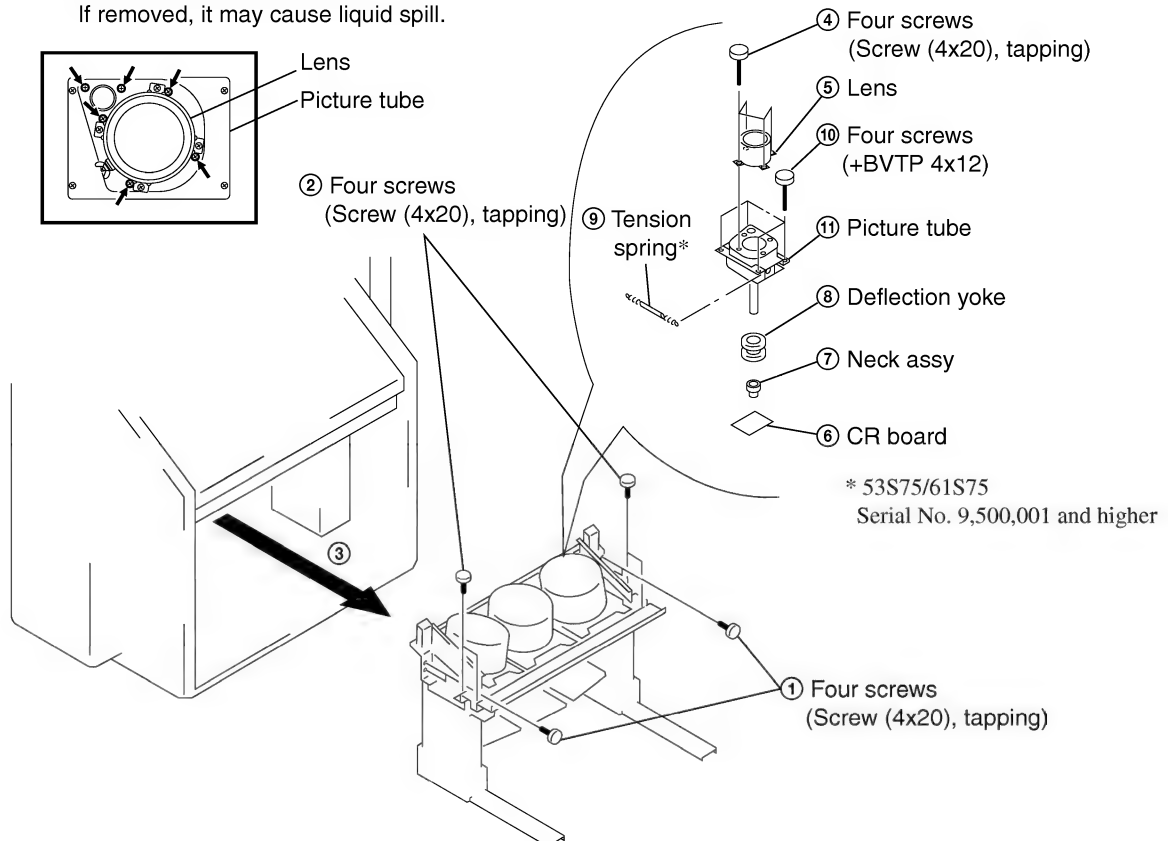

2-11. HIGH-VOLTAGE CABLE INSTALLATION AND REMOVAL

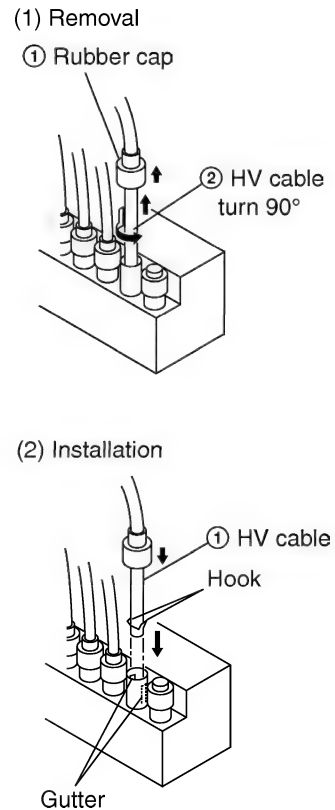

SECTION 3 SET-UP ADJUSTMENTS

3-1. SCREEN VOLTAGE ADJUSTMENT (COARSE ADJUSTMENT)

1. Receive the Monoscope signal.
2. Set 50% BRIGHTNESS and minimum PICTURE.
3. Turn the red VR on the FOCUS block all the way to the left and then gradually turn it to the right until the point where you can see the retrace line.
4. Next gradually turn it to the left to the position where the retrace line disappears.

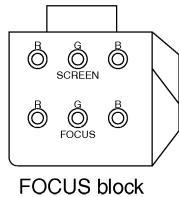


Fig. 3-1

3-2. SCREEN (G2) ADJUSTMENT (FINE ADJUSTMENT)

Fine Mode is recommended to set screen controls to their optimal condition. It is necessary to build the simple jig, illustrated below, using 3-watt resistors. Please note, that if the proper voltage is not obtained with their listed values, resistors, then please increase or decrease one of the values in the resistor network to obtain the correct voltage.

1. Select VIDEO1 mode without signals.
2. Connect G2 JIG.
3. SW on JIG.
4. Connect an oscilloscope to the TP701(KR), TP732(KG) and TP761(KB) of CR board, CG board and CB board.
5. Adjust R, G and B screen voltage to 170-173V with screen VR on the Focus block.

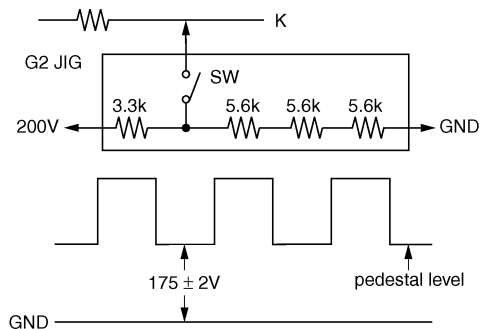


Fig. 3-2

3-3. DEFLECTION YOKE TILT ADJUSTMENT

1. Receive the Monoscope signal.
2. Set in service mode.
3. Cover the both red and blue picture lenses with the lens caps to show only the green color.
4. Loosen the deflection yoke set screw and align the tilt of the Deflection Yoke so that the bars at the center of the monoscope pattern are horizontal.
5. After aligning the deflection yoke, fasten it securely to the funnel-shaped portion (neck) of the CRT.
6. The tilt of the deflection yoke for red is aligned in the mode Cover the both green and blue picture lenses with the lens caps and the tilt of the deflection yoke for blue is aligned with in

the mode Cover the both green and red picture lenses with the lens caps is aligned the same as was done for green.

Note: Instead of items 3 and 6, you can cut off the unnecessary color beams by controlling the service mode VPNT 28 RON, 29 GON, and 30 BON.

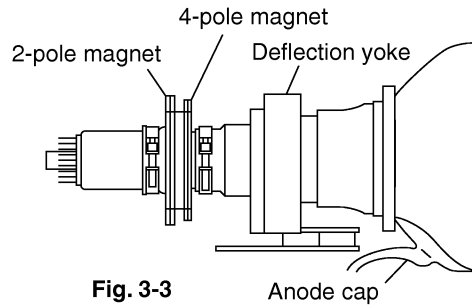



Fig. 3-3

3-4. FOCUS LENS ADJUSTMENT

In this adjustment, use the remote commander in the service mode.

For details of the usage of the service mode and the remote commander, please refer the item 3-9. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER.

1. Loosen the lens screw.
2. Set to the service mode.
3. Receive the all-white signal.
4. Cover the both red and blue picture lenses with the lens caps to show only the green color.
5. Set to PJE, and press 6 to display the test signal (crosshatch)“ on the screen.
6. Turn the green lens to adjust to the optimum focus point with the test signal.
7. Tighten the lens screw.
8. Cover the both green and blue picture lenses with the lens caps to show only the red color.
9. Set to PJE, and press 6 to display the test signal (crosshatch)“ on the screen.
10. Adjust red CRT lens just the same as green.
11. Cover the both green and red picture lenses with the lens caps to show only the blue color.

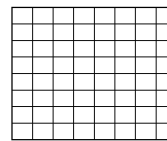

Test signal

Fig. 3-4

12. Set to PJE, and press 6 to display the test signal (crosshatch)“ on the screen.
13. Adjust blue CRT lens just the same as green.
14. After adjusting the items 3-5. Focus VR Adjustment, 3-6. 2-Pole Magnet Adjustment and 3-7. 4-Pole Magnet Adjustment, adjust again to the optimum focus point.


*: Every time you press 6, the test signal changes to “crosshatch+video signal” - “dots+video signal” - “crosshach(black)” - “dots(black)” - off.

Note: Instead of items 4, 8 and 11, you can cut off the unnecessary color beams by controlling the service mode VPNT 28 RON, 29 GON, and 30 BON.

3-5. FOCUS VR ADJUSTMENT

1. Set to the service mode.
2. Receive the all-white signal.
3. Cover the both red and blue picture lenses with the lens caps to show only the green color.
4. Set to PJE, and press 6 to display the test signal (crosshatch) on the screen.
5. Turn the green focus VR on the focus block to adjust to the optimum focus point with the test signal.
6. Cover the both green and blue picture lenses with the lens caps to show only the red color.
7. Set to PJE, and press 6 to display the test signal (crosshatch) on the screen.
8. Turn the red focus VR on the focus block to adjust to the optimum focus point with the test signal.
9. Cover the both green and red picture lenses with the lens caps to show only the blue color.
10. Set to PJE, and press 6 to display the test signal (crosshatch) on the screen.
11. Turn the blue focus VR on the focus block to adjust to the optimum focus point with the test signal.
12. After adjusting the items 3-4. Focus Lens Adjustment, 3-6. 2-Pole Magnet Adjustment and 3-7. 4-Pole Magnet Adjustment, adjust again to the optimum focus point.


Note: Instead of items 3, 6 and 9, you can cut off the unnecessary color beams by controlling the service mode VPNT 28 RON, 29 GON, and 30 BON.

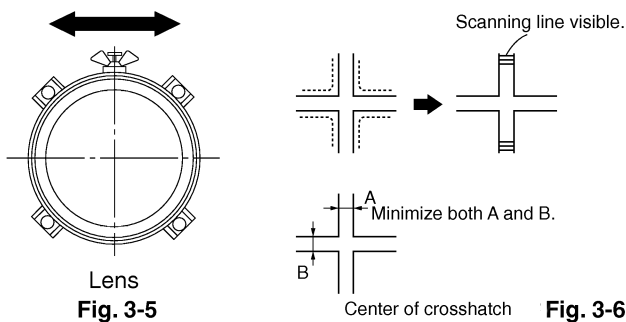

3-6. 2-POLE MAGNET ADJUSTMENT (GREEN,RED)

1. Receive the Dot signal.
2. Set in service mode.
3. Cover the both red and blue picture lenses with the lens caps to show only the green color.
4. Turn the green focus VR on the focus block to the right and set to overfocus to enlarge the spot.
5. Now align the 2-Pole Magnet so that the enlarged spot is in the center of the Just Focus spot.
6. Align the green focus VR and set for just (precise) focus.
7. Perform the same alignment for red.

Use the center dot

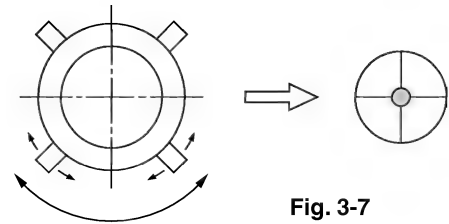

3-7. 4-POLE MAGNET ADJUSTMENT

1. Receive the Dot signal.
2. Set in service mode.
3. Cover the both red and blue picture lenses with the lens caps to show only the green color.
4. Turn the green focus VR on the focus block to the left and set to underfocus to enlarge the spot.
5. Now align the 4-Pole Magnet so that the enlarged spot becomes a perfect circle for green and red.
6. Perform the same alignment for blue.

Use the center dot

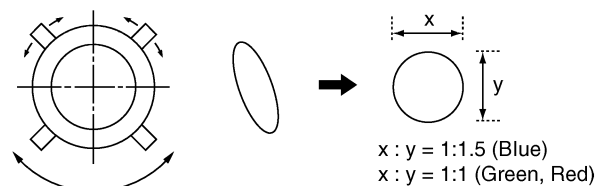



Fig. 3-8

3-8. DEFOCUS ADJUSTMENT (BLUE)

Note: Please adjust the blue dot to be slightly larger than red and green dots. This adjustment provides a more pleasing picture to the customer.

1. Select the video menu and set the mode to "VIVID" mode.
2. Set to the service mode.
3. Change TV mode to the video input mode.
4. Set to PJE, and press 6 to display the test signal (dots) on the screen.
5. Turn the blue focus VR on the focus block to adjust to the diameter of the dots as shown in the figure below.

[Focus adjustment point]

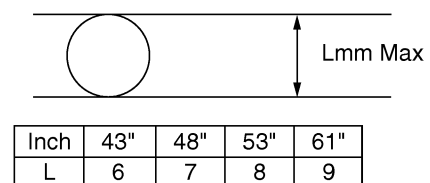

Inch	43"	48"	53"	61"
L	6	7	8	9

Fig. 3-9

3-9. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER

By using Remote Commander (RM-Y906), all circuit adjustments can be made.

NOTE : Test Equipment Required.


1. Pattern Generator (with component outputs)
2. Frequency counter
3. Digital multimeter
4. Audio oscillator

1. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

SERVICE MODE PROCEDURE


1. Standby mode. (Power off)
2. **DISPLAY** → **5** → **VOL (+)** → **TV POWER**
on the Remote Commander.
(Press each button within a second.)

SERVICE MODE ADJUSTMENT

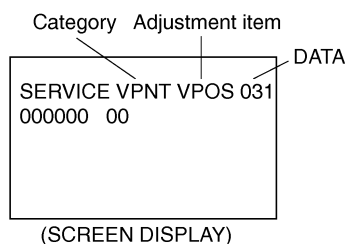

3. The SCREEN displays the item being adjusted.
4. Press **1** or **4** on the Remote Commander to select the adjustment item.
5. Press **3** or **6** on the Remote Commander to change the data.
6. Press **2** or **5** on the Remote Commander to select the category.

Every time you press 2(Category up), Service mode changes in the order as shown below.

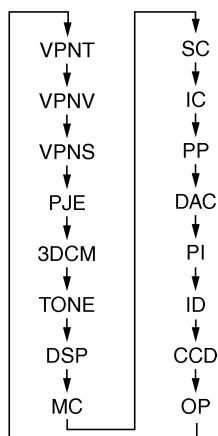

7. If you want to recover the latest values press **0** then **ENTER** to read the memory.

8. Press **MUTING** then **ENTER** to write into memory.


9. Turn power off.

Note: Press **8** then **ENTER** on the Remote Commander to initialize or turn set off and on to exit.

2. MEMORY WRITE CONFIRMATION METHOD

1. After adjustment, remove the plug from AC outlet, and then replace the plug in AC outlet again.
2. Turn the power switch ON and set to Service Mode.
3. Call the adjusted items again and confirm they were adjusted.

3. ADJUSTING BUTTONS AND INDICATOR

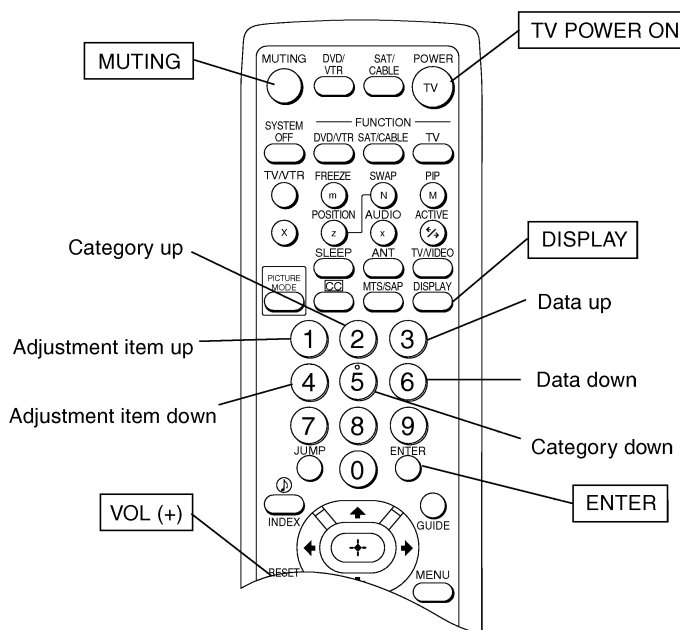

RM-Y906

Note : When the PJE mode is activated, which displays an internally generated signal, several buttons on the remote commander will have different functions than listed above. Therefore, when in the PJE mode, refer to page 43 for button functions.

4. SERVICE MODE LIST

Note: • • shaded items are fixed. There is no need to change data. Others are different a little in the sets individually. Basically, there is no need to change data, too.
• Usually, there is no need to adjust except for VPNT and PJE. Use data as a reference in case of replacing printed circuit boards or devices.

VPNT (Video Processor NTSC)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	VPOS	0-63	31	V POSITION
1	VSIZE	0-63	31	V SIZE
2	VCOM	0-3	0	V COMP
3	VLIN	0-15	7	V LINEARITY
4	VSCO	0-15	7	V SCURVE CORRECTION
5	HPOS	0-15	7	H POSITION
6	HSIZ	0-63	31	H SIZE
7	PAMP	0-63	31	PIN AMP
8	UPIN	0-15	7	UPPER CORNER PIN DISTORTION
9	LPIN	0-15	7	LOWER CORNER PIN DISTORTION
10	PPHA	0-15	5	PIN PHASE
11	AFC	0-3	2	AFC LOOP GAIN
12	VBOW	0-15	7	V BOW
13	VANG	0-15	7	V ANGLE
14	REF	0-3	3	REFERENCE PULSE POSITION
15	RDRV	0-63	31	RED DRIVE GAIN
16	BDRV	0-63	31	BLUE DRIVE GAIN
17	RCUT	0-15	7	RED CUTOFF
18	BCUT	0-15	7	BLUE CUTOFF
19	SCON	0-15	7	SUB CONTRAST
20	SHUE	0-15	7	SUB HUE
21	SCOL	0-15	7	SUB COLOR
22	CDM2	0,1	0	COUNT DOWN MODE2
23	DPIX	0,1	1	DYNAMIC PICTURE
24	NOTC	0,1	0	Y CHROMA TRAP
25	CROM	0-15	7	CHROMA TRAP F0
26	TOT	0,1	0	CHROMA TOT FILTER
27	SHPF	0-3	3	SHARPNESS F0
28	RON	0,1	1	RED ON
29	GON	0,1	1	GREEN ON
30	BON	0,1	1	BLUE ON
31	DCOL	0,1	1	DYNAMIC COLOR
32	CDMD	0,1	0	V COUNT DOWN
33	LBLK	0-15	13	LEFT-SIDE BLANK WIDTH
34	RBLK	0-15	13	RIGHT-SIDE BLANK WIDTH
35	PREC	0-3	1	PRE OVER LEVEL FOR COMP. V IN
36	PREY	0-3	1	PRE OVER LEVEL FOR Y IN

VPNV (Video Processor NTSC Vivid)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	SBRV	0-63	27	SUB BRIGHTNESS FOR VIVID
1	GMV	0-3	2	GAMMA LEVEL FOR VIVID
2	YDCV	0,1	1	Y-DC TRANSFER RATIO FOR VIVID
3	ABLV	0,1	1	ABL MODE FOR VIVID
4	AXIV	0,1	0	AXIS R-Y,G-Y FOR VIVID

VPNS (Video Processor NTSC Standard)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	SBR	0-63	27	SUB BRIGHTNESS FOR STANDARD
1	GM	0-3	2	GAMMA LEVEL FOR STANDARD
2	YDC	0,1	0	Y-DC TRANSFER RATIO FOR STANDARD
3	ABL	0,1	1	ABL MODE FOR STANDARD
4	AX	0,1	0	AXIS R-Y,G-Y FOR STANDARD

3DCM (3D Comb Filter)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	NRMD	0-3	0	NOISE REDUCER MODE
1	DYCO	0-15	2	ΔY CORING LEVEL SETTING
2	DYGA	0-15	10	ΔY GAIN SETTING
3	DCCO	0-15	5	ΔC CORING LEVEL SETTING
4	DCGA	0-15	5	ΔC GAIN SETTING
5	SELD	0,1	1	SELECT ΔY SIGNAL FILTER
6	D2GA	0-7	4	ΔY/C 2nd GAIN SETTING
7	VTRH	0-3	1	VTR HSYNC HYSTERESIS SETTING
8	VTRR	0-3	1	VTR HSYNC REFERENCE SETTING
9	LDSR	0-3	2	LD SIGNAL REFERENCE
10	VAPG	0-7	5	V APERTURE GAIN
11	VAPI	0-31	11	V APERTURE INVERT POINT
12	YPFT	0-3	0	Y PEAKING FILTER TAP
13	YPFG	0-15	9	Y PEAKING FILTER GAIN
14	VIPS	0-3	2	VERTICAL 1-LINE SELECTOR
15	VEGS	0-3	1	VERTICAL EDGE SELECTOR
16	CC3N	0,1	0	C SIGNAL 3-LINE COM FILTER
17	HDP	0-7	4	HD HORIZONTAL PHASE
18	CDL	0-7	4	C DELAY
19	HSSL	0-15	12	H SYNC SLICE LEVEL
20	VSSL	0-15	8	V SYNC SLICE LEVEL
21	HPLF	0,1	1	H PLL FILTER
22	BPLF	0,1	0	BURST PLL FILTER
23	FSCF	0,1	1	FSC FILTER GAIN
24	PLFG	0,1	1	PLL FILTER GAIN
25	EXAD	0,1	1	EXTERNAL AD IN
26	MSS	0,1	0	FORCED MOTION SIGNAL
27	COUT	0-3	2	C SIGNAL OUTPUT
28	YAPS	0-3	1	Y APERTURE
29	NSDS	0-3	0	NON STD SIGNAL DETECT.
30	CPP	0-3	0	CLAMP PULSE & AD RANGE
31	YHCO	0-3	1	Y HIGH FREQ SIGNAL CORING
32	YPCO	0,1	0	Y PEAK FILTER CORING OFF
33	KILR	0-15	3	KILLER REFERENCE
34	BGPS	0-15	4	BGP START POSITION
35	BGPW	0-15	10	BGP WIDTH
36	ADCL	0-3	2	AD CLOCK DELAY
37	PWRF	0,1	0	PULSE WIDTH REFERENCE
38	YHCG	0,1	0	Y HIGH FREQ SIGNAL CORING 1/2 GAIN
39	CKG2	0,1	1	CLOCK GENERATOR TEST BIT
40	CKGE	0,1	0	CLOCK GENERATOR TEST BIT

PJE (Projection TV Engine)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	FDIS	0,1	0	SELECT REGI DATA DISPLAY OF FINE ADJ
1	OSDH	1-255	31	PJED SERVICE MENU H POSITION
2	OSDV	1-255	25	PJED SERVICE MENU V POSITION
3	FVST	0-255	25	LINE NUMBER OF FINE ADJUST START
4	VIST	0-255	0	V1 START DATA
5	V1CU	0-255	62	V1 COUNT UP DATA
6	COIP	0-255	0	H1 PHASE OF ROUGH ADJ
7	FHIP	0-255	194	H1 PHASE OF FINE ADJ
8	TPHP	0-255	62	H1 PHASE OF TEST PATTERN
9	DFHP	0-255	225	H1 PHASE OF DYNAMIC FOCUS
10	DFHG	-128-127	-80	H1-2 GAIN OF DYNAMIC FOCUS
11	DFVG	-128-127	-15	V-2 GAIN OF DYNAMIC FOCUS
12	PWM1	0-255	0	PWM1
13	PWM2	0-255	32	H1 PHASE OF AUTO REGI .TEST PATTERN
14	HBLD	0-255	244	H1 PHASE OF RETURNED BLUE V LINE
15	HBLW	0-63	23	PULSE WIDTH OF RETURNED BLUE V LINE
16	BLKP	0-255	27	START BLANK PULSE
17	COGV	-128-127	X(*1)	GREEN V CENT OFFSET DATA OF AUTO REGI
18	CORV	-128-127	X(*1)	RED V CENT OFFSET DATA OF AUTO REGI
19	COBV	-128-127	X(*1)	BLUE V CENT OFFSET DATA OF AUTO REGI
20	COGH	-128-127	X(*1)	GREEN H CENT OFFSET DATA OF AUTO REGI
21	CORH	-128-127	X(*1)	RED H CENT OFFSET DATA OF AUTO REGI
22	COBH	-128-127	X(*1)	BLUE H CENT OFFSET DATA OF AUTO REGI
23	SOGV	-128-127	X(*1)	GREEN V SKEW OFFSET DATA OF AUTO REGI
24	SORV	-128-127	X(*1)	RED V SKEW OFFSET DATA OF AUTO REGI
25	SOBV	-128-127	X(*1)	BLUE V SKEW OFFSET DATA OF AUTO REGI
26	SOGH	-128-127	X(*1)	GREEN H SKEW OFFSET DATA OF AUTO REGI
27	SORH	-128-127	X(*1)	RED H SKEW OFFSET DATA OF AUTO REGI
28	SOBH	-128-127	X(*1)	BLUE H SKEW OFFSET DATA OF AUTO REGI
29	ERR	FIXED	0	AUTO REGI ERROR CODE
30	ADTM	0-255	144	TIMING TO GET A/D DATA OF AUTO REGI
31	VUP	1-255	1	AUTO REGI PATTERN UPPER V POSITION
32	VMD	1-255	102	AUTO REGI PATTERN MIDDLE V POSITION
33	VLOW	1-255	212	AUTO REGI PATTERN LOWER V POSITION
34	HPR	1-510	1	AUTO REGI PATTERN H POSITION
GRN	CENT	-512-511	000 / 000	GREEN H/V CENT
	SKEW	-512-511	000 / 000	GREEN H/V SKEW
	SIZE	-512-511	-70/-190	GREEN H/V SIZE
	LIN	-512-511	xxxx / xxxx	GREEN H/V LIN
BLU	KEY	-512-511	xxxx / xxxx	GREEN H/V KEY
	PIN	-512-511	xxxx / 271	GREEN H/V PIN
	CENT	-512-511	000 / 000	BLUE H/V CENT
	SKEW	-512-511	080 / -130	BLUE H/V SKEW
RED	SIZE	-512-511	-20 / -226	BLUE H/V SIZE
	LIN	-512-511	187 / xxxx	BLUE H/V LIN
	KEY	-512-511	xxxx / -115	BLUE H/V KEY
	PIN	-512-511	xxxx / 198	BLUE H/V PIN
RED	CENT	-512-511	000 / 000	RED H/V CENT
	SKEW	-512-511	080 / -130	RED H/V SKEW
	SIZE	-512-511	-61 / -206	RED H/V SIZE
	LIN	-512-511	195 / xxxx	RED H/V LIN
RED	KEY	-512-511	xxxx / 124	RED H/V KEY
	PIN	-512-511	xxxx / 250	RED H/V PIN

* 1 : Set correctly by the automatic registration adjustment.

xxxx : Cannot change.

SC (Sub Chroma Decoder)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	RBAS	0-63	39	RESET VALUE OF USER BASS DATA
1	RTRE	0-63	35	RESET VALUE OF USER TREBLE DATA
2	BBEH	0-15	-	BBE HIGH FREQUENCY
3	BBEL	0-11	-	BBE LOW FREQUENCY
4	SUFE	7	-	SURROUND EFFECT

DSP (Digital Signal Processor)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	TB0H	0-255	48	TRUSURROUND EFFECT (L+R) COARSE
1	TB0L	0-255	0	TRUSURROUND EFFECT (L+R) FINE
2	TB1H	0-255	64	TRUSURROUND EFFECT (L-R) COARSE
3	TB1L	0-255	0	TRUSURROUND EFFECT (L-R) FINE
4	TB2H	0-255	64	TRUSURROUND EFFECT (C) COARSE
5	TB2L	0-255	0	TRUSURROUND EFFECT (C) FINE
6	TBFH	0-255	165	TRUSURROUND EFFECT (S) COARSE
7	TBFL	0-255	126	TRUSURROUND EFFECT (S) FINE
8	TC0H	0-255	90	TRUSURROUND EFFECT (S) COARSE
9	TC0L	0-255	130	TRUSURROUND EFFECT (S) FINE
10	TC1H	0-255	11	TRUSURROUND EFFECT (L-R) COARSE
11	TC1L	0-255	100	TRUSURROUND EFFECT (L-R) FINE
12	SADH	0-255	64	SRS SPACE LEVEL COARSE
13	SADL	0-255	0	SRS SPACE LEVEL FINE
14	SB0H	0-255	92	SRS CENTER LEVEL COARSE
15	SB0L	0-255	0	SRS CENTER LEVEL FINE

MC (Main Chroma Decoder)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	MYDR	0-31	22	MAIN Y DRIVE
1	MSHU	0-63	31	MAIN SUB HUE
2	MSCL	0-63	31	MAIN SUB COLOR
3	MUPD	0-15	7	MAIN U PEDESTAL OFFSET
4	MVPD	0-15	7	MAIN V PEDESTAL OFFSET
5	MDLY	0-3	0	MAIN Y DELAY
6	MU2P	0-15	7	MAIN U2 PEDESTAL OFFSET
7	MV2P	0-15	7	MAIN V2 PEDESTAL OFFSET
8	MY2D	0-31	19	MAIN Y2 DRIVE
9	MV2D	0-31	11	MAIN V2 DRIVE
10	MV2D	0-31	11	MAIN V2 DRIVE
11	MPRE	0-3	3	MAIN PRE-OVER

IC (Inset Chroma Decoder)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	SYDR	0-31	28	SUB Y DRIVE
1	SSHU	0-63	31	SUB SUB HUE
2	SSCL	0-63	31	SUB SUB COLOR
3	SUPD	0-15	7	SUB U PEDESTAL OFFSET
4	SVPD	0-15	7	SUB V PEDESTAL OFFSET
5	SDLY	0-3	0	SUB Y DELAY
6	SU2P	0-15	7	SUB U2 PEDESTAL OFFSET
7	SV2P	0-15	7	SUB V2 PEDESTAL OFFSET
8	SY2D	0-3	20	SUB Y2 DRIVE
9	SU2D	0-15	11	SUB U2 DRIVE
10	SV2D	0-15	11	SUB V2 DRIVE
11	SPRE	0-3	3	SUB PRE-OVER

PP (Picture In Picture Vseries Only)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	PCDR	0-15	7	PIP COLOR
1	PHDR	0-15	7	PIP HUE
2	PAFC	0-3	2	PIP AFC LOOP GAIN
3	PTAD	0-15	7	PIP TRAP F0 ADJUSTMENT
4	PTOT	0,1	0	PIP CHROMA TOT FILTER
5	PSCN	0-15	7	PIP SUB CONTRAST
6	PYDC	0-7	0	PIP Y DC TRAN
7	PSHP	0,1	1	PIP SHARPNESS F0
8	PMSK	0,1	0	PIP MACRO VISION MASK

PP (Picture In Picture Vseries Only)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	BGHP	0-15	10	PIP H POSITION
1	BGHN	0-15	7	PIP H POSITION FOR NO SIGNAL
2	BGVP	0-15	7	PIP V POSITION
3	6BIT	0,1	1	6BIT(SMART6/SKIP6) MATRIX
4	MAHP	0-15	7	MAIN H ACQUISITION
5	MAVP	0-255	23	MAIN V ACQUISITION
6	SAHP	0-15	7	SUB H ACQUISITION
7	SAVP	0-255	23	SUB V ACQUISITION
8	DECS	0-31	18	SUB DECODER REGISTERS
9	DECM	0-31	18	MAIN DECODER REGISTERS
10	DIS	0-127	66	DISPLAY SETTING
11	BSIZ	0-15	2	BORDER SIZE
12	VPED	0-15	13	V PEDESTAL OFFSET
13	UPED	0-15	13	U PEDESTAL OFFSET

DAC (D/A Converter)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	UVSH	0-63	31	YUV SUB HUE
1	UVSC	0-63	31	YUV SUB COLOR

PI (Picture In Picture S Series only)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	PIPH		-	PIP H POSITION
1	PIPV		-	PIP V POSITION
2	PYSD		-	PIP SELECT DELAY
3	PYDL		-	PIP Y DELAY
4	PHDL		-	H-PULSE DELAY
5	PMVD		-	MAIN V-PULSE DELAY
6	PVID		-	INSET V-PULSE DELAY
7	PCON		-	INSET CONTRAST
8	FRMY		-	FRAME Y
9	IPER		-	PIP PEDESTAL R-Y
10	IPEB		-	PIP PEDESTAL B-Y
11	PCPS		-	PIP CLP
12	PCPF		-	PIP CLP CYCLES
13	PPLL		-	PIP PLL TIME CONSTANT
14	PVNR		-	PIP VSP PULSE NOISE REDUCTION

ID (Identification)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	AREA	0-3	0	AREA ID
1	SERS	0-3	0	SERIES ID
2	VCHIP	0-3	0	V CHIP ID

CCD (Closed Caption Decoder)


ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	CCHIP	0-63	39	OSD H POSI FOR INDEX & CC/XDS
1	CCHN	0-63	29	NO FUNCTION

OP (Option)

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	DISP	0-63	9	OSD H POSITION
1	FWI	0-7	2	FIELD1 WINDOW
2	FW2	0-7	3	FIELD2 WINDOW

3-10. REGISTRATION ADJUSTMENT (PJE)

• FUNCTION OF BUTTONS OF REMOTE COMMANDER FOR PJE MODE.

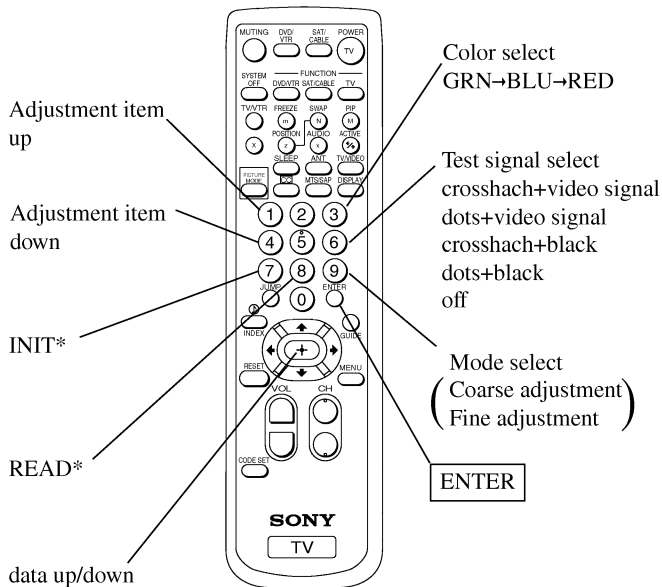


INIT*: Press 7, "INIT" green letters appear on the screen.
Then press ENTER, all the PJE data are reset.

READ*: Press 8, "READ" green letters appear on the screen.
Then press ENTER, all the PJE default data are restored.

Note: Internal patterns are used for geometry and convergence adjustments. However, sizing and centering must be done with the use of an external generator. The recommended pattern would be a monoscope, or equivalent pattern, which would provide the means to adjust both the linearity and sizing of the picture.

[SETUP FOR ADJUSTMENT]

- Current flow in circuit should be stable before attempting adjustment. So wait 5 minutes after turning on the TV power.
- At the 4 insides of the screen, locate the middle. Use a tape measure to identify the middle.

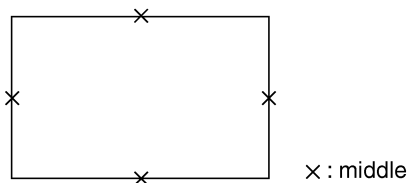

- Set to the service mode by pressing quickly keys on the remote commander in the standby mode in the following order:

[DISPLAY] → [5] → [VOL+] → [TV POWER]

- Change TV mode to the video input mode.
- Change the VPNT mode to the PJE 00 FDIS.

PJE	00	00
FDIS	I	

- Set FDIS data to "01" to display the registration data of each spot in the fine adjustment.

PJE	00	01
FDIS	I	

- Press [6] to display the test signal (crosshatch) on the screen.
- Select GRN CENT(*) with the [1] and [4] keys on the remote commander and check that the adjustment data is now "000" both vertically and horizontally.

	(H)	(V)
GRN	000	000
CENT		

*: In the factory preset, "GRN CENT" appears on the screen first.
In case of other colors "RED" or "BLU", change color by every pressing [3] key.

- Cover the both red and blue picture lenses with the lens caps to show only the green color.

SUB DEFLECTION ADJUSTMENT ITEM


Adjustment O : Yes - : No

Display	Adjustment item	Adjustment type		
		G	R	B
		H/V	H/V	H/V
CENT	CENT	O/O	O/O	O/O
SKEW	SKEW	O/O	O/O	O/O
SIZE	SIZE	-/-	O/O	O/O
LIN	LIN	-/-	O/-	O/-
KEY	KEY	-/-	-/O	-/O
PIN	PIN	-/O	-/O	-/O

[GREEN REGISTRATION ADJUSTMENT]


<GREEN CENTER>

1. Select GRN CENT [1] and [4] keys on the remote commander.
2. Adjust the center of crosshatch line goes the middle vertically and horizontally (GRN CENT) with the joystick on the remote commander.

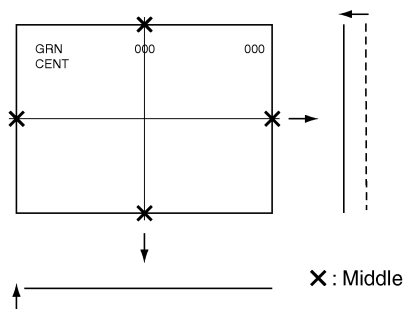


<GREEN SKEW>

1. Select GRN SKEW with the [1] and [4] keys on the remote commander.
2. Adjust the crosshatch line goes straight vertically and horizontally with the joystick on the remote commander.

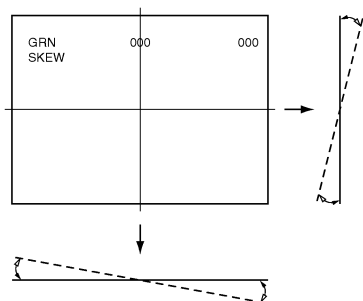

<GREEN PINCUSHION>

1. Select GRN PIN with the [1] and [4] keys on the remote commander.
2. Adjust the crosshatch line goes straight horizontally with the joystick on the remote commander.

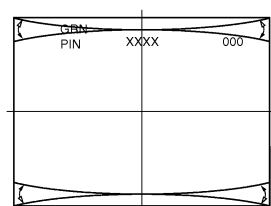


Note : These are required when either severe miss-adjustment or data loss occurred.


<FINE ADJUSTMENT>

1. Press [9] key on the remote commander to shift to the fine adjustment mode.
The green cursor (in the GRN mode) appears on the center of the screen.
2. Use the [1] and [4] keys or the joystick on the remote commander, move the cursor (see below) everywhere you want to adjust and adjust with the joystick keys on the remote commander.


Marker movement by the [1] and [4] keys:

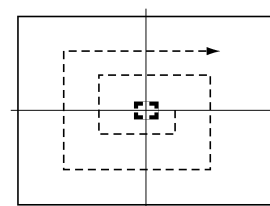

Press once the joystick the cursor turns green to white. Then you can move the cursor up and down left and right everywhere you want.

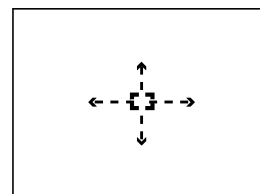

Press once the joystick the cursor stops and returns green, you can adjust around the cursor.

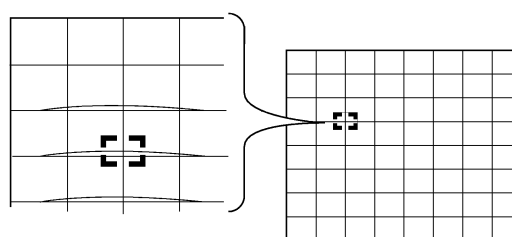

3. Press [9] key on the remote commander to shift to the coarse adjustment mode.

[RED REGISTRATION ADJUSTMENT]

<RED CENTER, SKEW>

1. Cover the blue picture lens with the lens cap to show the green and red colors.
2. Press **[3]** key on the remote commander to shift the GRN mode to the RED mode.
3. Select RED CENT or RED SKEW with the **[1]** and **[4]** keys on the remote commander and adjust while tracking each other alternately.
4. Adjust the red crosshatch lines go straight vertically and horizontally and overlaps the green lines with the joystick on the remote commander.

<RED SIZE, LINEARITY>

1. Select RED SIZE (vertically and horizontally) or RED LIN (vertically) with the **[1]** and **[4]** keys on the remote commander and adjust while tracking each other alternately.
2. Adjust the red crosshatch lines go straight vertically and horizontally and overlaps the green lines with the joystick on the remote commander.

<RED KEY, PINCUSHION>

1. Select RED KEY or PINCUSHION with the **[1]** and **[4]** keys on the remote commander and adjust while tracking each other alternately.
2. Adjust the red crosshatch lines go straight horizontally and overlaps the green lines with the joystick on the remote commander.

Note : These are required when either severe miss-adjustment or data loss occurred.

<FINE ADJUSTMENT>

1. Press **[9]** key on the remote commander to shift to the fine adjustment mode.
The red cursor (in the RED mode) appears on the center of the screen.
2. Use the **[1]** and **[4]** keys or the joystick on the remote commander, move the cursor everywhere you want to adjust and adjust with the joystick on the remote commander.

[BLUE REGISTRATION ADJUSTMENT]

1. Remove the lens cap from the blue picture lens to show full color.
2. Press **[3]** key on the remote commander to shift the RED mode to the BLU mode.
3. Adjust BLU CENT, BLU SKEW, BLU SIZE, BLU LIN, BLU KEY and BLU PIN in the same procedure of the red registration adjustment.

[FINAL CHECK]

1. Store the new adjustment (offset) value on the remote control by pressing **[MUTING]** and **[ENTER]**.
2. Press the FLASH FOCUS button on the front panel.
(The Offset value is now automatically stored.)
3. Check that no error message appears.
If an error message appears, recheck.

Note: In case of replacing CRTs, adjust the set-up adjustments (items 3-1 to 3-8) and the registration adjustment (item 3-10).
In case of replacing two or three CRTs at the same time, replace and adjust one by one.

3-11. AUTO REGISTRATION ERROR CODE LIST


If an error code is displayed after the set has been fully adjusted, correctly, please check the following items: position, tilt and sizing. If either of these adjustments are off, even slightly, the auto-registration pattern will not hit the four sensors properly. This occurs when the internal generator patterns is being flashed on the screen for the sensors to read. Therefore, auto registration (called auto-focus) cannot operate properly causing an error code to be displayed. In order for this function to operate properly, correct position, tilt and size must be adjusted properly.

[ERROR CODE LIST]

ERROR CODE	DISCRIPTION	NOTE
00	No Error	
10	Sensor Output Level Low	* Check wiring, beam position, sensor. 0 : Upper Center 1 : Middle Left 2 : Middle Right 3 : Lower Center
20	Sensor Output Level High	* Check OP-amp circuit. 0 : Upper Center 1 : Middle Left 2 : Middle Right 3 : Lower Center
30	Adjustment Loop Counter Overflow	* Check the registering information on the convergence board.
40	Regi Data Overflow	* Check the convergence yoke driver ICs.
50	Regi Data Overflow	
60	Offset Overflow	* Convergence patterns displayed are out of normal range.
70	Offset Overflow	


* In case of multiple error, last error is displayed.

• ERROR CODE SCREEN DISPLAY

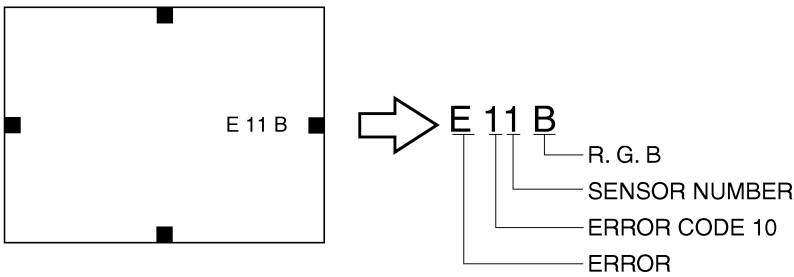


* Error code will be displayed on center of screen for 3 seconds.

[SENSOR POSITION]

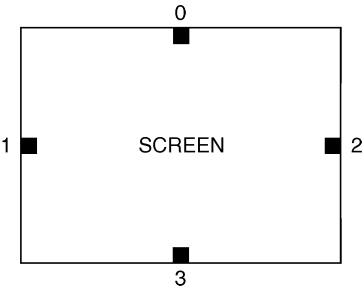

- 0 : UPPER SENSOR
- 1 : LEFT SENSOR
- 2 : RIGHT SENSOR
- 3 : LOWER SENSOR

• ERROR CODE DISPLAY IN REGI SERVICE MODE

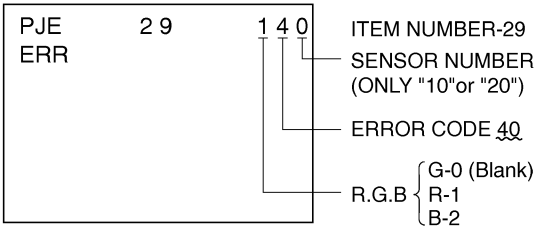


SECTION 4



SAFETY RELATED ADJUSTMENTS

**KP-43T75/48S75/
53N77/53S75/61S75**
RM-Y906

[G BOARD]

4-1. HV REGULATION CIRCUIT CHECK AND ADJUSTMENT

When replacing the following components marked with  on the schematic diagram always check HV regulation, and if necessary re-adjust.

-  : C517
-  : C517, C521, C522
IC654, L504
T502, T504 (FBT)
D.Y, A board, G board

OPERATION CHECK

1. Connect a HV static voltmeter to the unconnected plug of the high-voltage block. (Fig.4-1)
2. Power on the set.
3. Receive the dot signal. (PICTURE and BRIGHTNESS to minimum)
4. Check that the HV static voltmeter is reading 31.00 ± 1.5 kVdc.

HV Regulation adjustment

1. Connect a HV static voltmeter to the unconnected plug of the high-voltage block.
2. Power on the set.
3. Receive the dot signal. (PICTURE and BRIGHTNESS to minimum)
4. If anode voltage is 31.95kV or higher, replace C517 of 470PF/2kV with that of 1000PF/2kV, and check if the voltage is within the standard range.
5. If anode voltage is 29.45kV or lower, replace C517 of 470PF/2kV with that of 100PF/2kV, and check if the voltage is within the standard range.

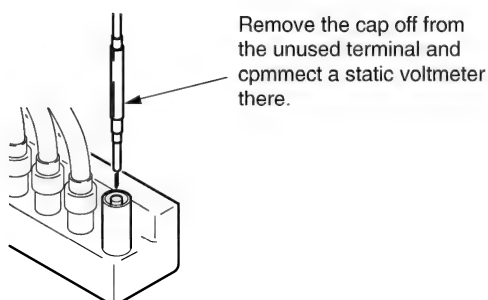





Fig. 4-1

4-2. HV HOLD DOWN CIRCUIT OPERATION CHECK AND ADJUSTMENT

When replacing the following components marked with  on the schematic diagram always check hold-down voltage and if necessary re-adjust.

-  : R536, R545
-  : C516, C536
D506, D507, D522
IC206, IC502, IC654
L504, R511, R522, R536, R538, R545,
R548, R584
T502, T504 (FBT)
D.Y, A board, G board

OPERATION CHECK

1. Remove CN652 connector.
2. Short-circuit across TP-PROT and ground.
3. Connect a HV static voltmeter to the unconnected plug of the high-voltage block.
4. Connect a 220Ω/200W variable resistor, across pin ② and pin ① of CN652 and connect an external dc power supply unit (200V, class 2A) to pin ③ of CN652.
5. First turn on the external power supply (+B=135V), then turn on the power of the set.
6. Receive the dot signal. (PICTURE and BRIGHTNESS to minimum)
7. Gradually increase the value of the external dc power supply and check that the hold-down circuit operates at a static voltmeter reading of 33.5 ± 1.0 kVdc when the raster disappears.

HV HOLD-DOWN ADJUSTMENT

1. Repeat steps ① ~ ⑦ as above.
2. If hold down voltage is 34.5kV or higher, remove R536, mount a resistor (150kΩ, 1/4W : RN) onto R545 instead, and check again if the hold-down voltage is within the standard range.
3. If hold down voltage is 32.5kV or lower, mount a resistor (220kΩ, 1/4W : RN) onto R536 and check again if the hold-down voltage is within the standard range.

NOTE : Please finish the adjustment as soon as possible

4-3. +B MAX VOLTAGE CONFIRMATION

The following adjustments should always be performed when replacing IC654.

1. Supply 130VAC to with variable autotransformer.
2. Input a dot signal.
3. Set the PICTURE control and the BRIGHTNESS controls to minimum.
4. Confirm the voltage of G BOARD TP135V is less than 137.0Vdc.
5. If step 4 is not satisfied, replace IC654 and repeat above steps.

4-4. +B OVP CONFIRMATION

1. Connect an external dc power supply to TP OVP.
2. Supply 120VAC to variable autotransformer.
3. Set PICTURE and the BRIGHTNESS controls to minimum.
4. Gradually turn the external dc power supply, and check if OVP works properly when the voltage of the external dc power supply is between 139.0 ~ 155.0V.

SECTION 5 CIRCUIT ADJUSTMENTS

**KP-43T75/48S75/
53N77/53S75/61S75**
RM-Y906

5-1. TV INPUT SUB CONTRAST ADJUSTMENT (VPNT-SCON)

1. Receive the color-bar signal.
2. Mode : Personal 1 or 2.
PICTURE : maximum
COLOR : maximum
BRIGHTNESS : center
TRINITONE : medium
SERVICE DATA VPNT SCON : 7
3. Set to service mode.
4. Connect an oscilloscope between pin ⑦ of CN204 (A board) and ground.
5. Select “VPNT-SCON”, and adjust so that the wave from level is $1.80 \pm 0.05V_{p-p}$.
6. Write the data into memory.

MUTING → **ENTER**

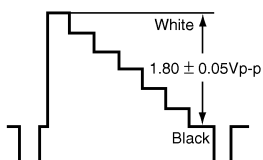


Fig. 5-1

5-2. VIDEO INPUT SUB-HUE AND SUB-COLOR ADJUSTMENT (VPNT-SHUE, SCOL)

1. Select VIDEO1 input and supply the color-bar signal.
2. Mode : Personal 1 or 2.
PICTURE : maximum
COLOR : center
BRIGHTNESS : center
TRINITONE : medium
SERVICE DATA VPNT-SHUE : 7
VPNT-SCOL : 7
3. Set to service mode.
4. Connect an oscilloscope between pin ⑤ of CN204 (A board) connector and ground.
5. Select “VPNT-SHUE, SCOL”, and adjust them to have VB1 = VB4 and VB2 = VB3 in the waveform levels.
6. Increase SCOL by 2 steps.
7. Write the data into memory.

MUTING → **ENTER**

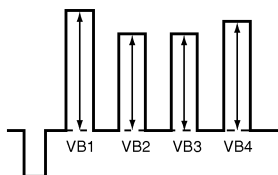


Fig. 5-2

5-3. COMPONENT INPUT SUB-HUE AND SUB-COLOR ADJUSTMENT (DAC-UVSH, UVSC)

1. Select VIDEO 4 and supply the color-bar signal.
VIDEO input
2. Mode : Personal 1 or 2.
PICTURE : maximum
COLOR : center
BRIGHTNESS : center
TRINITONE : medium
SERVICE DATA DAC UVSH : 31
DAC UVSC : 31
3. Set to service mode.
4. Connect an oscilloscope between pin ⑤ of CN204 (A board) connector and ground.
5. Select “DAC-UVSH, UVSC”, and adjust them to have VB1 = VB4 and VB2 = VB3 in the waveform levels.
6. Write the data into memory.

MUTING → **ENTER**

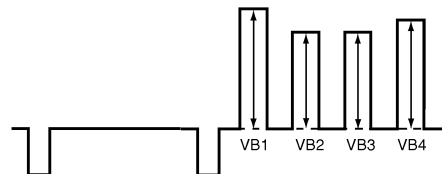


Fig. 5-3

5-4. P & P SUB CONTRAST ADJUSTMENT (SC-SYDR)

1. Receive the signal.
TV terminal (sub) : color-bar signal
VIDEO terminal (main) : no signal
2. Set to service mode and set to P & P mode.
3. Connect an oscilloscope between pin ⑦ of CN204 (A board) and ground.
4. Select “SC-SYDR”, and adjust so that the wave from level is $1.65 \pm 0.05V_{p-p}$.
5. Write the data into memory.

MUTING → **ENTER**

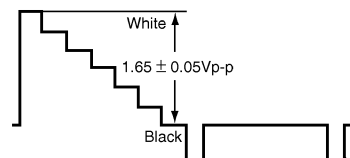


Fig. 5-4

5-5. SUB-HUE , SUB-COLOR AND MAIN CONTRAST ADJUSTMENT (MC-MYDR, MSHU, MSCL, SC-SSHU, SSCL)

1. Receive the color-bar signal.
2. Mode : Personal 1 or 2.
PICTURE : maximum
COLOR : center
BRIGHTNESS : center
TRINITONE : medium
SERVICE DATA MC-MYDR : 22
MC-MSHU : 31
MC-MSCL : 31
SC-SSHU : 31
SC-SSCL : 31
3. Set to service mode and set to P & P model .
4. Connect an oscilloscope between pin ⑤ of CN204 (A board) connector and ground.
5. Select “ MC-MYDR”, and adjust them to have VB1 = VB5 in the waveform levels.
6. Select “ MC-MSCL, SC-SSCL” and adjust so that the wave form shows VB1=VB4 and VB5=VB8.
7. Select “ MC-MSHU, SC-SSHU” and adjust so that the wave form shows VB2=VB3 and VB6=VB7.
8. Write the data into memory.

MUTING → **ENTER**

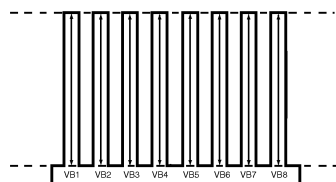


Fig. 5-5

5-6. BAR DISPLAY POSITION ADJUSTMENT (OP-DISP)

1. Receive the monoscope signal.
2. Set to service mode.
3. Push “ PICTURE +” . (Bar is displayed)
4. Select “ OP-DISP ”, and adjust so that the bar is as shown in the figure.
5. Write the data into memory.

MUTING → **ENTER**

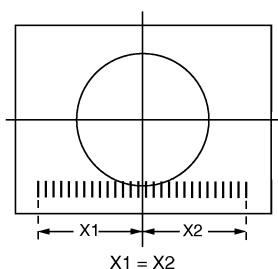


Fig. 5-6

5-7. PIP POSITION ADJUSTMENT (PI-PIPH, PIPV)

1. Set the PIP mode.
2. Receive the monoscope signal on the main/sub picture.
3. Check the sub picture position.

$$X1-X2 \leq 0.25sq$$

$$Y1-Y2 \leq 0.25sq$$

4. If necessary set to service mode and adjust "PIPH", "PIPV".
5. Write the data into memory.

MUTING → **ENTER**


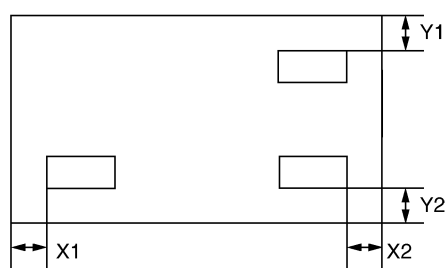


Fig. 5-7


6-1. BLOCK DIAGRAM (1)




BLOCK DIAGRAM (2)

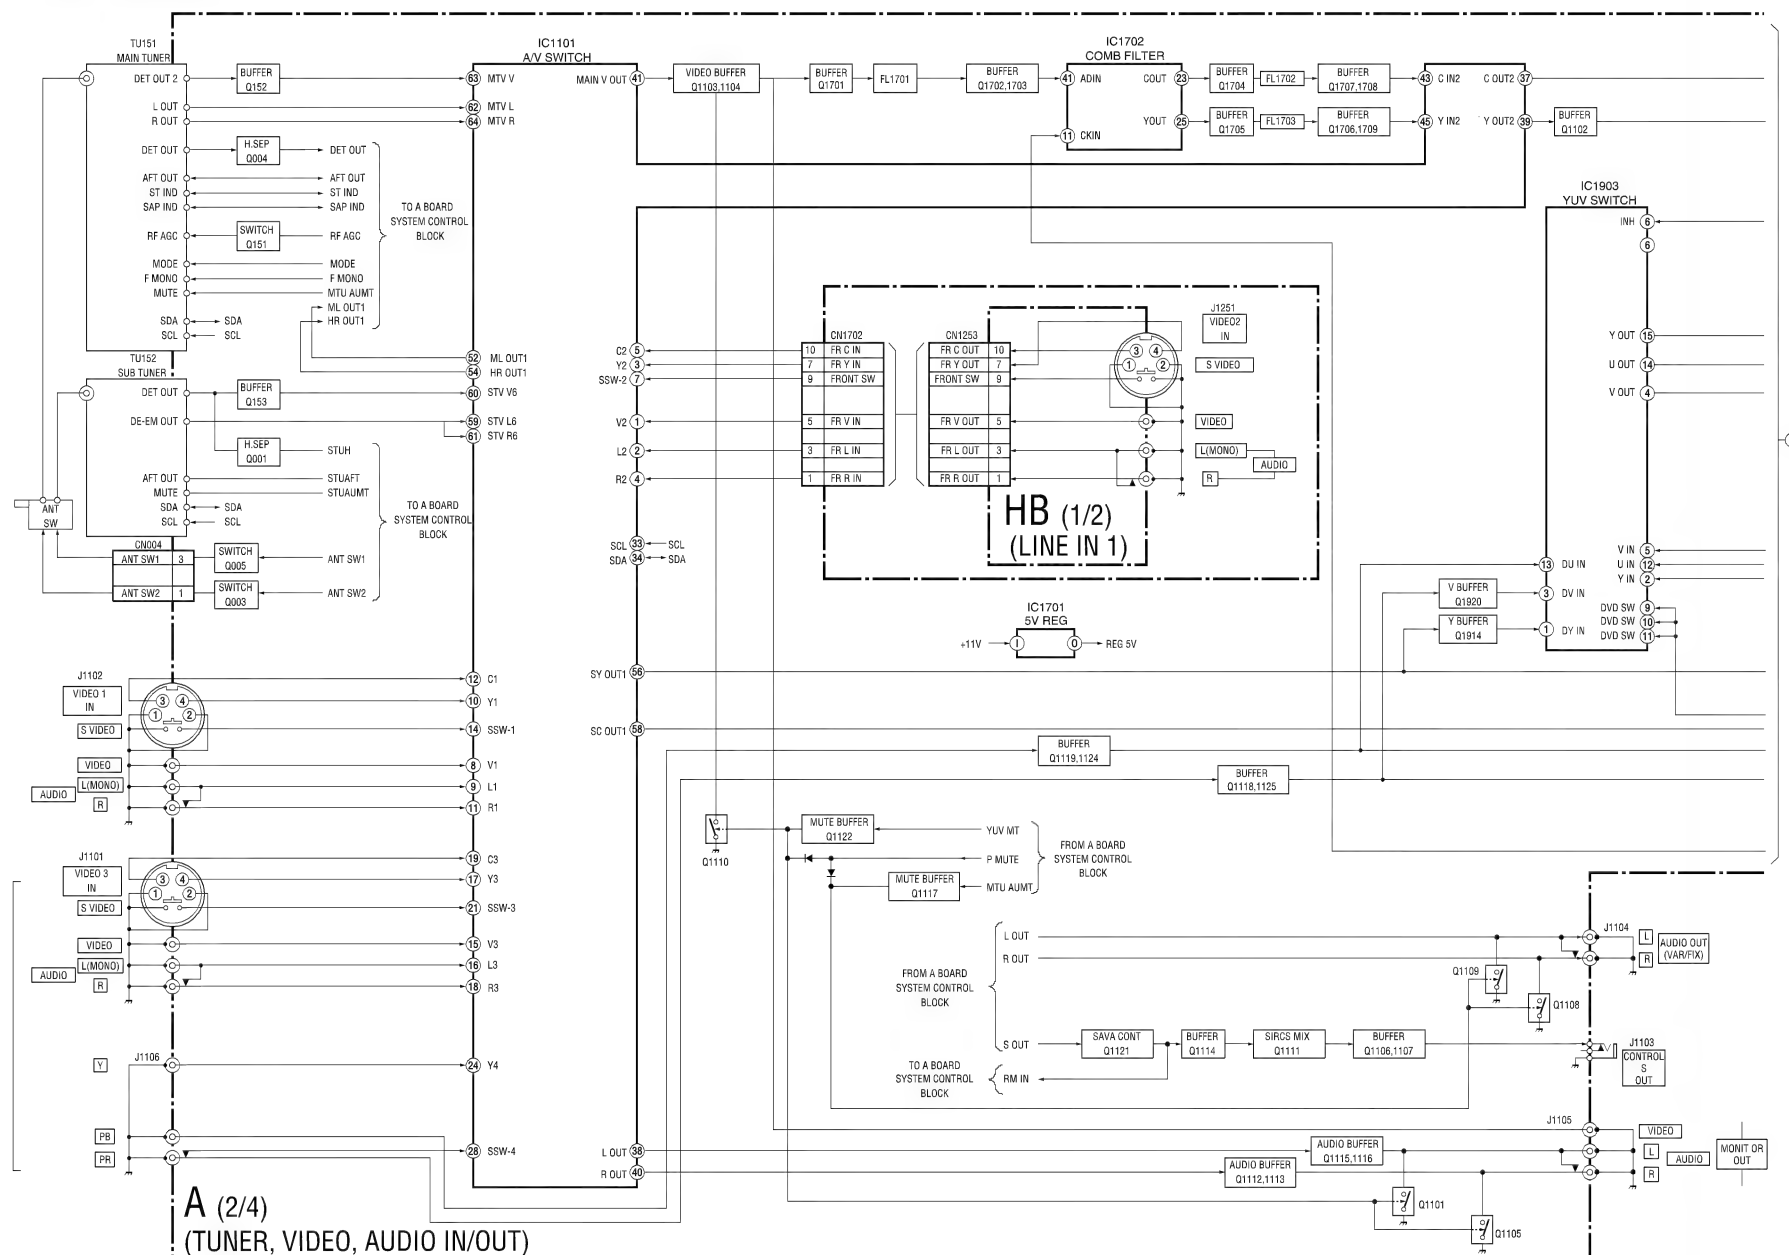




A (2/4)
(TUNER, VIDEO, AUDIO IN/OUT)

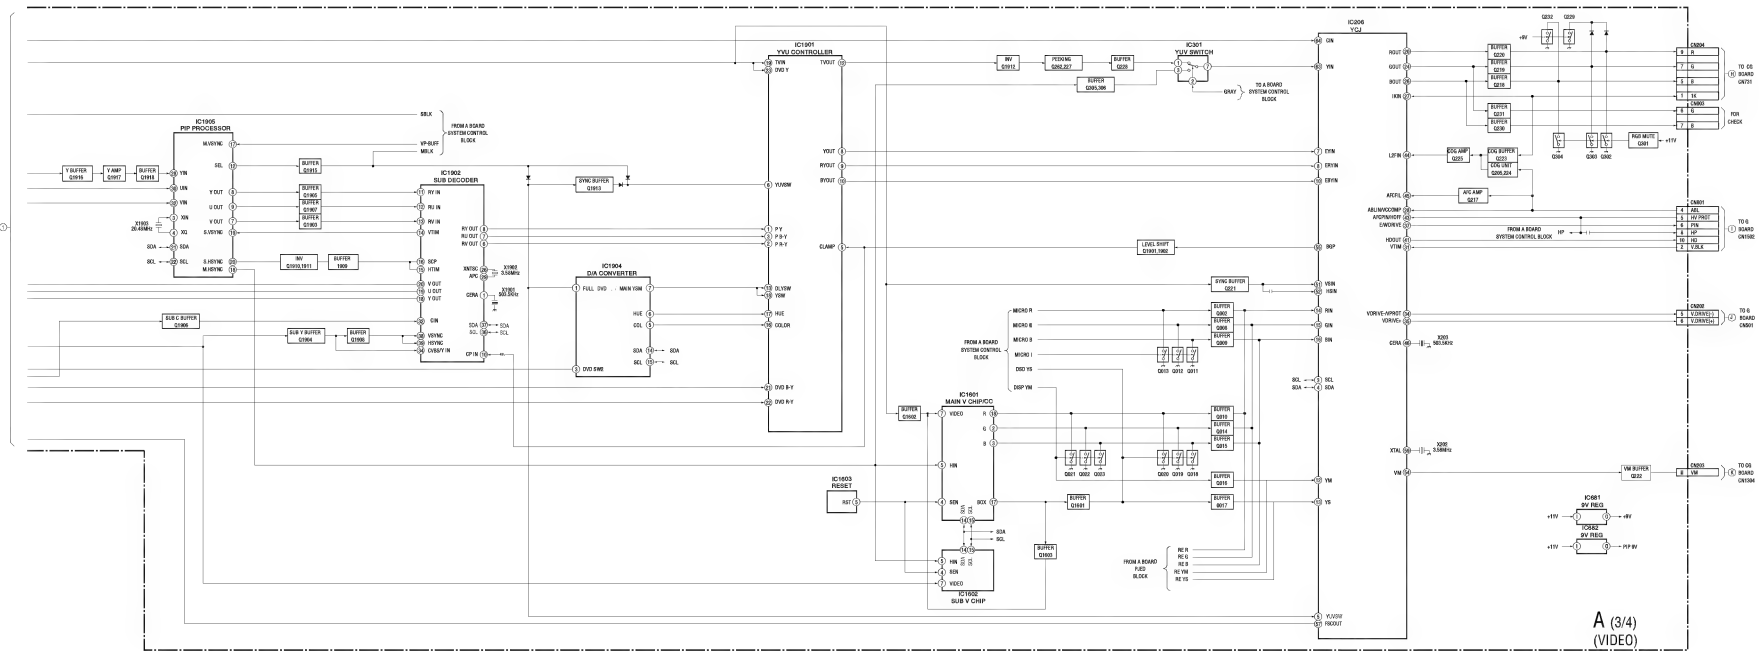


BLOCK DIAGRAM (3)

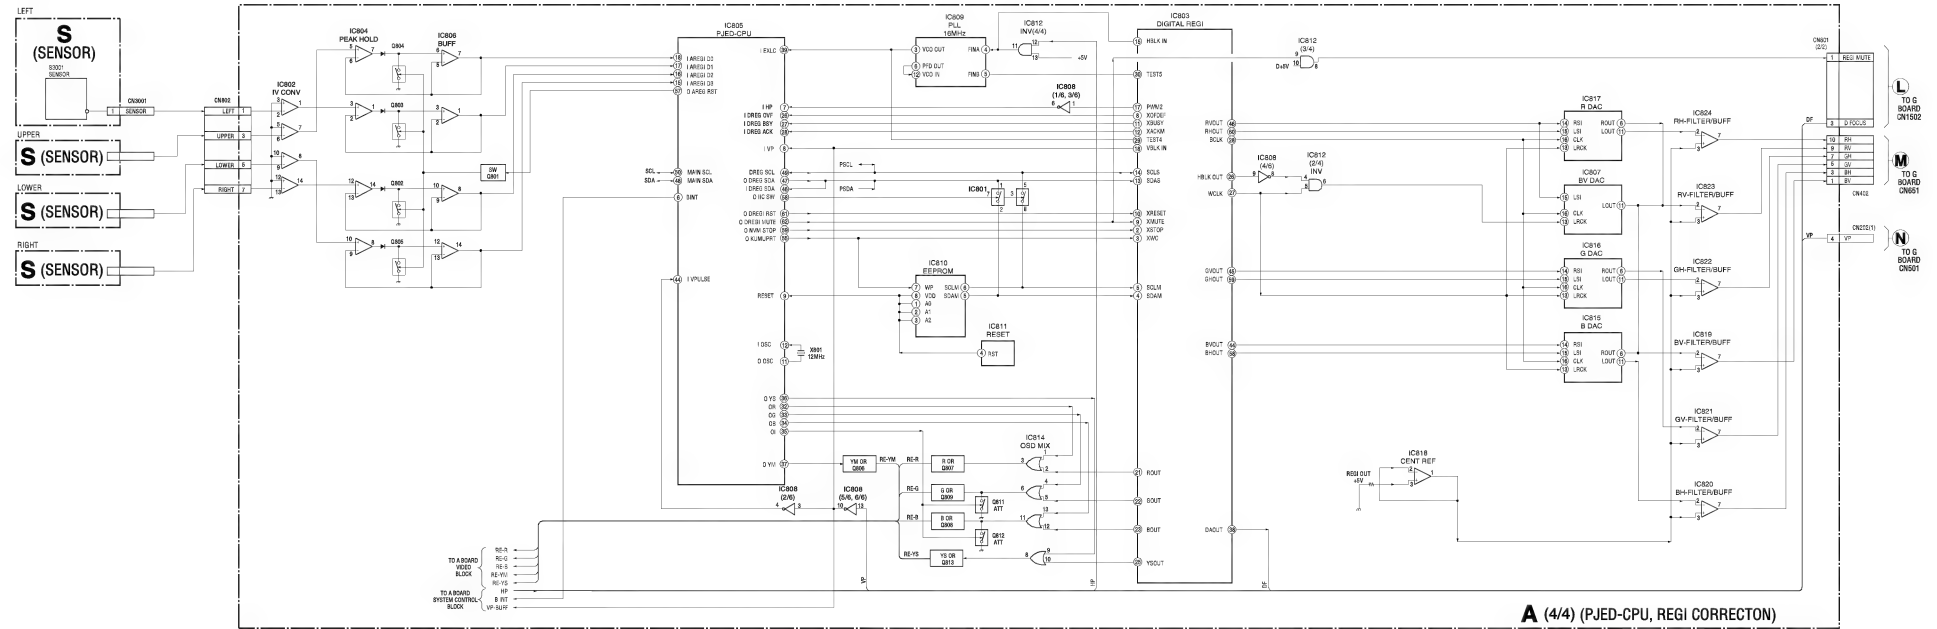

BLOCK DIAGRAM (4)

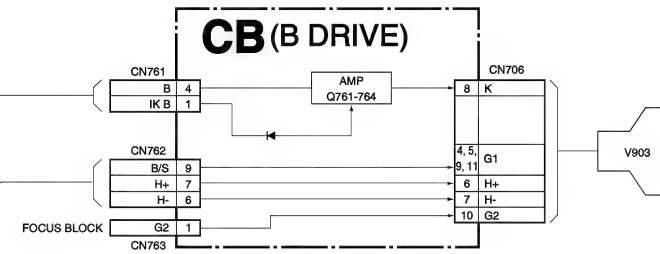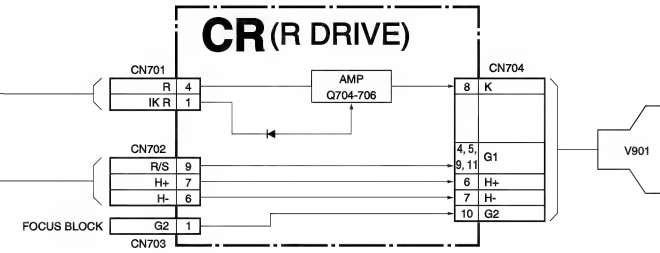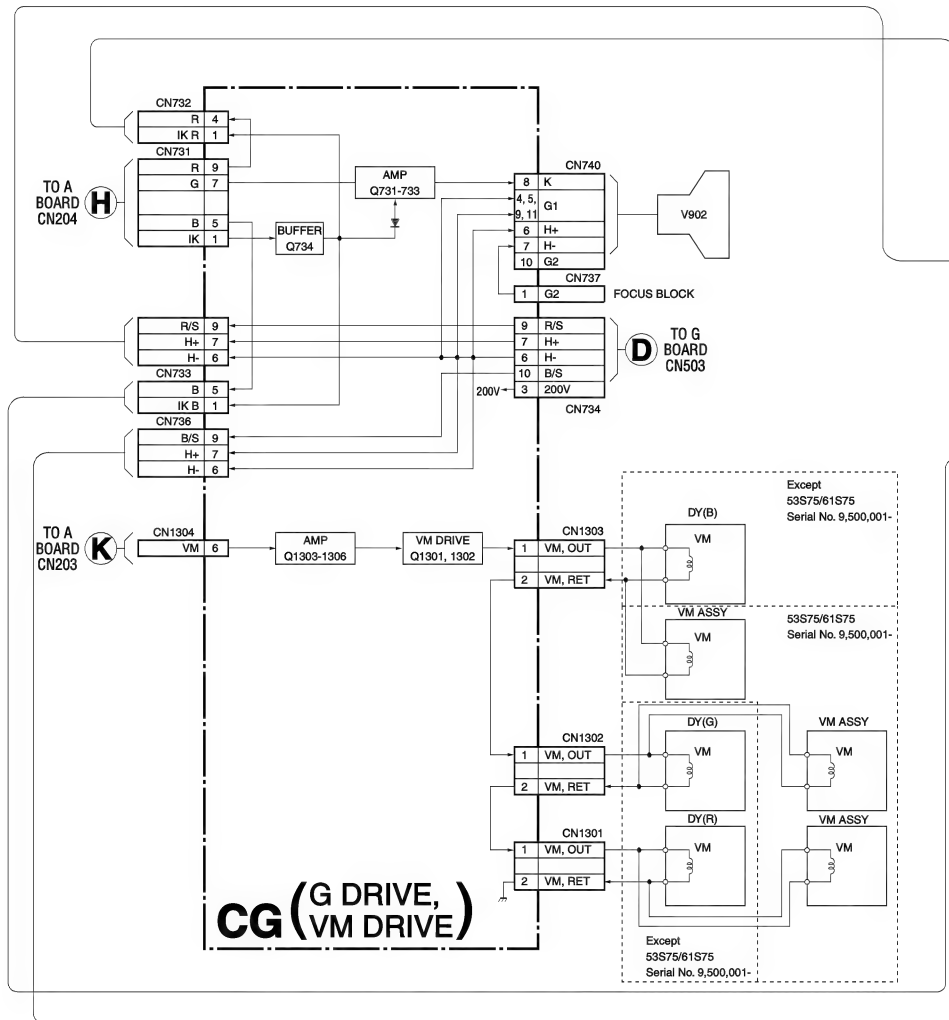

BLOCK DIAGRAM (5)

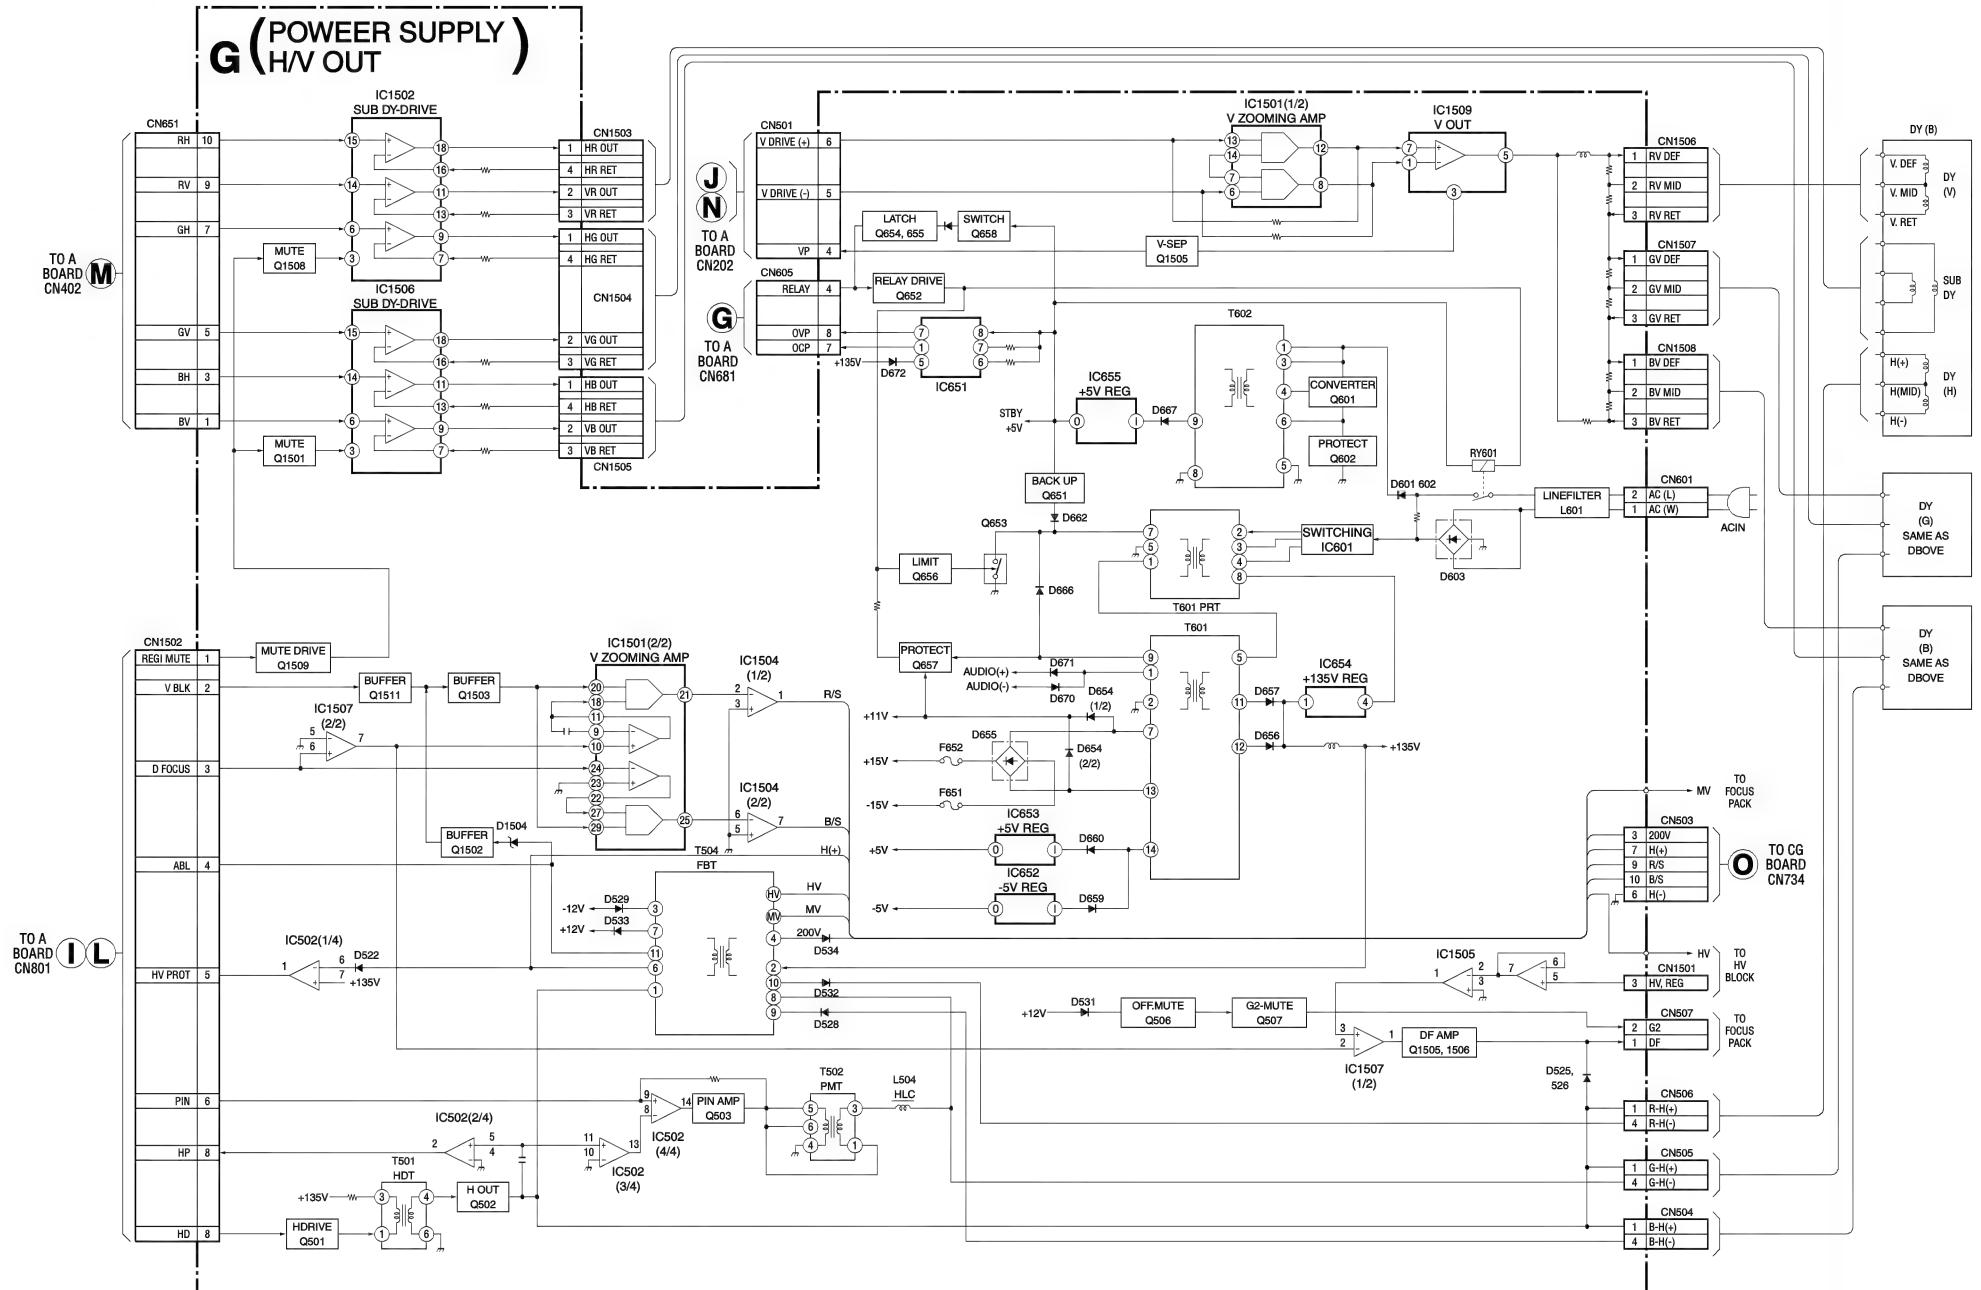



The diagram illustrates the internal architecture of the RCA Victor Model 7070 television receiver. It is organized into several main functional blocks:

- Display Section (DY):** Contains three CRT assemblies labeled CRT (R), CRT (G), and CRT (B), each paired with a tuning eye tube (DY (R), DY (G), and DY (B)).
- Control Section (CR):** Includes the main tuning eye tube and associated control circuitry.
- Color Control Section (CG):** Features a color tuning eye tube and related control components.
- Color Balance Section (CB):** Contains a color balance tuning eye tube and associated control components.
- Antenna Section (ANT SW):** An antenna switch that routes signals from the antenna to the tuner.
- Tuner Section (HA):** The main tuner assembly, including the input selector (HC) and the tuner itself.
- Video Section (HB):** Processes the video signal, including the video amplifier (HA) and the video output stage (HB).
- Audio Section (A):** Includes the audio amplifier (HA) and the audio output stage (HB).
- Power Section (G):** Contains the power supply (PS) and the power output stage (PO).

The diagram shows the interconnections between these sections, including the flow of video and audio signals, the power supply lines, and the control signals. Various components like resistors, capacitors, and integrated circuits are labeled with their respective values and part numbers.

The components identified by shading and mark are critical for safety. Replace only with part number specified.

The symbol  indicate fast operating fuse.
Replace only with fuse of same rating as marked.

Le symbole  indique une fusible à action rapide.

Doit être remplacée par une fois le même yarek
comme marque.

Notes:

- Capacitors without voltage indication are all 50V.
- All resistors are 50 ohms.
- 100-1000V = 1000V.
- Indication of resistance, which does not have one or two rating electrical power, is as follows:

Rating electrical power : γ W

Pin 1

Pin 2

Pin 3

Pin 4

Pin 5

Pin 6

Pin 7

Pin 8

Pin 9

Pin 10

Pin 11

Pin 12

Pin 13

Pin 14

Pin 15

Pin 16

Pin 17

Pin 18

Pin 19

Pin 20

Pin 21

Pin 22

Pin 23

Pin 24

Pin 25

Pin 26

Pin 27

Pin 28

Pin 29

Pin 30

Pin 31

Pin 32

Pin 33

Pin 34

Pin 35

Pin 36

Pin 37

Pin 38

Pin 39

Pin 40

Pin 41

Pin 42

Pin 43

Pin 44

Pin 45

Pin 46

Pin 47

Pin 48

Pin 49

Pin 50

Pin 51

Pin 52

Pin 53

Pin 54

Pin 55

Pin 56

Pin 57

Pin 58

Pin 59

Pin 60

Pin 61

Pin 62

Pin 63

Pin 64

Pin 65

Pin 66

Pin 67

Pin 68

Pin 69

Pin 70

Pin 71

Pin 72

Pin 73

Pin 74

Pin 75

Pin 76

Pin 77

Pin 78

Pin 79

Pin 80

Pin 81

Pin 82

Pin 83

Pin 84

Pin 85

Pin 86

Pin 87

Pin 88

Pin 89

Pin 90

Pin 91

Pin 92

Pin 93

Pin 94

Pin 95

Pin 96

Pin 97

Pin 98

Pin 99

Pin 100

Pin 101

Pin 102

Pin 103

Pin 104

Pin 105

Pin 106

Pin 107

Pin 108

Pin 109

Pin 110

Pin 111

Pin 112

Pin 113

Pin 114

Pin 115

Pin 116

Pin 117

Pin 118

Pin 119

Pin 120

Pin 121

Pin 122

Pin 123

Pin 124

Pin 125

Pin 126

Pin 127

Pin 128

Pin 129

Pin 130

Pin 131

Pin 132

Pin 133

Pin 134

Pin 135

Pin 136

Pin 137

Pin 138

Pin 139

Pin 140

Pin 141

Pin 142

Pin 143

Pin 144

Pin 145

Pin 146

Pin 147

Pin 148

Pin 149

Pin 150

Pin 151

Pin 152

Pin 153

Pin 154

Pin 155

Pin 156

Pin 157

Pin 158

Pin 159

Pin 160

Pin 161

Pin 162

Pin 163

Pin 164

Pin 165

Pin 166

Pin 167

Pin 168

Pin 169

Pin 170

Pin 171

Pin 172

Pin 173

Pin 174

Pin 175

Pin 176

Pin 177

Pin 178

Pin 179

Pin 180

Pin 181

Pin 182

Pin 183

Pin 184

Pin 185

Pin 186

Pin 187

Pin 188

Pin 189

Pin 190

Pin 191

Pin 192

Pin 193

Pin 194

Pin 195

Pin 196

Pin 197

Pin 198

Pin 199

Pin 200

Pin 201

Pin 202

Pin 203

Pin 204

Pin 205

Pin 206

Pin 207

Pin 208

Pin 209

Pin 210

Pin 211

Pin 212

Pin 213

Pin 214

Pin 215

Pin 216

Pin 217

Pin 218

Pin 219

Pin 220

Pin 221

Pin 222

Pin 223

Pin 224

Pin 225

Pin 226

Pin 227

Pin 228

Pin 229

Pin 230

Pin 231

Pin 232

Pin 233

Pin 234

Pin 235

Pin 236

Pin 237

Pin 238

Pin 239

Pin 240

Pin 241

Pin 242

Pin 243

Pin 244

Pin 245

Pin 246

Pin 247

Pin 248

Pin 249

Pin 250

Pin 251

Pin 252

Pin 253

Pin 254

Pin 255

Pin 256

Pin 257

Pin 258

Pin 259

Pin 260

Pin 261

Pin 262

Pin 263

Pin 264

Pin 265

Pin 266

Pin 267

Pin 268

Pin 269

Pin 270

Pin 271

Pin 272

Pin 273

Pin 274

Pin 275

Pin 276

Pin 277

Pin 278

Pin 279

Pin 280

Pin 281

Pin 282

Pin 283

Pin 284

Pin 285

Pin 286

Pin 287

Pin 288

Pin 289

Pin 290

Pin 291

Pin 292

Pin 293

Pin 294

Pin 295

Pin 296

Pin 297

Pin 298

Pin 299

Pin 300

Pin 301

Pin 302

Pin 303

Pin 304

Pin 305

Pin 306

Pin 307

Pin 308

Pin 309

Pin 310

Pin 311

Pin 312

Pin 313

Pin 314

Pin 315

Pin 316

Pin 317

Pin 318

Pin 319

Pin 320

Pin 321

Pin 322

Pin 323

Pin 324

Pin 325

Pin 326

Pin 327

Pin 328

Pin 329

Pin 330

Pin 331

Pin 332

Pin 333

Pin 334

Pin 335

Pin 336

Pin 337

Pin 338

Pin 339

Pin 340

Pin 341

Pin 342

Pin 343

Pin 344

Pin 345

Pin 346

Pin 347

Pin 348

Pin 349

Pin 350

Pin 351

Pin 352

Pin 353

Pin 354

Pin 355

Pin 356

Pin 357

Pin 358

Pin 359

Pin 360

Pin 361

Pin 362

Pin 363

Pin 364

Pin 365

Pin 366

Pin 367

Pin 368

Pin 369

Pin 370

Pin 371

Pin 372

Pin 373

Pin 374

Pin 375

Pin 376

Pin 377

Pin 378

Pin 379

Pin 380

Pin 381

Pin 382

Pin 383

Pin 384

Pin 385

Pin 386

Pin 387

Pin 388

Pin 389

Pin 390

Pin 391

Pin 392

Pin 393

Pin 394

Pin 395

Pin 396

Pin 397

Pin 398

Pin 399

Pin 400

Pin 401

Pin 402

Pin 403

Pin 404

Pin 405

Pin 406

Pin 407

Pin 408


Pin 409

Pin 410


	Device	Printed symbol	Terminal names	General
①	Transistor		Base, Emitter Collector	
②	Transistor		Base, Emitter Collector	
③	Diode		Cathode Anode (AC)	
④	Diode		Cathode Anode (AC)	
⑤	Diode		Cathode Anode (AC)	
⑥	Diode		Cathode Anode (AC)	
⑦	Diode		Cathode Anode (AC)	
⑧	Diode		Cathode Anode (AC)	
⑨	Diode		Cathode Anode (AC)	
⑩	Diode		Cathode Anode (AC)	
⑪	Diode		Cathode Anode (AC)	
⑫	Diode		Cathode Anode (AC)	
⑬	Diode		Cathode Anode (AC)	
⑭	Diode		Cathode Anode (AC)	
⑮	Diode		Cathode Anode (AC)	
⑯	Diode		Cathode Anode (AC)	
⑰	Diode		Cathode Anode (AC)	
⑱	Diode		Cathode Anode (AC)	
⑲	Transistor (PBT)		Base Emitter Collector	
⑳	Transistor (PBT)		Base Emitter Collector	
㉑	Transistor (PBT)		Base Emitter Collector	
㉒	Transistor		Base Emitter Collector	
㉓	Transistor		Base Emitter Collector	
㉔	Transistor		Base Emitter Collector	
㉕	Transistor		Base Emitter Collector	
㉖	Transistor		Base Emitter Collector	
㉗	Transistor		Base Emitter Collector	
㉘	Transistor		Base Emitter Collector	
㉙	Transistor		Base Emitter Collector	
㉚	Transistor		Base Emitter Collector	
㉛	Transistor		Base Emitter Collector	
㉜	Transistor		Base Emitter Collector	
㉝	Transistor		Base Emitter Collector	
㉞	Transistor		Base Emitter Collector	
㉟	Transistor		Base Emitter Collector	
㊱	Transistor		Base Emitter Collector	
㊲	Transistor		Base Emitter Collector	
㊳	Transistor		Base Emitter Collector	
㊴	Transistor		Base Emitter Collector	
㊵	Transistor		Base Emitter Collector	
㊶	Transistor		Base Emitter Collector	
㊷	Transistor		Base Emitter Collector	
㊸	Transistor		Base Emitter Collector	
㊹	Transistor		Base Emitter Collector	
㊺	Transistor		Base Emitter Collector	
㊻	Transistor		Base Emitter Collector	
㊼	Transistor		Base Emitter Collector	
㊽	Transistor		Base Emitter Collector	
㊾	Transistor		Base Emitter Collector	
㊿	Transistor			

(Chip semiconductors that are not actually used are included.)



• A (1/3) BOARD WAVEFORMS


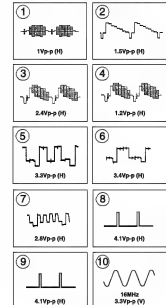


A (1/3) BOARD : IC406 TDA7265

 

A (1/3) BOARD : IC1011 CXA2079Q

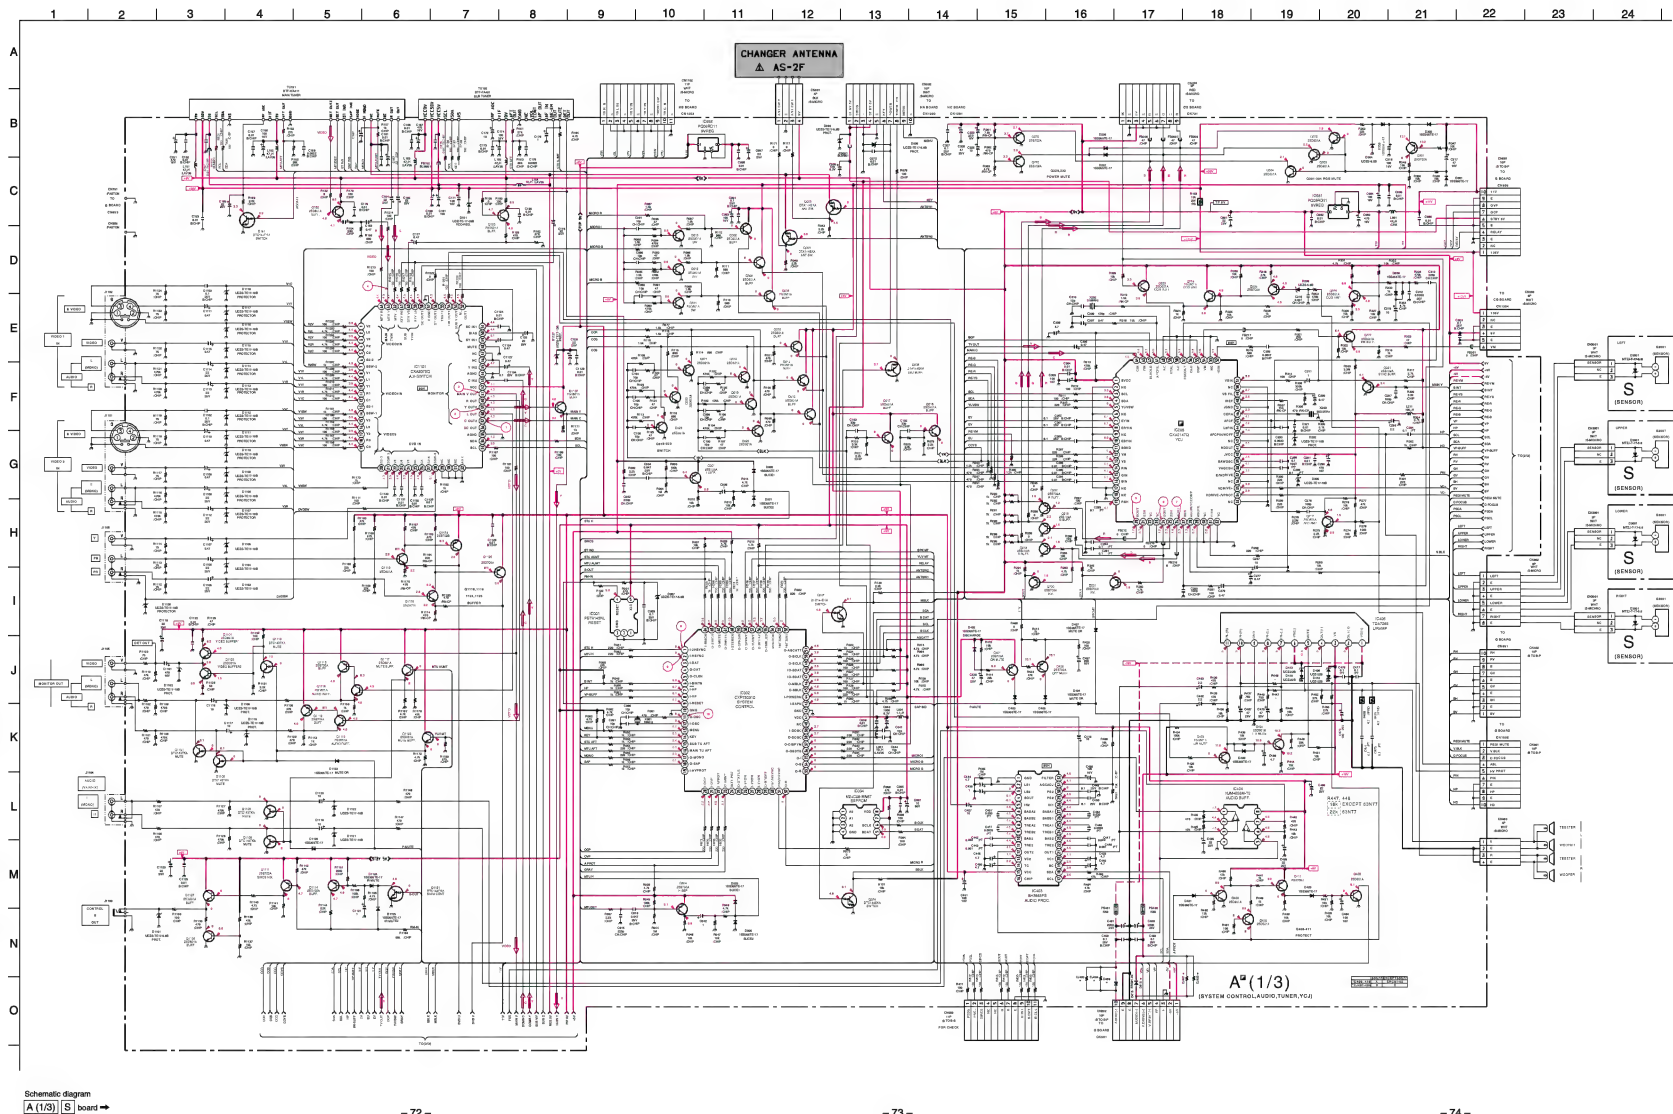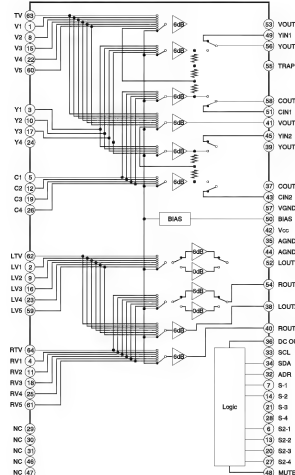

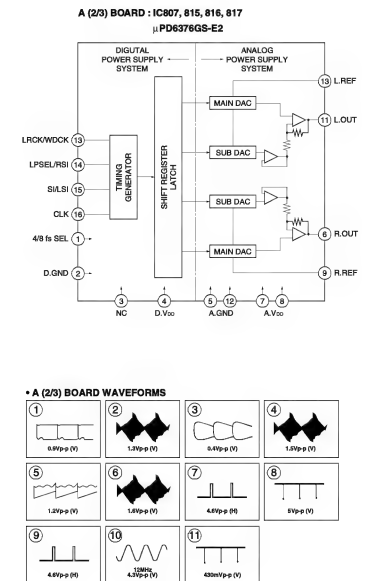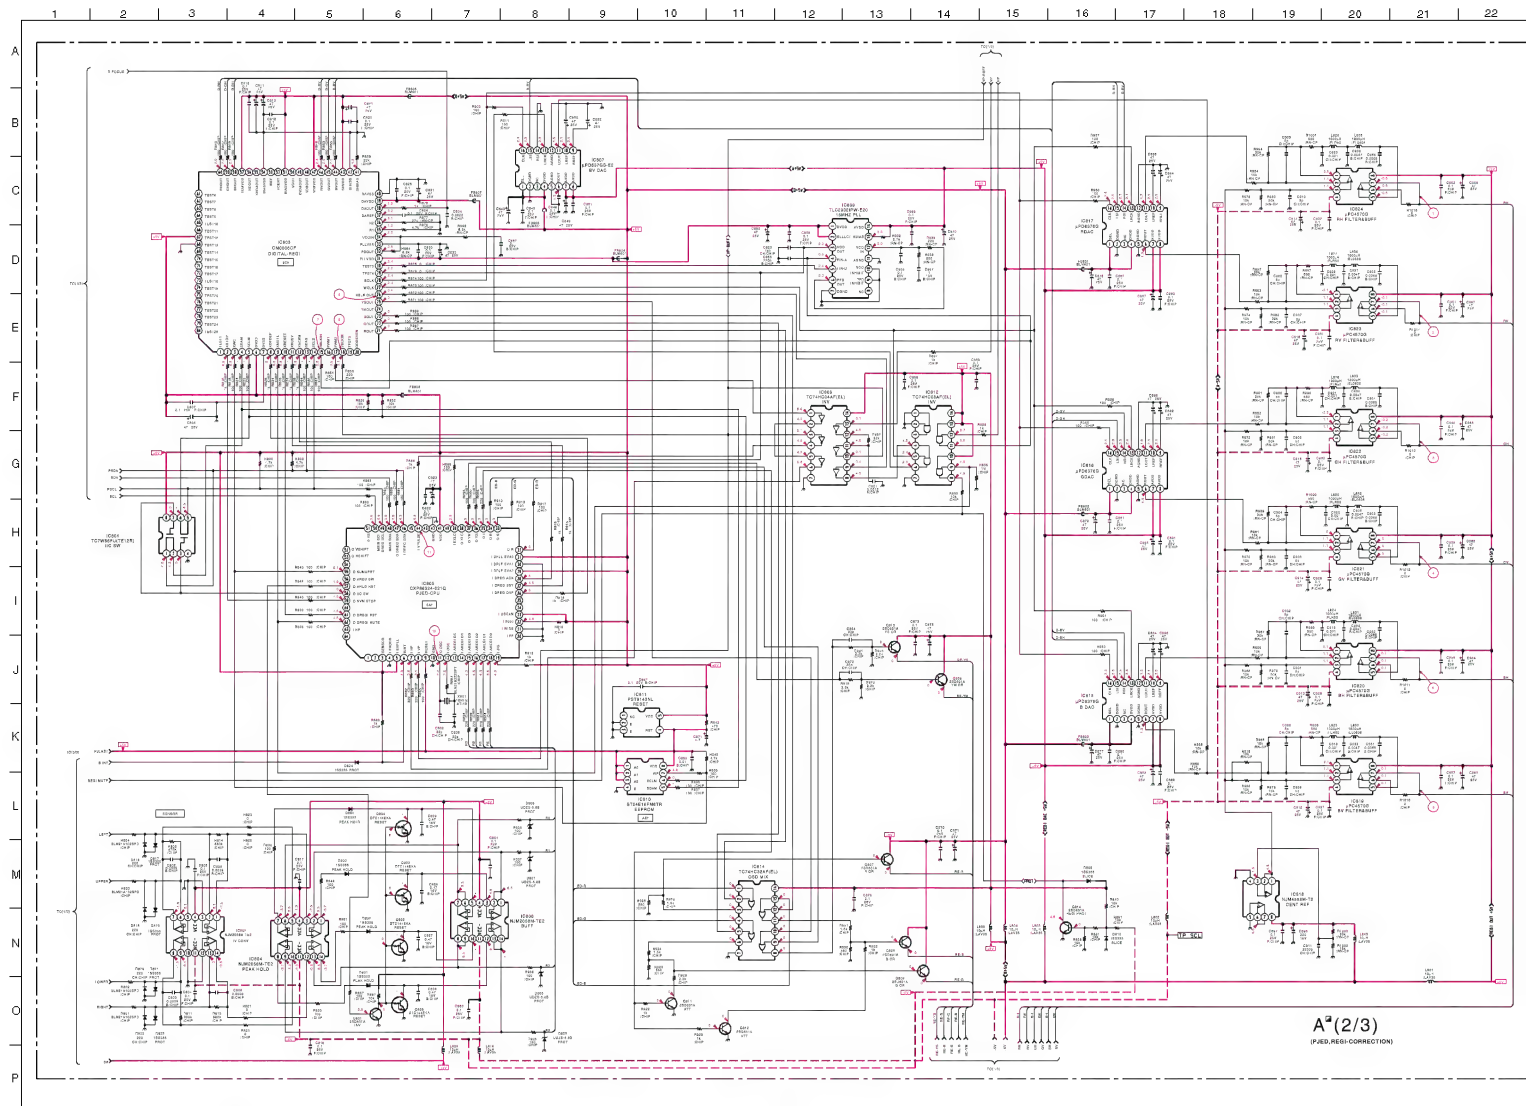


- A Board -

A BOARD


DODE		D004 K-7	D006 K-7	D008 K-7	D010 K-7	D012 K-7	D014 K-7	D016 K-7	D018 K-7	D020 K-7	D022 K-7	D024 K-7	D026 K-7	D028 K-7	D030 K-7	D032 K-7	D034 K-7	D036 K-7	D038 K-7	D040 K-7	D042 K-7	D044 K-7	D046 K-7	D048 K-7	D050 K-7	D052 K-7	D054 K-7	D056 K-7	D058 K-7	D060 K-7	D062 K-7	D064 K-7	D066 K-7	D068 K-7	D070 K-7	D072 K-7	D074 K-7	D076 K-7	D078 K-7	D080 K-7	D082 K-7	D084 K-7	D086 K-7	D088 K-7	D090 K-7	D092 K-7	D094 K-7	D096 K-7	D098 K-7	D100 K-7	D102 K-7	D104 K-7	D106 K-7	D108 K-7	D110 K-7	D112 K-7	D114 K-7	D116 K-7	D118 K-7	D120 K-7	D122 K-7	D124 K-7	D126 K-7	D128 K-7	D130 K-7	D132 K-7	D134 K-7	D136 K-7	D138 K-7	D140 K-7	D142 K-7	D144 K-7	D146 K-7	D148 K-7	D150 K-7	D152 K-7	D154 K-7	D156 K-7	D158 K-7	D160 K-7	D162 K-7	D164 K-7	D166 K-7	D168 K-7	D170 K-7	D172 K-7	D174 K-7	D176 K-7	D178 K-7	D180 K-7	D182 K-7	D184 K-7	D186 K-7	D188 K-7	D190 K-7	D192 K-7	D194 K-7	D196 K-7	D198 K-7	D200 K-7	D202 K-7	D204 K-7	D206 K-7	D208 K-7	D210 K-7	D212 K-7	D214 K-7	D216 K-7	D218 K-7	D220 K-7	D222 K-7	D224 K-7	D226 K-7	D228 K-7	D230 K-7	D232 K-7	D234 K-7	D236 K-7	D238 K-7	D240 K-7	D242 K-7	D244 K-7	D246 K-7	D248 K-7	D250 K-7	D252 K-7	D254 K-7	D256 K-7	D258 K-7	D260 K-7	D262 K-7	D264 K-7	D266 K-7	D268 K-7	D270 K-7	D272 K-7	D274 K-7	D276 K-7	D278 K-7	D280 K-7	D282 K-7	D284 K-7	D286 K-7	D288 K-7	D290 K-7	D292 K-7	D294 K-7	D296 K-7	D298 K-7	D300 K-7	D302 K-7	D304 K-7	D306 K-7	D308 K-7	D310 K-7	D312 K-7	D314 K-7	D316 K-7	D318 K-7	D320 K-7	D322 K-7	D324 K-7	D326 K-7	D328 K-7	D330 K-7	D332 K-7	D334 K-7	D336 K-7	D338 K-7	D340 K-7	D342 K-7	D344 K-7	D346 K-7	D348 K-7	D350 K-7	D352 K-7	D354 K-7	D356 K-7	D358 K-7	D360 K-7	D362 K-7	D364 K-7	D366 K-7	D368 K-7	D370 K-7	D372 K-7	D374 K-7	D376 K-7	D378 K-7	D380 K-7	D382 K-7	D384 K-7	D386 K-7	D388 K-7	D390 K-7	D392 K-7	D394 K-7	D396 K-7	D398 K-7	D400 K-7	D402 K-7	D404 K-7	D406 K-7	D408 K-7	D410 K-7	D412 K-7	D414 K-7	D416 K-7	D418 K-7	D420 K-7	D422 K-7	D424 K-7	D426 K-7	D428 K-7	D430 K-7	D432 K-7	D434 K-7	D436 K-7	D438 K-7	D440 K-7	D442 K-7	D444 K-7	D446 K-7	D448 K-7	D450 K-7	D452 K-7	D454 K-7	D456 K-7	D458 K-7	D460 K-7	D462 K-7	D464 K-7	D466 K-7	D468 K-7	D470 K-7	D472 K-7	D474 K-7	D476 K-7	D478 K-7	D480 K-7	D482 K-7	D484 K-7	D486 K-7	D488 K-7	D490 K-7	D492 K-7	D494 K-7	D496 K-7	D498 K-7	D500 K-7	D502 K-7	D504 K-7	D506 K-7	D508 K-7	D510 K-7	D512 K-7	D514 K-7	D516 K-7	D518 K-7	D520 K-7	D522 K-7	D524 K-7	D526 K-7	D528 K-7	D530 K-7	D532 K-7	D534 K-7	D536 K-7	D538 K-7	D540 K-7	D542 K-7	D544 K-7	D546 K-7	D548 K-7	D550 K-7	D552 K-7	D554 K-7	D556 K-7	D558 K-7	D560 K-7	D562 K-7	D564 K-7	D566 K-7	D568 K-7	D570 K-7	D572 K-7	D574 K-7	D576 K-7	D578 K-7	D580 K-7	D582 K-7	D584 K-7	D586 K-7	D588 K-7	D590 K-7	D592 K-7	D594 K-7	D596 K-7	D598 K-7	D600 K-7	D602 K-7	D604 K-7	D606 K-7	D608 K-7	D610 K-7	D612 K-7	D614 K-7	D616 K-7	D618 K-7	D620 K-7	D622 K-7	D624 K-7	D626 K-7	D628 K-7	D630 K-7	D632 K-7	D634 K-7	D636 K-7	D638 K-7	D640 K-7	D642 K-7	D644 K-7	D646 K-7	D648 K-7	D650 K-7	D652 K-7	D654 K-7	D656 K-7	D658 K-7	D660 K-7	D662 K-7	D664 K-7	D666 K-7	D668 K-7	D670 K-7	D672 K-7	D674 K-7	D676 K-7	D678 K-7	D680 K-7	D682 K-7	D684 K-7	D686 K-7	D688 K-7	D690 K-7	D692 K-7	D694 K-7	D696 K-7	D698 K-7	D700 K-7	D702 K-7	D704 K-7	D706 K-7	D708 K-7	D710 K-7	D712 K-7	D714 K-7	D716 K-7	D718 K-7	D720 K-7	D722 K-7	D724 K-7	D726 K-7	D728 K-7	D730 K-7	D732 K-7	D734 K-7	D736 K-7	D738 K-7	D740 K-7	D742 K-7	D744 K-7	D746 K-7	D748 K-7	D750 K-7	D752 K-7	D754 K-7	D756 K-7	D758 K-7	D760 K-7	D762 K-7	D764 K-7	D766 K-7	D768 K-7	D770 K-7	D772 K-7	D774 K-7	D776 K-7	D778 K-7	D780 K-7	D782 K-7	D784 K-7	D786 K-7	D788 K-7	D790 K-7	D792 K-7	D794 K-7	D796 K-7	D798 K-7	D800 K-7	D802 K-7	D804 K-7	D806 K-7	D808 K-7	D810 K-7	D812 K-7	D814 K-7	D816 K-7	D818 K-7	D820 K-7	D822 K-7	D824 K-7	D826 K-7	D828 K-7	D830 K-7	D832 K-7	D834 K-7	D836 K-7	D838 K-7	D840 K-7	D842 K-7	D844 K-7	D846 K-7	D848 K-7	D850 K-7	D852 K-7	D854 K-7	D856 K-7	D858 K-7	D860 K-7	D862 K-7	D864 K-7	D866 K-7	D868 K-7	D870 K-7	D872 K-7	D874 K-7	D876 K-7	D878 K-7	D880 K-7	D882 K-7	D884 K-7	D886 K-7	D888 K-7	D890 K-7	D892 K-7	D894 K-7	D896 K-7	D898 K-7	D900 K-7	D902 K-7	D904 K-7	D906 K-7	D908 K-7	D910 K-7	D912 K-7	D914 K-7	D916 K-7	D918 K-7	D920 K-7	D922 K-7	D924 K-7	D926 K-7	D928 K-7	D930 K-7	D932 K-7	D934 K-7	D936 K-7	D938 K-7	D940 K-7	D942 K-7	D944 K-7	D946 K-7	D948 K-7	D950 K-7	D952 K-7	D954 K-7	D956 K-7	D958 K-7	D960 K-7	D962 K-7	D964 K-7	D966 K-7	D968 K-7	D970 K-7	D972 K-7	D974 K-7	D976 K-7	D978 K-7	D980 K-7	D982 K-7	D984 K-7	D986 K-7	D988 K-7	D990 K-7	D992 K-7	D994 K-7	D996 K-7	D998 K-7	D1000 K-7	D1002 K-7	D1004 K-7	D1006 K-7	D1008 K-7	D1010 K-7	D1012 K-7	D1014 K-7	D1016 K-7	D1018 K-7	D1020 K-7	D1022 K-7	D1024 K-7	D1026 K-7	D1028 K-7	D1030 K-7	D1032 K-7	D1034 K-7	D1036 K-7	D1038 K-7	D1040 K-7	D1042 K-7	D1044 K-7	D1046 K-7	D1048 K-7	D1050 K-7	D1052 K-7	D1054 K-7	D1056 K-7	D1058 K-7	D1060 K-7	D1062 K-7	D1064 K-7	D1066 K-7	D1068 K-7	D1070 K-7	D1072 K-7	D1074 K-7	D1076 K-7	D1078 K-7	D1080 K-7	D1082 K-7	D1084 K-7	D1086 K-7	D1088 K-7	D1090 K-7	D1092 K-7	D1094 K-7	D1096 K-7	D1098 K-7	D1100 K-7	D1102 K-7	D1104 K-7	D1106 K-7	D1108 K-7	D1110 K-7	D1112 K-7	D1114 K-7	D1116 K-7	D1118 K-7	D1120 K-7	D1122 K-7	D1124 K-7	D1126 K-7	D1128 K-7	D1130 K-7	D1132 K-7	D1134 K-7	D1136 K-7	D1138 K-7	D1140 K-7	D1142 K-7	D1144 K-7	D1146 K-7	D1148 K-7	D1150 K-7	D1152 K-7	D1154 K-7	D1156 K-7	D1158 K-7	D1160 K-7	D1162 K-7	D1164 K-7	D1166 K-7	D1168 K-7	D1170 K-7	D1172 K-7	D1174 K-7	D1176 K-7	D1178 K-7	D1180 K-7	D1182 K-7	D1184 K-7	D1186 K-7	D1188 K-7	D1190 K-7	D1192 K-7	D1194 K-7	D1196 K-7	D1198 K-7	D1200 K-7	D1202 K-7	D1204 K-7	D1206 K-7	D1208 K-7	D1210 K-7	D1212 K-7	D1214 K-7	D1216 K-7	D1218 K-7	D1220 K-7	D1222 K-7	D1224 K-7	D1226 K-7	D1228 K-7	D1230 K-7	D1232 K-7	D1234 K-7	D1236 K-7	D1238 K-7	D1240 K-7	D1242 K-7	D1244 K-7	D1246 K-7	D1248 K-7	D1250 K-7	D1252 K-7	D1254 K-7	D1256 K-7	D1258 K-7	D1260 K-7	D1262 K-7	D1264 K-7	D1266 K-7	D1268 K-7	D1270 K-7	D1272 K-7	D1274 K-7	D1276 K-7	D1278 K-7	D1280 K-7	D1282 K-7	D1284 K-7	D1286 K-7	D1288 K-7	D1290 K-7	D1292 K-7	D1294 K-7	D1296 K-7	D1298 K-7	D1300 K-7	D1302 K-7	D1304 K-7	D1306 K-7	D1308 K-7	D1310 K-7	D1312 K-7	D1314 K-7	D1316 K-7	D1318 K-7	D1320 K-7	D1322 K-7	D1324 K-7	D1326 K-7	D1328 K-7	D1330 K-7	D1332 K-7	D1334 K-7	D1336 K-7	D1338 K-7	D1340 K-7	D1342 K-7	D1344 K-7	D1346 K-7	D1348 K-7	D1350 K-7	D1352 K-7	D1354 K-7	D1356 K-7	D1358 K-7	D1360 K-7	D1362 K-7	D1364 K-7	D1366 K-7	D1368 K-7	D1370 K-7	D1372 K-7	D1374 K-7	D1376 K-7	D1378 K-7	D1380 K-7	D1382 K-7	D1384 K-7	D1386 K-7	D1388 K-7	D1390 K-7	D1392 K-7	D1394 K-7	D1396 K-7	D1398 K-7	D1400 K-7	D1402 K-7	D1404 K-7	D1406 K-7	D1408 K-7	D1410 K-7	D1412 K-7	D1414 K-7	D1416 K-7	D1418 K-7	D1420 K-7	D1422 K-7	D1424 K-7	D1426 K-7	D1428 K-7	D1430 K-7	D1432 K-7	D1434 K-7	D1436 K-7	D1438 K-7	D1440 K-7	D1442 K-7	D1444 K-7	D1446 K-7	D1448 K-7	D1450 K-7	D1452 K-7	D1454 K-7	D1456 K-7	D1458 K-7	D1460 K-7	D1462 K-7	D1464 K-7	D1466 K-7	D1468 K-7	D1470 K-7	D1472 K-7	D1474 K-7	D1476 K-7	D1478 K-7	D1480 K-7	D1482 K-7	D1484 K-7	D1486 K-7	D1488 K-7	D1490 K-7	D1492 K-7	D1494 K-7	D1496 K-7	D1498 K-7	D1500 K-7	D1502 K-7	D1504 K-7	D1506 K-7	D1508 K-7	D1510 K-7	D1512 K-7	D1514 K-7	D1516 K-7	D1518 K-7	D1520 K-7	D1522 K-7	D1524 K-7	D1526 K-7	D1528 K-7	D1530 K-7	D1532 K-7	D1534 K-7	D1536 K-7	D1538 K-7	D1540 K-7	D1542 K-7	D1544 K-7	D1546 K-7	D1548 K-7	D1550 K-7	D1552 K-7	D1554 K-7	D1556 K-7	D1558 K-7	D1560 K-7	D1562 K-7	D1564 K-7	D1566 K-7	D1568 K-7	D1570 K-7	D1572 K-7	D1574 K-7	D1576 K-7	D1578 K-7	D1580 K-7	D1582 K-7	D1584 K-7	D1586 K-7	D1588 K-7	D1590 K-7	D1592 K-7	D1594 K-7	D1596 K-7	D1598 K-7	D1600 K-7	D1602 K-7	D1604 K-7	D1606 K-7	D1608 K-7	D1610 K-7	D1612 K-7	D1614 K-7	D1616 K-7	D1618 K-7	D1620 K-7	D1622 K-7	D1624 K-7	D1626 K-7	D1628 K-7	D1630 K-7	D1632 K-7	D1634 K-7	D1636 K-7	D1638 K-7	D1640 K-7	D1642 K-7	D1644 K-7	D1646 K-7	D1648 K-7	D1650 K-7	D1652 K-7	D1654 K-7	D1656 K-7	D1658 K-7	D1660 K-7	D1662 K-7	D1664 K-7	D1666 K-7	D1668 K-7	D1670 K-7	D1672 K-7	D1674 K-7	D1676 K-7	D1678 K-7	D1680 K-7	D1682 K-7	D1684 K-7	D1686 K-7	D1688 K-7	D1690 K-7	D1692 K-7	D1694 K-7	D1696 K-7	D1698 K-7	D1700 K-7	D1702 K-7	D1704 K-7	D1706 K-7	D1708 K-7	D1710 K-7	D1712 K-7	D1714 K-7	D1716 K-7	D1718 K-7	D1720 K-7	D1722 K-7	D1724 K-7	D1726 K-7	D1728 K-7	D1730 K-7	D1732 K-7	D1734 K-7	D1736 K-7	D1738 K-7	D1740 K-7	D1742 K-7	D1744 K-7	D1746 K-7	D1748 K-7	D1750 K-7	D1752 K-7	D1754 K-7	D1756 K-7	D1758 K-7	D1760 K-7	D1762 K-7	D1764 K-7	D1766 K-7	D1768 K-7	D1770 K-7	D1772 K-7	D1774 K-7	D1776 K-7	D1778 K-7	D1780 K-7	D1782 K-7	D1784 K-7	D1786 K-7	D1788 K-7	D1790 K-7	D1792 K-7	D1794 K-7	D1796 K-7	D1798 K-7	D1800 K-7	D1802 K-7	D1804 K-7	D1806 K-7	D1808 K-7	D1810 K-7	D1812 K-7	D1814 K-7	D1816 K-7	D1818 K-7	D1820 K-7	D1822 K-7	D1824 K-7	D1826 K-7	D1828 K-7	D1830 K-7	D1832 K-7	D1834 K-7	D1836 K-7	D1838 K-7	D1840 K-7	D1842 K-7	D1844 K-7	D1846 K-7	D1848 K-7	D1850 K-7	D1852 K-7	D1854 K-7	D1856 K-7	D1858 K-7	D1860 K-7	D1862 K-7	D1864 K-7	D1866 K-7	D1868 K-7	D1870 K-7	D1872 K-7	D1874 K-7	D1876 K-7	D1878 K-7	D1880 K-7	D1882 K-7	D1884 K-7	D1886 K-7	D1888 K-7	D1890 K-7	D1892 K-7	D1894 K-7	D1896 K-7	D1898 K-7	D1900 K-7	D1902 K-7	D1904 K-7	D1906 K-7	D1908 K-7	D1910 K-7	D1912 K-7	D1914 K-7	D1916 K-7	D1918 K-7	D1920 K-7	D1922 K-7	D1924 K-7	D1926 K-7	D1928 K-7	D1930 K-7	D1932 K-7	D1934 K-7	D1936 K-7	D1938 K-7	D1940 K-7	D1942 K-7	D1944 K-7	D1946 K-7	D1948 K-7	D1950 K-7	D1952 K-7	D1954 K-7	D1956 K-7	D1958 K-7	D1960 K-7	D1962 K-7	D1964 K-7	D1966 K-7	D1968 K-7	D1970 K-7	D1972 K-7	D1974 K-7	D1976 K-7	D1978 K-7	D1980 K-7	D1982 K-7	D1984 K-7	D1986 K-7	D1988 K-7	D1990 K-7	D1992 K-7	D1994 K-7	D1996 K-7	D1998 K-7	D2000 K-7	D2002 K-7	D2004 K-7	D2006 K-7	D2008 K-7	D2010 K-7	D2012 K-7	D2014 K-7	D2016 K-7	D2018 K-7	D2020 K-7	D2022 K-7	D2024 K-7	D2026 K-7	D2028 K-7	D2030 K-7	D2032 K-7	D2034 K-7	D2036 K-7	D2038 K-7	D2040 K-7	D2042 K-7	D2044 K-7	D2046 K-7	D2048 K-7	D2050 K-7	D2052 K-7	D2054 K-7	D2056 K-7	D2058 K-7	D2060 K-7	D2062 K-7	D2064 K-7	D2066 K-7	D2068 K-7	D2070 K-7	D2072 K-7	D2074 K-7	D2076 K-7	D2078 K-7	D2080 K-7	D2082 K-7	D2084 K-7	D2086 K-7	D2088 K-7	D2090 K-7	D2092 K-7	D2094 K-7	D2096 K-7	D2098 K-7	D2100 K-7	D2102 K-7	D2104 K-7	D2106 K-7	D2108 K-7	D2110 K-7	D2112 K-7	D2114 K-7	D2116 K-7	D2118 K-7	D2120 K-7	D2122 K-7	D2124 K-7	D2126 K-7	D2128 K-7	D2130 K-7	D2132 K-7	D2134 K-7	D2136 K-7	D2138 K-7	D2140 K-7	D2142 K-7	D2144 K-7	D2146 K-7	D21
------	--	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----

L : component side
B : conductor side


A (3/3) BOARD : IC1902 CXA2019AQ-T4

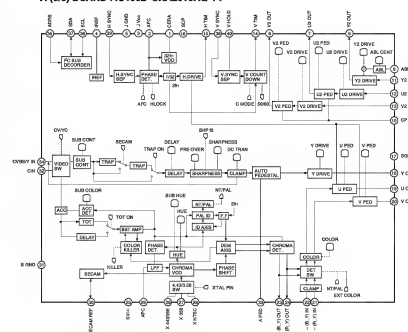




A (3/3) BOARD : IC1903 BU4053BCF-T2

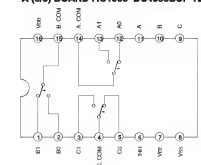


A (3/3) BOARD : IC1904 CXA1315M-T4

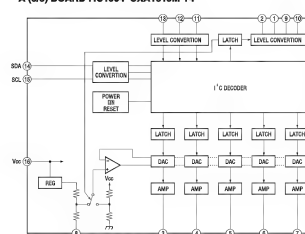


A (3/3) BOARD : IC1905 SDA9288

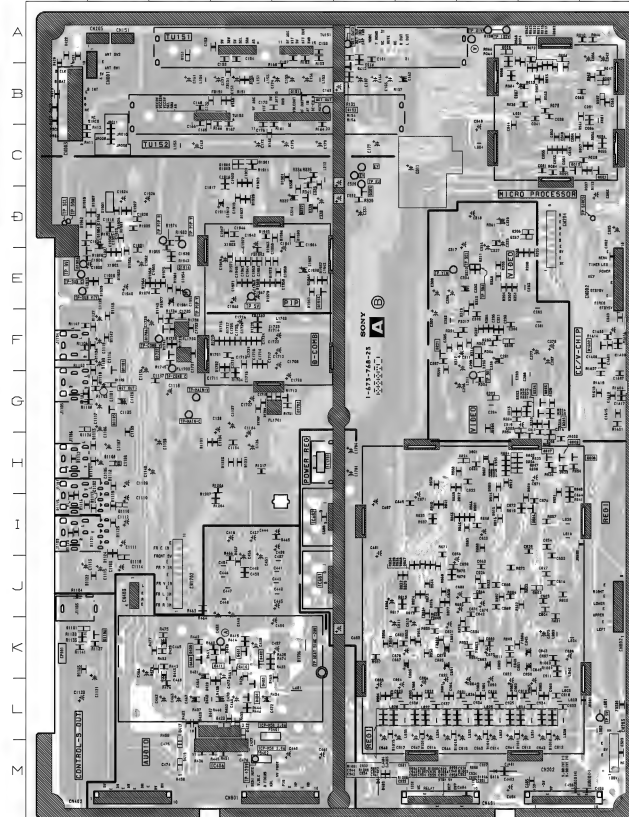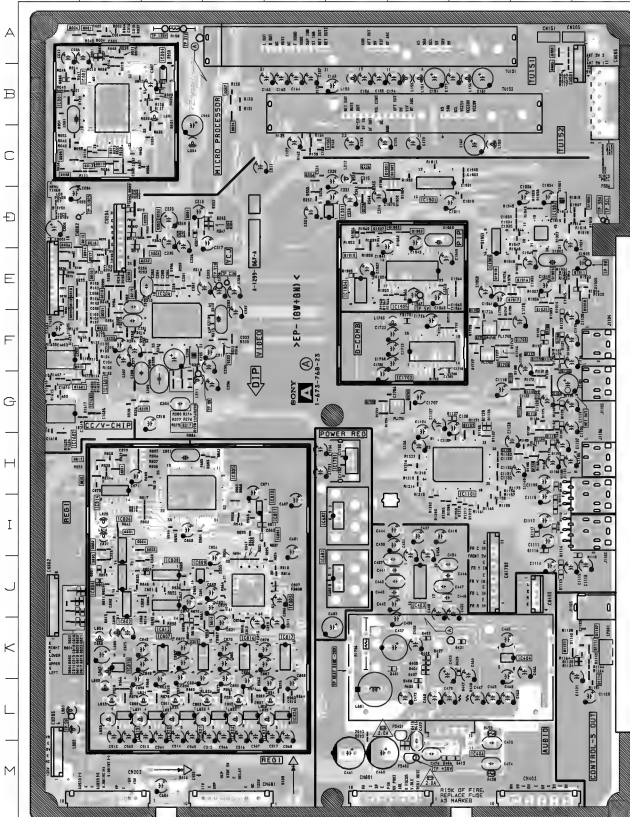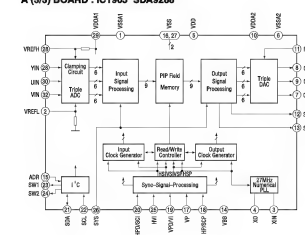


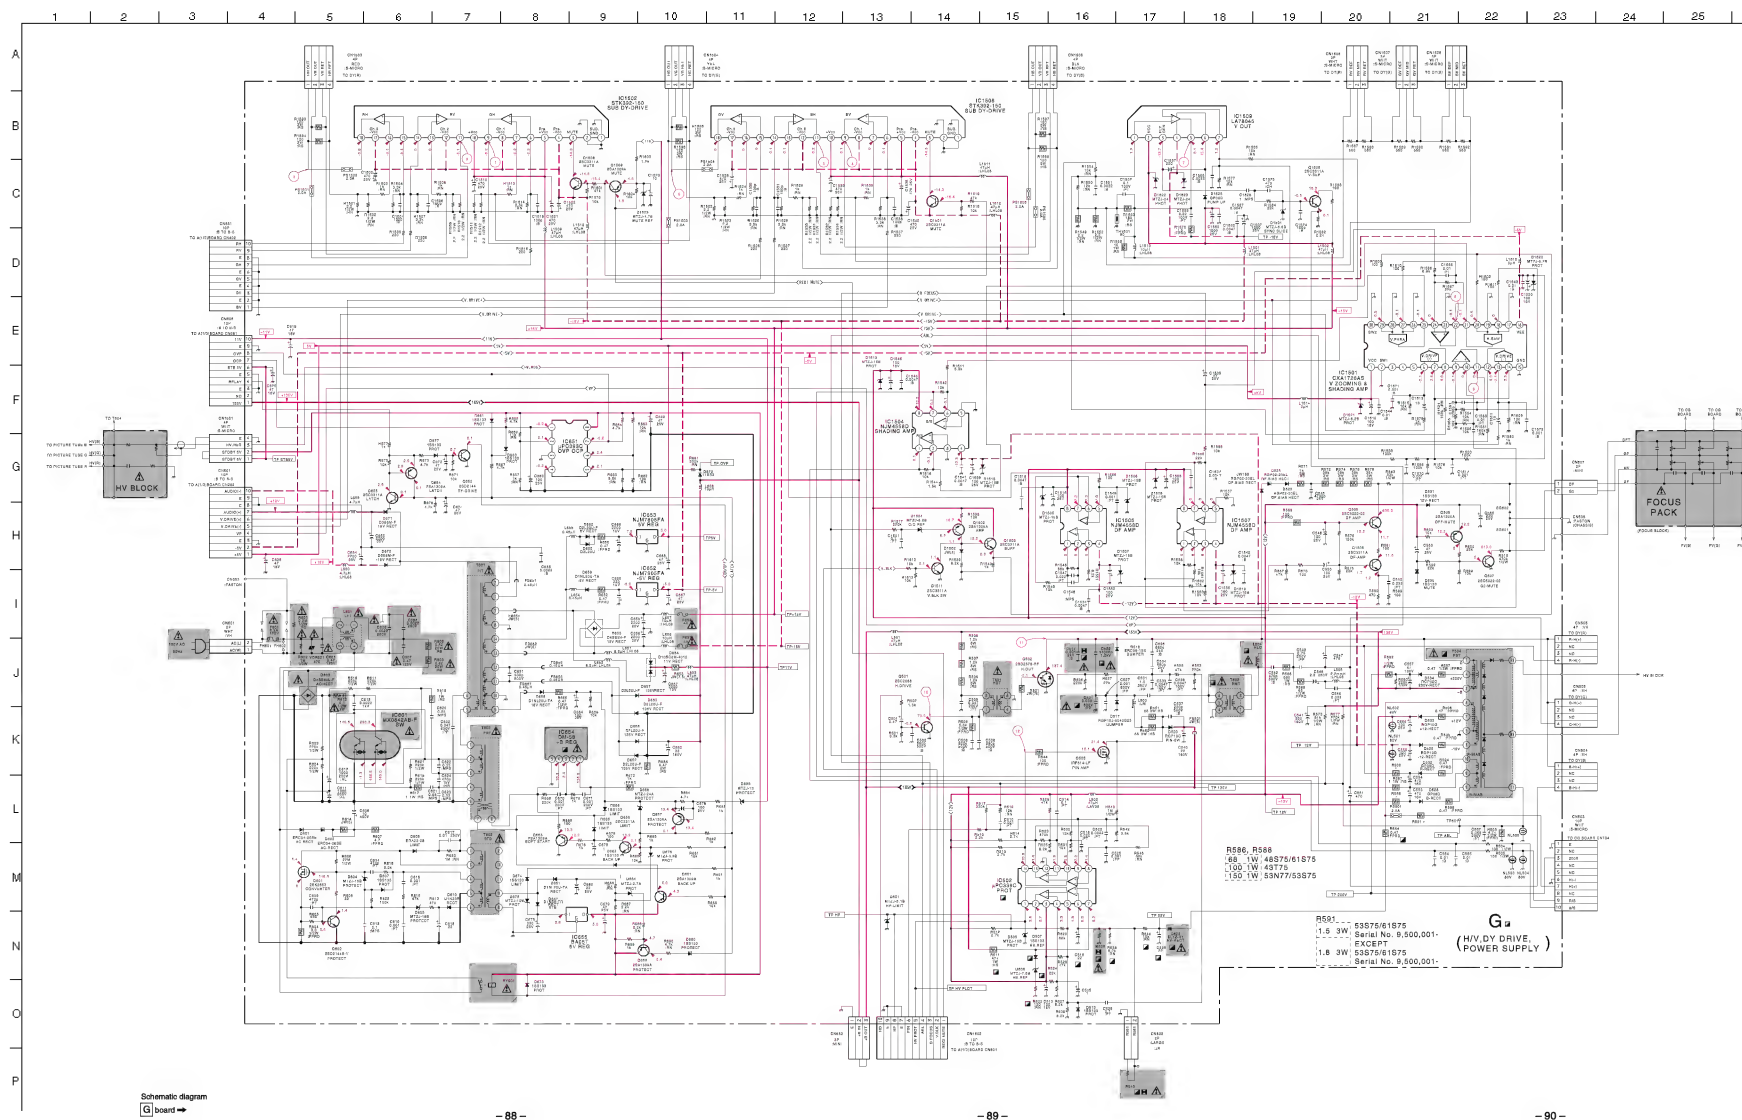


• G BOARD WAVEFORMS

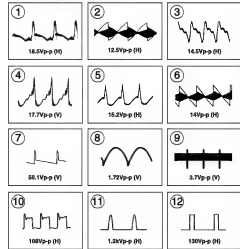

G BOARD : IC654 DM-58

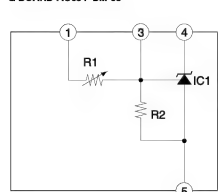


G BOARD : IC651 μPC390C

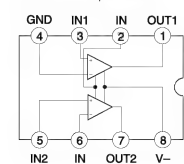

Schematic diagram
G board →


G [H/V, DY DRIVE,
POWER SUPPLY]

-G Board-

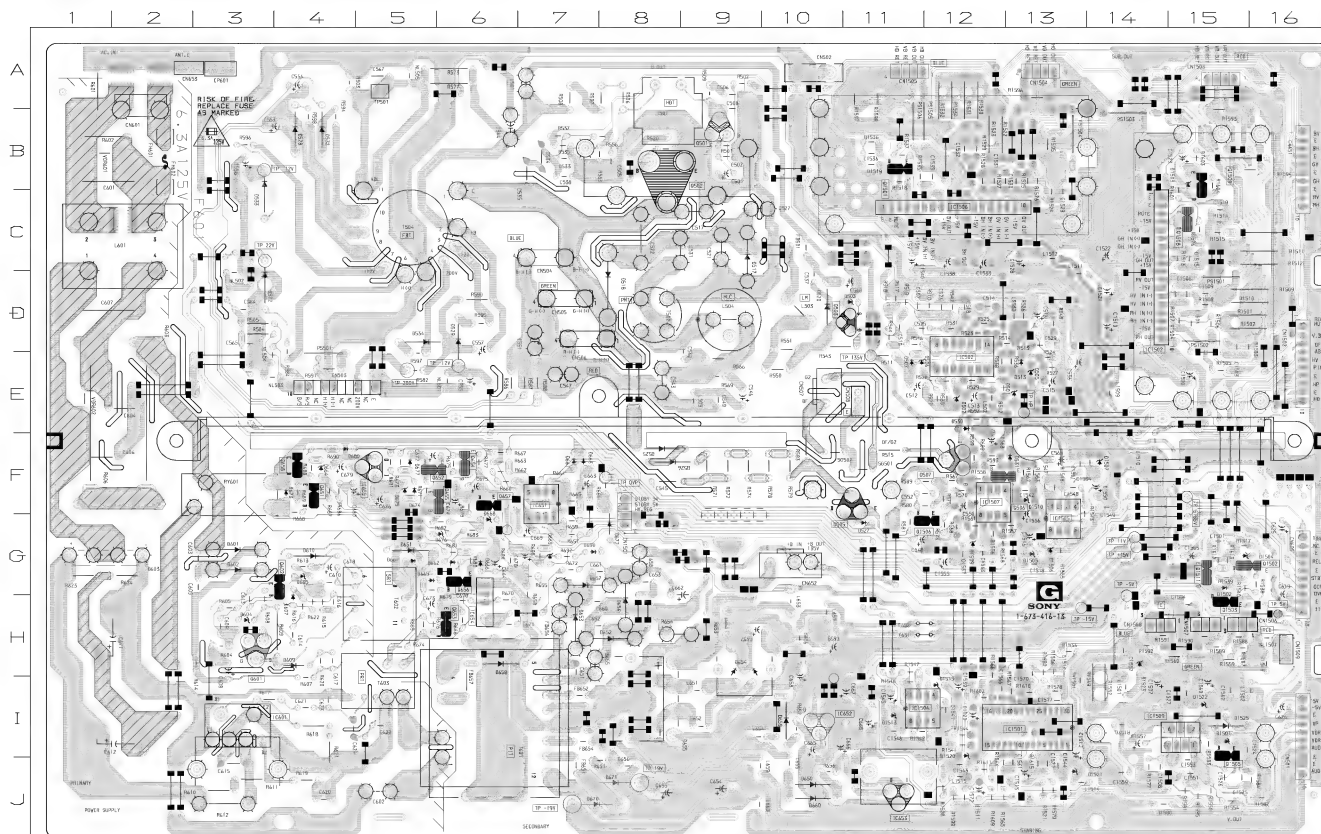


G BOARD

DIODE		D1503	B-15
D501	E-13	D1505	G-13
D505	E-13	D1504	G-15
D506	E-11	D1507	F-14
D507	E-11	D1509	G-12
D513	E-13	D1510	F-13
D517	C-9	D1513	I-11
D518	D-8	D1515	I-12
D520	D-10	D1520	J-12
D522	D-3	D1521	J-13
D525	F-8	D1522	I-15
D526	F-8	D1523	H-14
D528	B-4	D1525	I-15
D529	D-6		
D530	F-12	TRANSISTOR	
D531	F-13	Q501	B-9
D532	B-4	Q502	B-8
D533	B-6	Q503	D-11
D534	D-5	Q505	F-11
D601	G-3	Q506	F-12
D602	G-3	Q507	F-12
D603	G-2	Q601	H-3
D604	H-3	Q602	G-4
D605	G-4	Q601	F-4
D607	H-4	Q602	F-5
D609	H-4	Q603	H-6
D610	G-4	Q654	F-6
D651	G-5	Q655	F-5
D652	H-8	Q656	G-6
D653	H-7	Q657	F-6
D654	H-9	Q658	F-4
D655	I-8	Q1501	B-11
D656	H-8	Q1502	G-15
D657	G-7	Q1503	H-15
D658	H-6	Q1505	I-15
D659	I-10	Q1506	G-11
D660	J-10	Q1508	C-15
D661	F-7	Q1509	B-15
D662	G-6	Q1511	G-15
D663	F-7		
D664	F-4	IC	
D665	G-5	IC502	E-12
D666	G-6	IC601	I-3
D667	G-5	IC651	F-7
D668	G-6	IC652	I-10
D669	G-7	IC653	J-11
D670	J-7	IC654	H-6
D671	J-8	IC655	F-5
D673	F-4	IC1501	I-13
D674	F-5	IC1502	D-14
D675	F-6	IC1504	I-11
D676	G-6	IC1505	G-13
D677	F-5	IC1508	C-12
D680	F-4	IC1507	F-12
D1501	I-15	IC1509	I-15

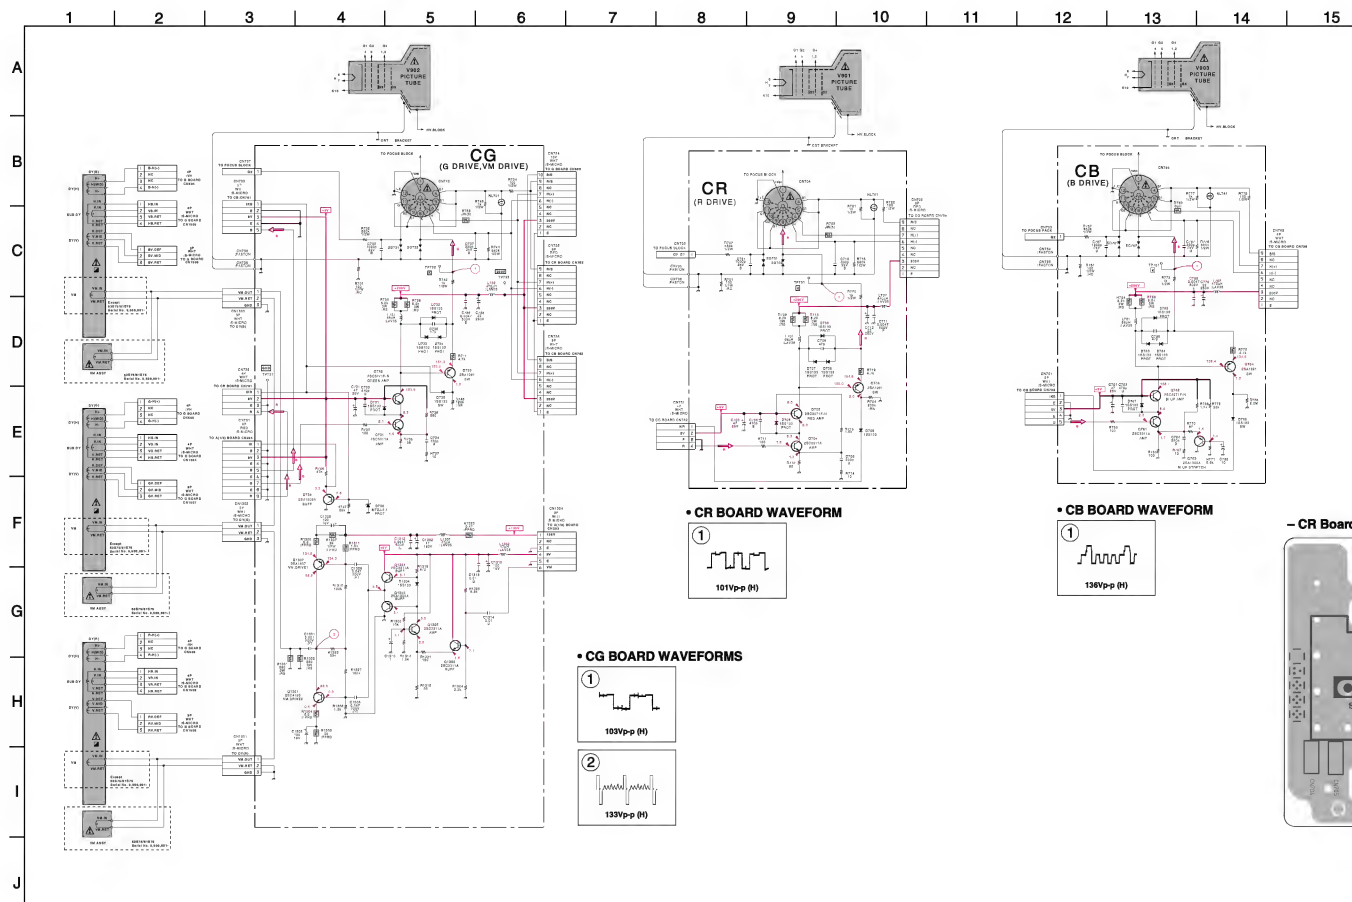


CG [G DRIVE, VM DRIVE] **CR** [R DRIVE] **CB** [B DRIVE]


- CG Board -

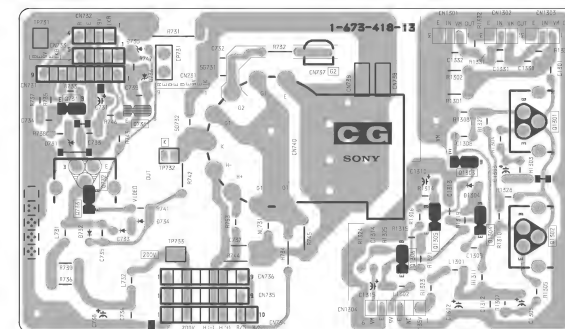



• CR BOARD WAVEFORM

 


• CB BOARD WAVEFORM

 


• CG BOARD WAVEFORMS

  


- CR Board -

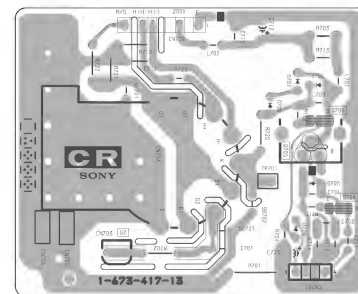

- CB Board -

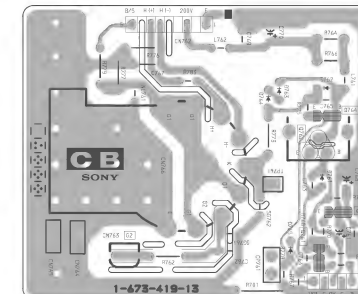

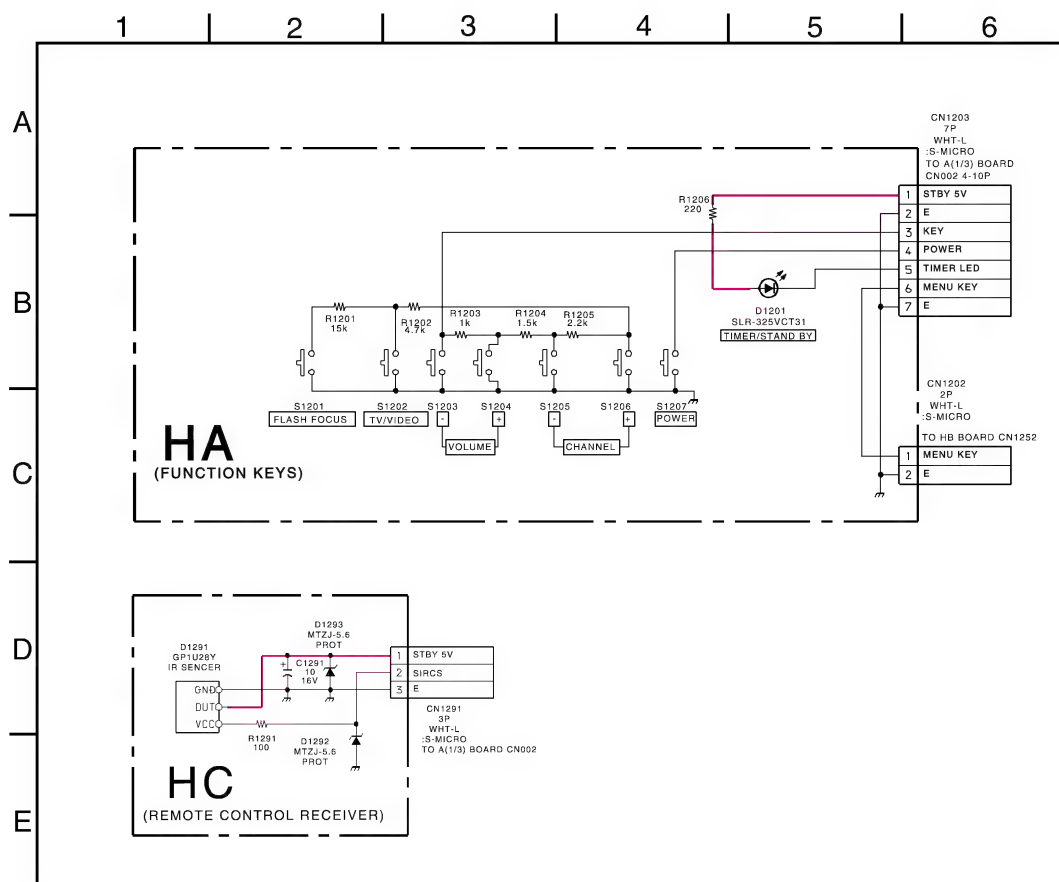


HA

[FUNCTION KEK]


HC


[RIMOTE CONTROL
RECEIVER]

– HA Board –

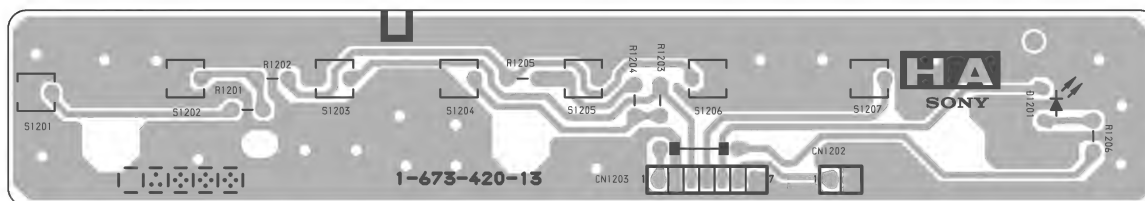


– HC Board –

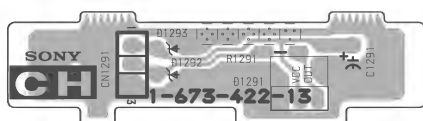

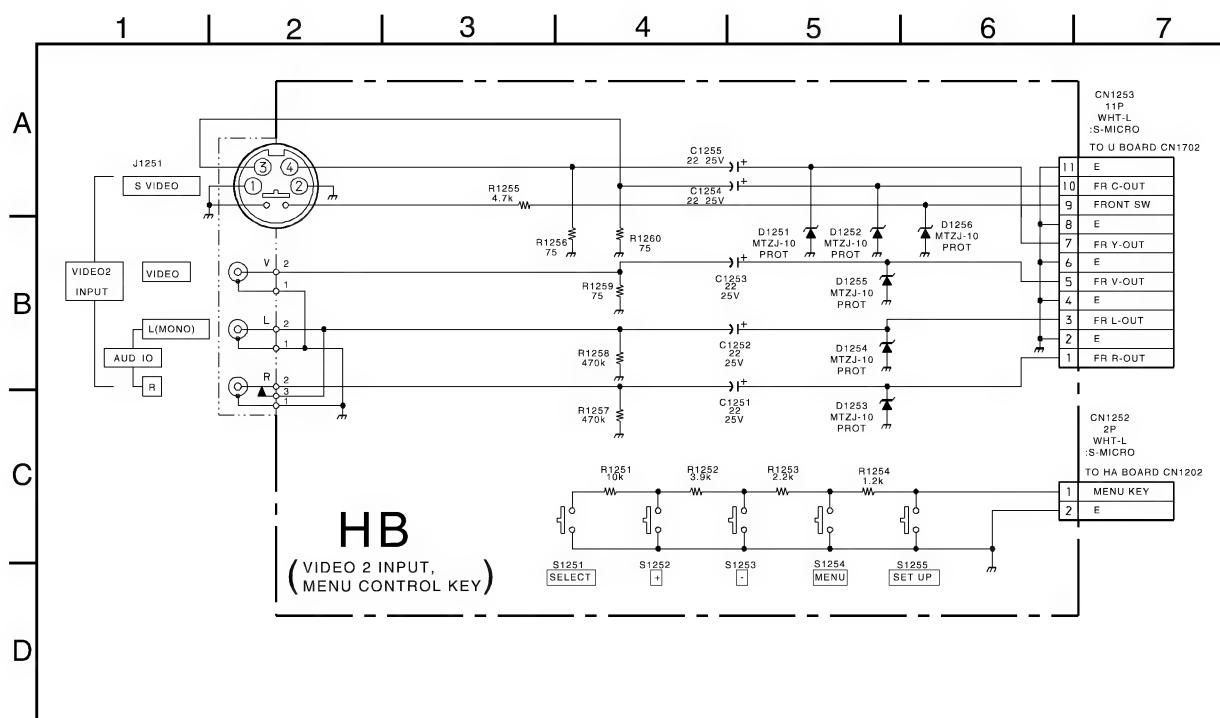


HB [VIDEO-2 INPUT, MENU
CONTROL KEYS]

— HB Board —

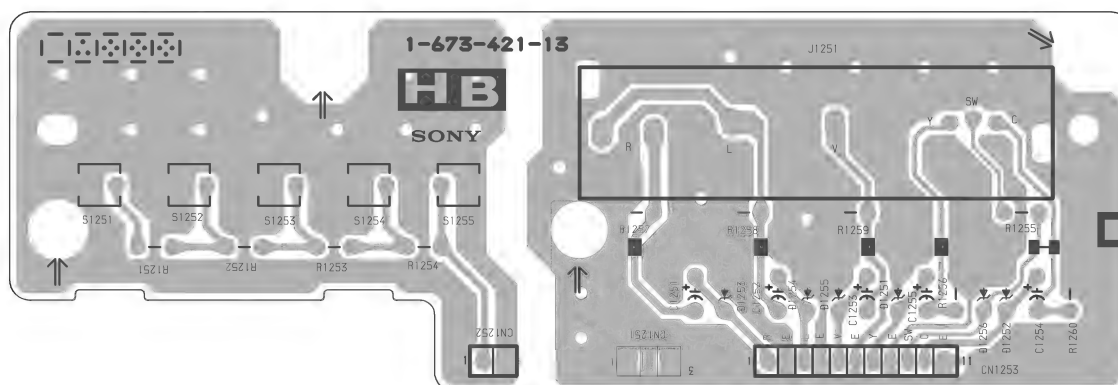


6-5. SEMICONDUCTORS

 BA05T




CXA2039M-T6

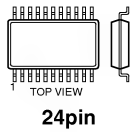


24pin

 NJM7805FA




UPC339C

 


14pin

 2SA1175-HFE
2SA1309A
2SC2785-HFE
2SC3311A




BH3868FS-E2
SDA9288XE

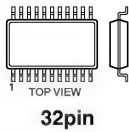


32pin


DM-58

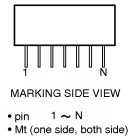


LA78045

 

NJM7905FA

 


Z8613012SSC-00TR
Z8622912SSC-00TR

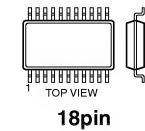

18pin

2SC5022-02

BU4053BCF-T2
CXA1315M
UPD6376GS-E2

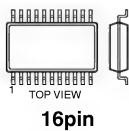


16pin

M24C08-MN6T
NJM2533M(TE2)
NJM4558M-T2
ST24E16FM6TR
TC7W66FU(TE12R)
UPCM4570G2


PQ09RD11



 
2SA1091-O



CM0006CF

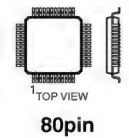


80pin

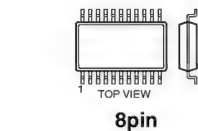


8pin

 PST9143NL




5pin

 2SA1837
2SC4793
IRF614



2SD2144S-UVW
2SD2144S-V

 


CXA1726AS



30pin


MC74HC04AF
MC74HC32AF
NJM2058M-TE2
TC74HC08AF(EL)
TLC2932IPW

 STK392-150




MARKING SIDE VIEW


 
2SC2611
2SC2688-(5)LK



2SD2578-RF

 


CXA2079Q
CXA2147Q
CXP750010-026Q
CXP86324-024Q

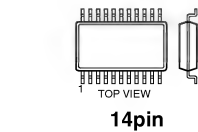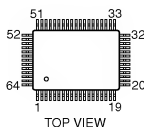


14pin

 TC90A53F




28pin

 
2SA1162-G
2SD601A-Q
DTC143TKA-T146
DTC144EKA-T146



2SK2663

 


CXA2019AQ-T4

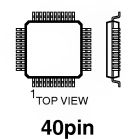


40pin

 NJM4558D
UPC393C




8pin

 TDA7265




11pin

 
11ES2
 D1N20R
 D1NL20U
 D2L20U
 MTZJ-10B
 MTZJ-13
 MTZJ-15B
 MTZJ-2.7A
 MTZJ-3.9B
 MTZJ-4.7C
 MTZJ-5.1B
 MTZJ-7.5B
 MTZJ-T-77-15B
 MTZJ-T-77-18B
 MTZJ-T-77-24A
 MTZJ-T-77-5.6B
 MTZJ-T-77-6.2B
 MTZJ-T-77-8.2B



 
1SS133-T17
 D3S6M-F
 ERA22-08
 ERC04-06SE
 ERC06-15S
 ERC91-02




1SS355TE-17
 UDZ-TE17-10B
 UDZ-TE17-22B
 UDZ-TE17-33B
 UDZS-TE17-5.6B
 UDZS-TE17-8.2B

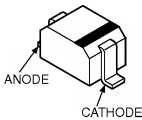


D10SC6M-4012

 


D1NL20U

 

 
D1NS6
 EL1Z
 GP08DPKG23
 RGP02-20EL-6394
 RGP10GPKG23
 RGP15J-6040G23



D4SBS4-F

 

SLR-325VCT31

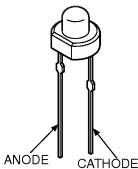


 
SECTION 7 EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service
- The construction parts of an assembled part are indicated with a collation number in the remark column.


- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark  are critical for safety.
Replace only with part number specified.

Les composants identifiés par une trame et une marque  sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

7-1. COVER (KP-43T75)


- : +BVTP 3X12 7-685-648-79
- : +BVTP 4X12 7-685-661-14

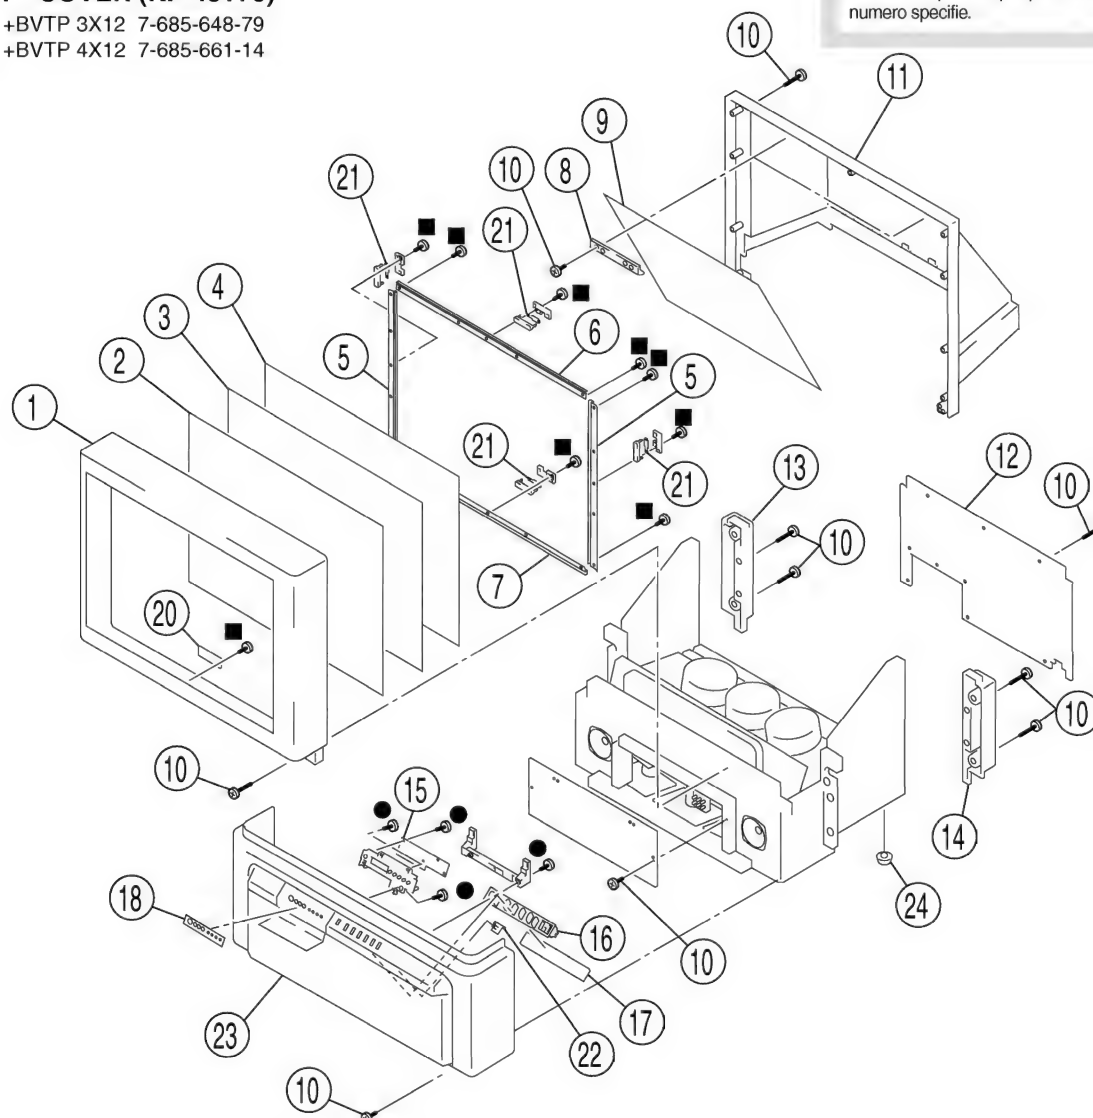

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
1	* X-4036-892-1	BEZNET ASSY		13	4-069-703-01	CAP(L), CONTROL	
2	4-070-286-11	SCREEN (43), CONTRAST		14	4-069-704-01	CAP(R), CONTROL	
3	4-070-284-11	PLATE(L), DIFFUSION		15	* A-1372-620-A	HB BOARD, COMPLETE	
4	4-070-285-11	PLATE(43F), DIFFUSION		16	4-069-681-21	BUTTON, MULTI	
5	* 4-070-332-31	HOLDER (L), SCREEN (NC)		17	* A-1372-619-A	HA BOARD, COMPLETE	
6	* 4-070-333-21	HOLDER (S), SCREEN (NC)		18	4-072-529-01	LABEL(2), SPEAKER GRILLE	
7	* 4-070-333-31	HOLDER (S), SCREEN (NC)		20	* A-1372-618-A	HC BOARD, COMPLETE	
8	* 4-069-686-01	HOLDER, MIRROR		21	* A-1390-933-A	S BOARD, COMPLETE	
9	4-077-051-01	MIRROR, REFLECTION (43T)		22	4-069-682-01	GUIDE, LED	
10	4-378-522-31	SCREW (4X20), TAPPING		23	* X-4036-893-2	PANEL ASSY, CONTROL	
11	* 4-069-696-03	COVER (43), MIRROR		24	4-057-611-01	FOOT	
12	* 4-071-387-02	BOARD, REAR					

7-2. COVER (KP-48S75)

- : +BVTP 3X12 7-685-648-79
■ : +BVTP 4X12 7-685-661-14

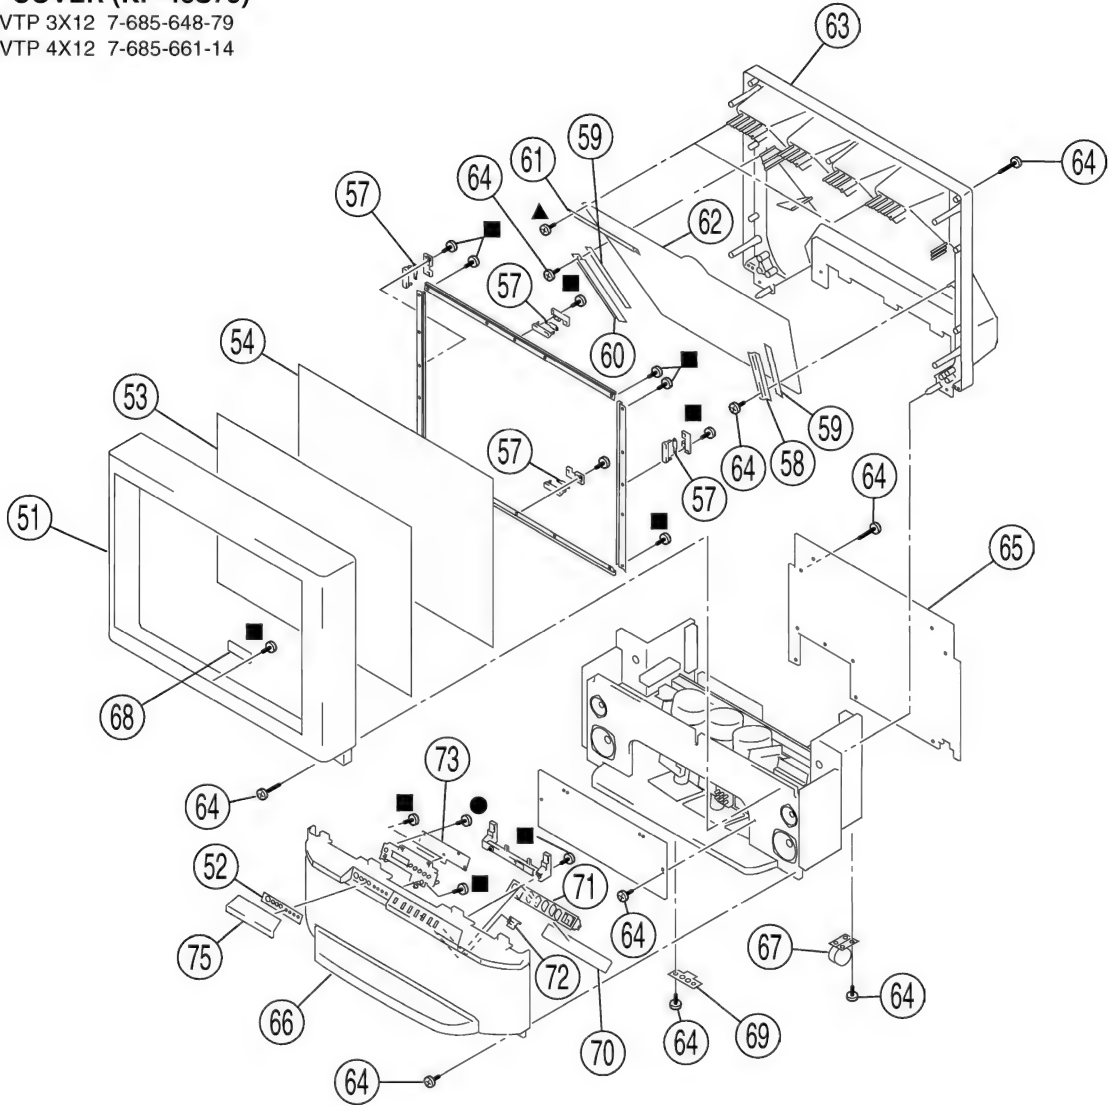


REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
51	X-4036-838-1	BEZNET ASSY (48V)		64	4-378-522-31	SCREW (4X20), TAPPING	
52	4-072-529-01	LABEL(2), SPEAKER GRILLE		65	* 4-071-126-01	BOARD, REAR (48)	
53	4-070-280-11	PLATE (L), DIFFUSION		66	X-4036-756-1	GRILLE ASSY (53S), SPEAKER	75
54	4-058-455-11	PLATE (F), DIFFUSION		67	4-040-755-01	CASTER (DIA. 30)	
57	* A-1390-933-A	S BOARD, COMPLETE		68	* A-1372-618-A	HC BOARD, COMPLETE	
58	* 4-051-789-02	HOLDER, MIRSD (R)		69	4-048-175-01	FOOT, PLASTIC	
59	* 4-049-098-01	CUSHION		70	* A-1372-619-A	HA BOARD, COMPLETE	
60	* 4-051-790-02	HOLDER, MIRSD (L)		71	4-069-681-11	BUTTON, MULTI	
61	* 4-070-345-21	HOLDER (TOP), MIRROR		72	4-069-682-01	GUIDE, LED	
62	4-071-048-02	MIRROR (48), REFLECTION		73	* A-1372-620-A	HB BOARD, COMPLETE	
63	* 4-057-610-01	COVER, MIRROR		75	4-069-659-01	DOOR(S), CONTROL	

7-3. COVER (KP-53N77/53S75/61S75)

● : +BVTP 3X12 7-685-648-79

■ : +BVTP 4X12 7-685-661-14

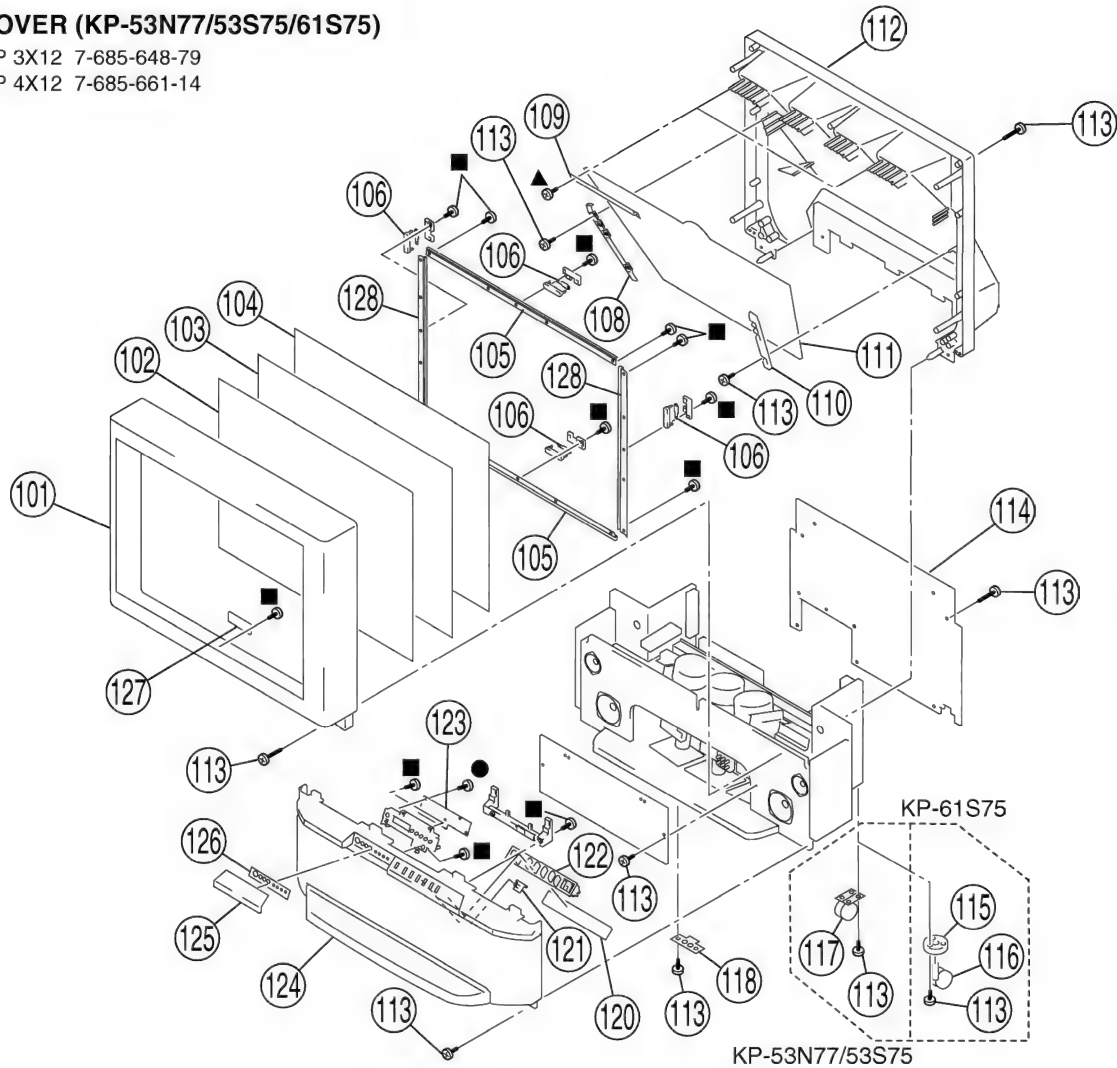


REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
101	X-4036-755-1	BEZNET ASSY (53S) (53N77)		113	4-378-522-31	SCREW (4X20), TAPPING	
	X-4036-807-1	BEZNET ASSY (61V) (61S75)		114	* 4-070-342-01	BOARD (53), REAR (53N77/53S75)	
	X-4036-809-1	BEZNET ASSY (53V) (53S75)			* 4-070-920-02	BOARD, REAR (61S75)	
102	4-071-582-01	SCREEN (53), CONTRAST (53N77)		115	4-030-850-01	SOCKET, CASTER (61S75)	
103	4-070-281-11	PLATE (L), DIFFUSION (53S75)		116	4-039-546-01	CASTER (61S75)	
	4-070-283-11	PLATE (L), DIFFUSION (61S75)		117	4-040-755-01	CASTER (DIA. 30) (EXCEPT 61S75)	
	4-070-525-11	PLATE (L), DIFFUSION (53N77)		118	4-048-175-01	FOOT, PLASTIC	
104	4-066-082-11	PLATE (F), DIFFUSION (61S75)		120	* A-1372-619-A	HA BOARD, COMPLETE	
	4-070-602-11	PLATE (F), DIFFUSION (53N77,53S75)		121	4-069-682-01	GUIDE, LED	
105	* 4-070-328-11	HOLDER (L), SCREEN (YC) (53N77)		122	4-069-681-11	BUTTON, MULTI	
	* 4-070-331-11	HOLDER (L), SCREEN (NC) (53S75)		123	* A-1372-620-A	HB BOARD, COMPLETE	
	* 4-070-332-01	HOLDER (L), SCREEN (NC) (61S75)		124	X-4036-756-1	GRILLE ASSY (53S), SPEAKER (53S75)	125
106	* A-1390-933-A	S BOARD, COMPLETE			X-4036-875-1	PANEL ASSY, CONTROL (53S-STAR) (53N77)	125
108	* 4-069-687-01	HOLDER (LS), MIRROR (53N77,53S75)			* X-4036-889-1	GRILLE (61S) ASSY, SPEAKER (61S75)	125
	* 4-069-689-01	HOLDER (L), MIRROR (61S75)		125	4-069-659-01	DOOR (S), CONTROL (53S75,61S75)	
109	* 4-070-345-01	HOLDER (TOP), MIRROR (61S75)			4-069-671-01	DOOR (V), CONTROL (53N77)	
	* 4-070-345-11	HOLDER (TOP), MIRROR (53N77,53S75)		126	4-072-529-01	LABEL(2), SPEAKER GRILLE	
110	* 4-069-688-01	HOLDER (RS), MIRROR (53N77,53S75)		127	* A-1372-618-A	HC BOARD, COMPLETE	
	* 4-069-690-01	HOLDER (R), MIRROR (61S75)		128	* 4-070-330-01	HOLDER (S), SCREEN (YC) (53N77)	
111	4-070-344-01	MIRROR, REFLECTION (53N77,53S75)			* 4-070-333-01	HOLDER (S), SCREEN (NC) (53S75)	
	4-070-922-01	MIRROR, REFLECTION (61S75)			* 4-070-335-01	HOLDER (S), SCREEN (NC) (61S75)	
112	* 4-069-694-01	COVER, MIRROR (53N77,53S75)					
	* 4-070-922-01	COVER, MIRROR (61S75)					

Les composants identifiés par
une trame et une marque \triangle
sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.

The components identified by
shading and mark \triangle are critical
for safety.
Replace only with part number
specified.

7-4. CHASSIS (KP-43T75)

● : +BVTP 3X12 7-685-648-79

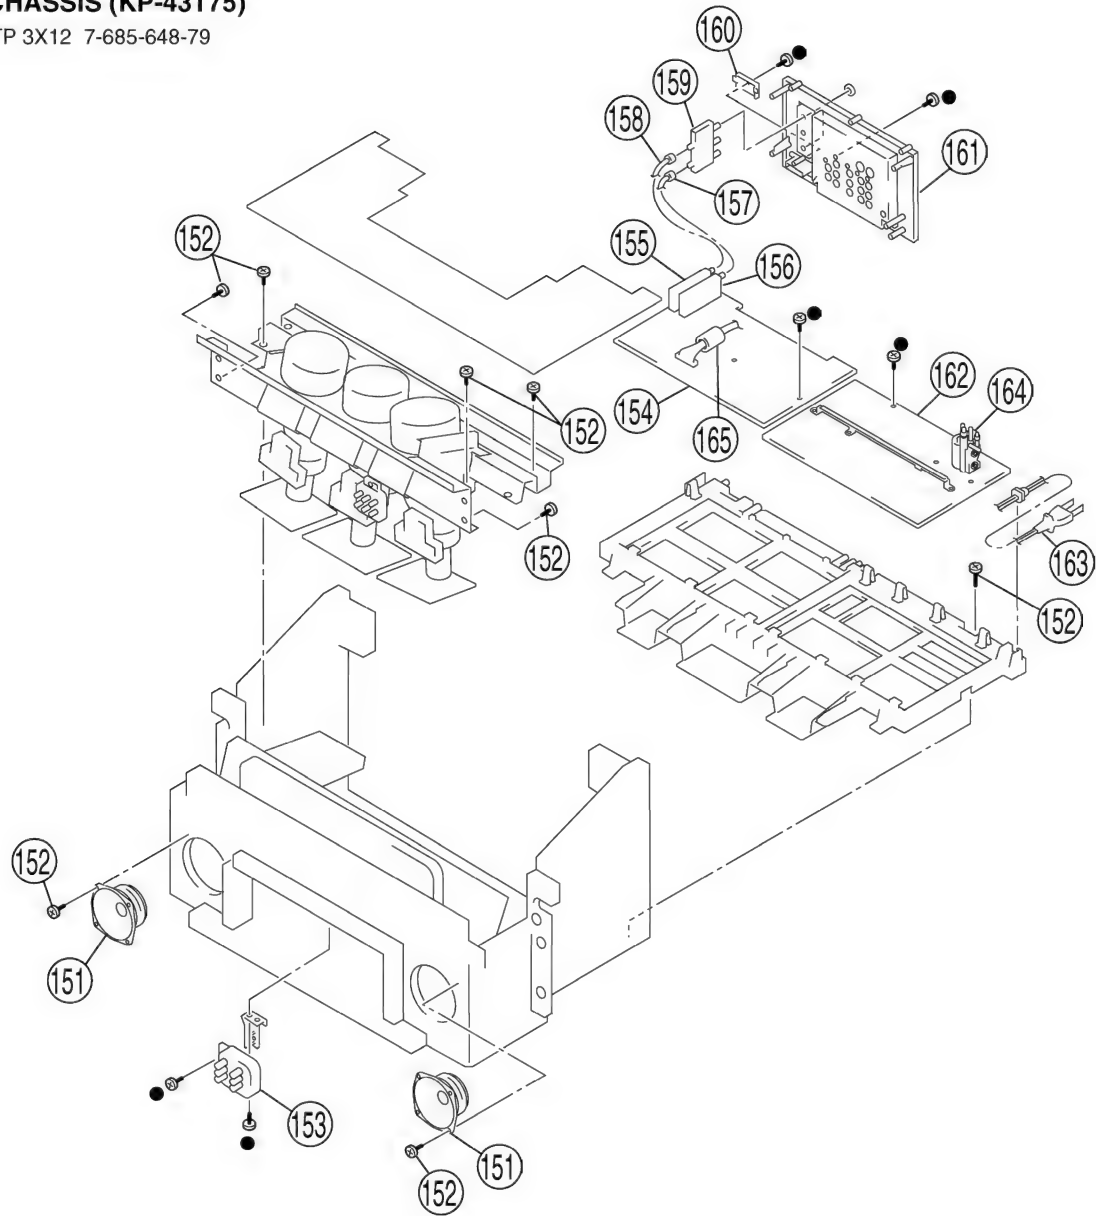


REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
151	1-529-396-11	SPEAKER (10cm)		158	1-556-945-21	CABLE, P-P	
152	4-378-522-31	SCREW (4X20), TAPPING		159	\triangle 8-598-414-20	CHANGER, ANTENNA AS-2F	
153	\triangle 1-223-925-11	RESISTOR ASSY (HIGH-VOLTAGE)	(FOCUS PACK)	160	4-069-675-01	CAP, TERMINAL BOARD	
154	* A-1298-864-A	A BOARD, COMPLETE		161	4-069-674-11	TERMINAL BOARD	
155	8-598-431-00	TUNER, FSS BTF-WA411 (TU151)		162	* A-1316-475-A	G BOARD, COMPLETE	
156	8-598-430-00	TUNER, FSS BTF-FA401 (TU152)		163	\triangle 1-790-001-11	CORD, AC POWER (WITH CONNECTOR)	
157	* 1-557-056-31	CABLE, P-P		164	\triangle 1-453-238-31	FLAYBACK TRANS ASSY (T504)	
				165	1-500-021-11	CLAMP, SLEEVE FERRITE	

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

7-5. CHASSIS (EXCEPT KP-43T75)

● : +BVTP 3X12 7-685-648-79

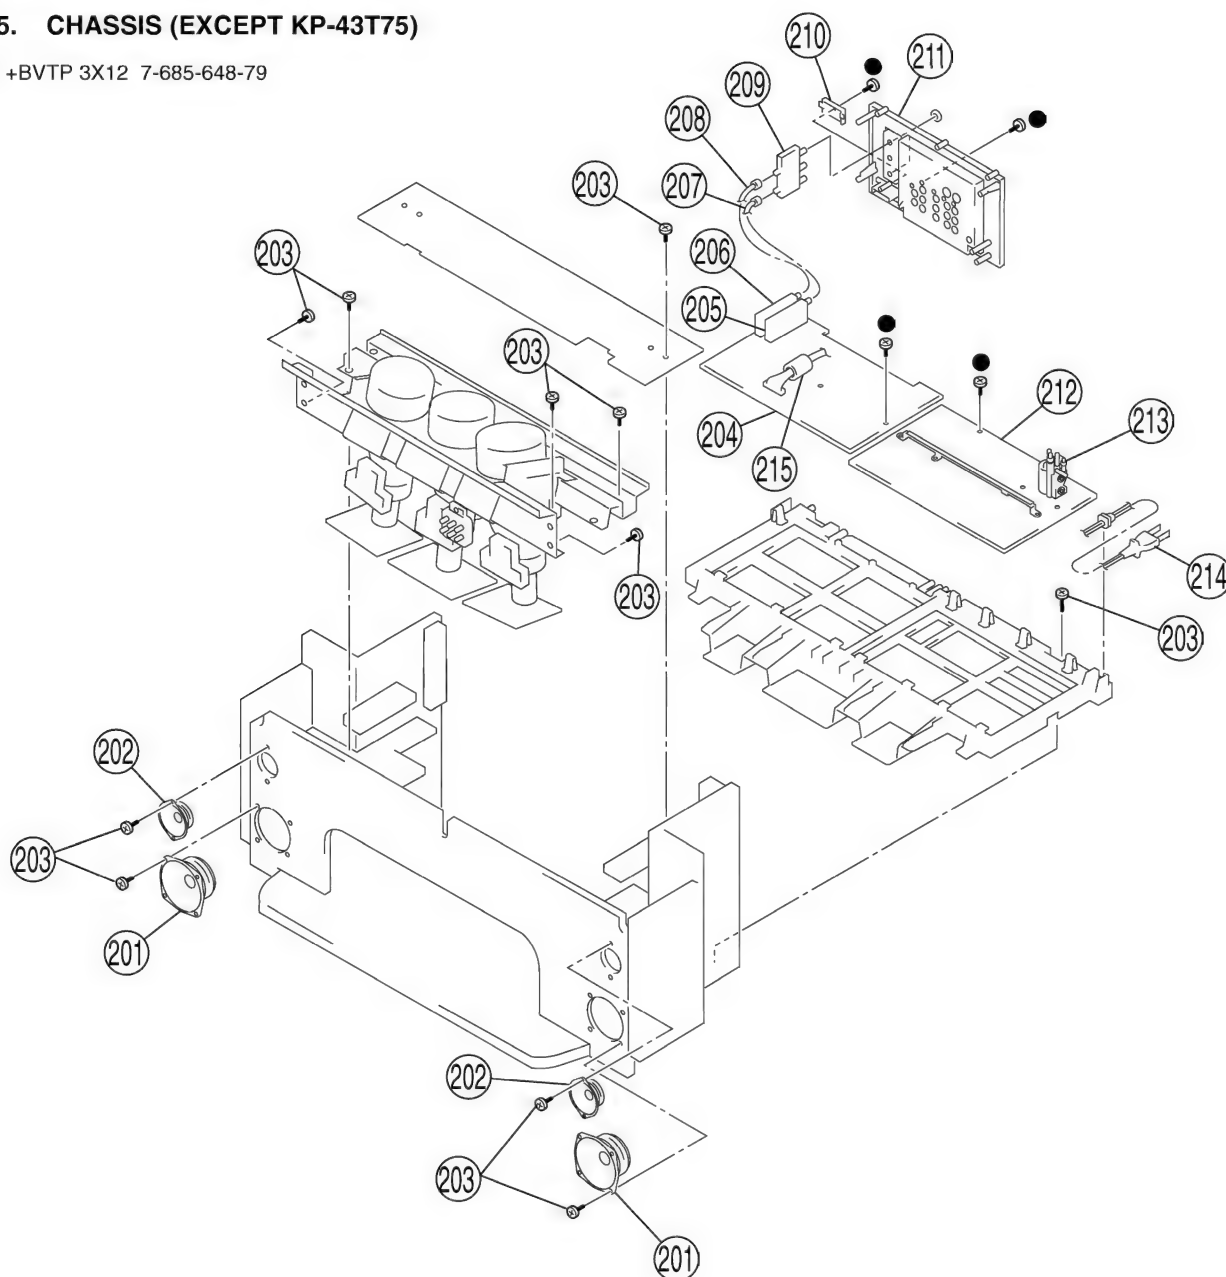

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
201	1-529-396-11	SPEAKER (10cm) (EXCEPT 53N77)		211	4-069-674-11	TERMINAL BOARD	
	1-529-401-11	SPEAKER (13cm) (53N77)		212	* A-1316-437-A G BOARD, COMPLETE (53N77,53S75)		
202	1-529-403-11	SPEAKER (6.6cm) (53N77)			* A-1316-471-A G BOARD, COMPLETE (48S75,61S75)		
203	4-378-522-31	SCREW (4X20), TAPPING			* A-1316-498-A G BOARD, COMPLETE		(61S75 Serial No. 9,500,001-)
204	* A-1298-864-A	A BOARD, COMPLETE (EXCEPT 53N77)			* A-1316-499-A G BOARD, COMPLETE		(53S75 Serial No. 9,500,001-)
	* A-1298-981-A	A BOARD, COMPLETE (53N77)					
205	8-598-430-00	TUNER, FSS BTF-FA401 (TU152)		213	Δ 1-453-238-31	FLAYBACK TRANS ASSY (T504)	
206	8-598-431-00	TUNER, FSS BTF-WA411 (TU151)		214	Δ 1-790-001-11	CORD, AC POWER (WITH CONNECTOR)	(48S75,61S75)
207	* 1-557-056-31	CABLE, P-P			Δ 1-790-130-11	CORD, AC POWER (WITH CONNECTOR)	(53N77,53S75)
208	1-556-945-21	CABLE, P-P					
209	Δ 8-598-414-20	CHANGER, ANTENNA AS-2F		215	1-500-021-11	CLAMP, SLEEVE FERRITE	
210	4-069-675-01	CAP, TERMINAL BOARD					


**KP-43T75/48S75/
53N77/53S75/61S75**
RM-Y906

Les composants identifiés par
une trame et une marque \triangle
sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.

The components identified by
shading and mark \triangle are critical
for safety.
Replace only with part number
specified.

7-6. PICTURE TUBE

- : +BVTP 3X12 7-685-648-79
■ : +BVTP 4X12 7-685-661-14

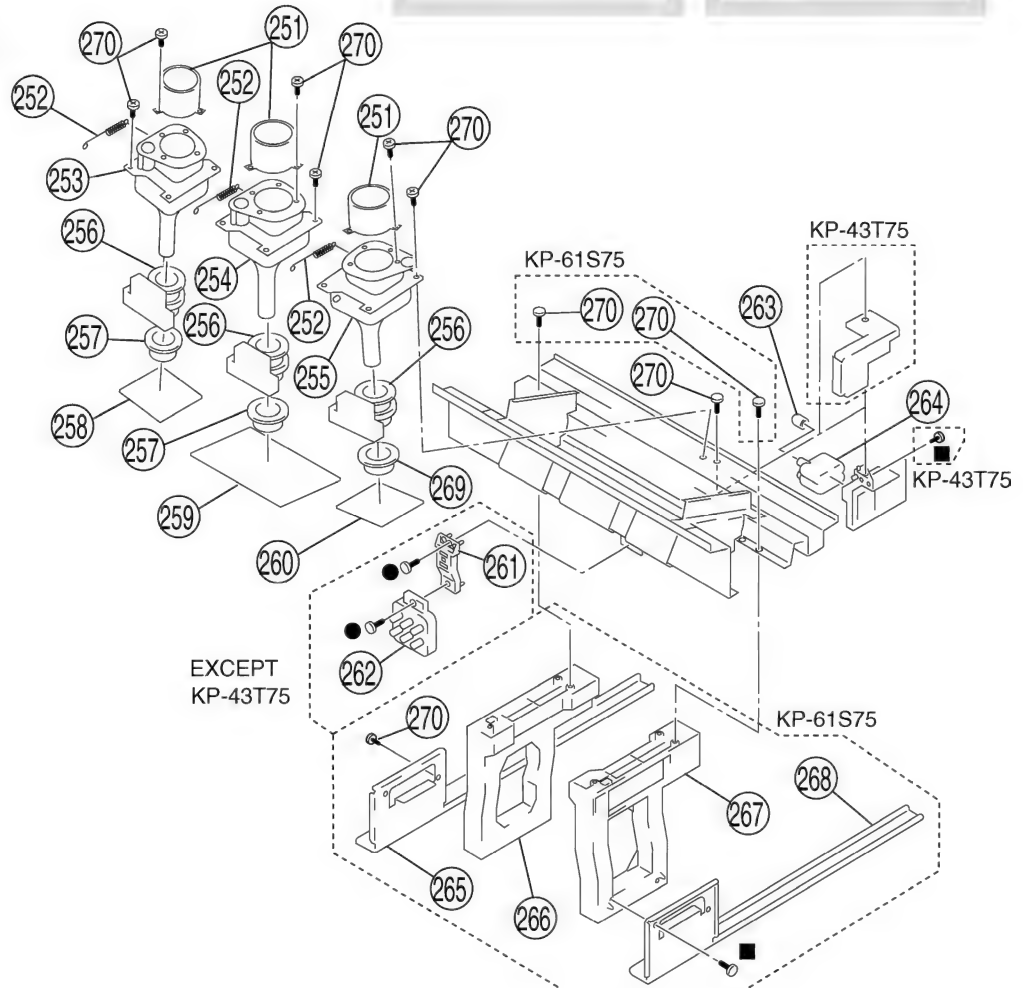

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
251	4-040-131-21	LENS (LINNIT POINT 6) (61S75)		256	\triangle 1-451-496-11	DEFLECTION YOKE (EXCEPT 53S75/61S75 Serial No. 9,500,001-)	
	4-056-258-11	LENS (DELTA 78) (EXCEPT 61S75)			\triangle 1-451-496-21	DEFLECTION YOKE (53S75/61S75 Serial No. 9,500,001-)	
252	4-057-007-01	SPRING, TENSION (53S75/61S75 Serial No. 9,500,001-)		257	\triangle 1-451-469-21	COIL ASSY, VM (53S75/61S75 Serial No. 9,500,001-)	
253	\triangle 8-733-571-15	CRT 07MXC2(R)(HEATER) (43T75)			\triangle 1-452-790-21	NECK ASSY (EXCEPT 53S75/61S75 Serial No. 9,500,001-)	
	\triangle 8-733-572-15	CRT 07MXC3(R)(HEATER) (48S75,53N77,53S75)		258	* A-1331-922-A	CR BOARD, COMPLETE	
	\triangle 8-733-573-15	CRT 07MXC4(R)(HEATER) (61S75)		259	* A-1331-923-A	CG BOARD, COMPLETE	
	\triangle A-1501-521-A	COUPLER ASSY, CRT (R) (61S75 Serial No. 9,500,001-)		260	* A-1331-924-A	CB BOARD, COMPLETE	
	\triangle A-1501-526-A	COUPLER ASSY, CRT (R) (53S75 Serial No. 9,500,001-)		261	* 4-063-403-01	BRACKET, FOCUS PACK (EXCEPT 43T75)	
254	\triangle 8-733-570-15	CRT 07MXC2(G)(HEATER) (EXCEPT 53S75/61S75 Serial No. 9,500,001-)		262	\triangle 1-223-925-11	RESISTOR ASSY (HIGH-VOLTAGE) (FOCUS PACK) (EXCEPT 43T75)	
	\triangle A-1501-522-A	COUPLER ASSY, CRT (G) (53S75/61S75 Serial No. 9,500,001-)		263	4-373-137-01	CAP(Z), RUBBER (43T70)	
255	\triangle 8-733-574-15	CRT 07MAC2(B)(HEATER) (43T75)		264	\triangle 8-598-955-30	BLOCK ASSY, HIGH-VOLTAGE	
	\triangle 8-733-575-15	CRT 07MAC3(B)(HEATER) (48S75,53N77,53S75)		265	4-070-916-01	STAY (R), CHASSIS (61S75)	
	\triangle 8-733-576-15	CRT 07MAC4(B)(HEATER) (61S75)		266	4-069-677-02	BOARD (L), SIDE (61S75)	
	\triangle A-1501-520-A	COUPLER ASSY, CRT (B) (61S75 Serial No. 9,500,001-)		267	4-069-678-02	BOARD (R), SIDE (61S75)	
	\triangle A-1501-527-A	COUPLER ASSY, CRT (B) (53S75 Serial No. 9,500,001-)		268	4-070-917-02	STAY (L), CHASSIS (61S75)	
				269	\triangle 1-451-469-21	COIL ASSY, VM (53S75/61S75 Serial No. 9,500,001-)	
					\triangle 1-452-909-31	MAGNET ASSY, 4 POLE (EXCEPT 53S75/61S75 Serial No. 9,500,001-)	
				270	4-052-894-01	SCREW (4X20), HEAD TAPPING	

A

SECTION 8 ELECTRICAL PARTS LIST

The components identified by shading and mark **△** are critical for safety.
Replace only with part number specified.

Les composants identifiés par une trame et une marque **△** sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- The components identified by in **■** this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- CAPACITORS
PF : μF
- There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

RESISTORS

- All resistors are in ohms
- F : nonflammable

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
* A-1298-864-A A BOARD, COMPLETE (EXCEPT 53N77)				C128	1-128-551-11	ELECT	22μF 20% 25V
*****				C151	1-126-935-11	ELECT	470μF 20% 16V
* A-1298-981-A A BOARD, COMPLETE (53N77)				C152	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
*****				C153	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
- 4-382-854-11 SCREW (M3X10), P, SW (+)				C154	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
<CAPACITOR>				C155	1-128-551-11	ELECT	22μF 20% 25V
C002	1-163-259-91	CERAMIC CHIP	220pF 5% 50V	C156	1-126-933-11	ELECT	100μF 20% 16V
C003	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	C157	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
C004	1-163-809-11	CERAMIC CHIP	0.047μF 10% 25V	C159	1-164-161-11	CERAMIC CHIP	0.0022μF 10% 50V
C005	1-126-935-11	ELECT	470μF 20% 6.3V	C161	1-126-968-11	ELECT	100μF 20% 50V
C006	1-126-960-11	ELECT	1μF 20% 50V	C162	1-126-960-11	ELECT	1μF 20% 50V
C015	1-163-259-91	CERAMIC CHIP	220pF 5% 50V	C163	1-126-959-11	ELECT	0.47μF 20% 50V
C016	1-163-809-11	CERAMIC CHIP	0.047μF 10% 25V	C164	1-128-551-11	ELECT	22μF 20% 25V
C039	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	C165	1-128-551-11	ELECT	22μF 20% 25V
C040	1-126-916-11	ELECT	1000μF 20% 6.3V	C166	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
C041	1-163-229-11	CERAMIC CHIP	12pF 5% 50V	C167	1-126-935-11	ELECT	470μF 20% 16V
C042	1-126-960-11	ELECT	1μF 20% 50V	C168	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
C044	1-163-231-11	CERAMIC CHIP	15pF 5% 50V	C170	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
C072	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	C171	1-126-933-11	ELECT	100μF 20% 16V
C080	1-163-227-11	CERAMIC CHIP	10pF 0.50pF50V	C172	1-126-964-11	ELECT	10μF 20% 50V
C081	1-163-227-11	CERAMIC CHIP	10pF 0.50pF50V	C173	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
C082	1-163-227-11	CERAMIC CHIP	10pF 0.50pF50V	C174	1-126-933-11	ELECT	100μF 20% 16V
C085	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	C175	1-128-551-11	ELECT	22μF 20% 25V
C086	1-163-229-11	CERAMIC CHIP	12pF 5% 50V	C176	1-164-161-11	CERAMIC CHIP	0.0022μF 10% 50V
C087	1-126-964-11	ELECT	10μF 20% 50V	C177	1-126-959-11	ELECT	0.47μF 20% 50V
C091	1-163-227-11	CERAMIC CHIP	10pF 0.50pF50V	C178	1-126-960-11	ELECT	1μF 20% 50V
C093	1-126-933-11	ELECT	100μF 20% 16V	C179	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
C094	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	C180	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
C098	1-163-227-11	CERAMIC CHIP	10pF 0.50pF50V	C276	1-163-251-11	CERAMIC CHIP	100pF 5% 50V
C099	1-163-227-11	CERAMIC CHIP	10pF 0.50pF50V	C277	1-126-959-11	ELECT	0.47μF 20% 50V
C100	1-163-227-11	CERAMIC CHIP	10pF 0.50pF50V	C279	1-126-959-11	ELECT	0.47μF 20% 50V
C101	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	C280	1-163-251-11	CERAMIC CHIP	100pF 5% 50V
C102	1-163-239-11	CERAMIC CHIP	33pF 5% 50V	C281	1-130-495-00	MYLAR	0.1μF 5% 50V
C103	1-163-239-11	CERAMIC CHIP	33pF 5% 50V	C282	1-130-495-00	MYLAR	0.1μF 5% 50V
C104	1-163-227-11	CERAMIC CHIP	10pF 0.50pF50V	C283	1-130-495-00	MYLAR	0.1μF 5% 50V
C105	1-163-227-11	CERAMIC CHIP	10pF 0.50pF50V	C284	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
C106	1-163-227-11	CERAMIC CHIP	10pF 0.50pF50V	C285	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
C107	1-128-551-11	ELECT	22μF 20% 25V	C286	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
C126	1-128-551-11	ELECT	22μF 20% 25V	C287	1-126-964-11	ELECT	10μF 20% 50V
				C288	1-130-495-00	MYLAR	0.1μF 5% 50V
				C289	1-137-581-11	FILM	0.1μF 5% 100V



REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
C290	1-126-935-11	ELECT	470μF	20%	16V	C448	1-130-471-00	MYLAR	0.001μF	5%	50V
C291	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V	C449	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C293	1-164-182-11	CERAMIC CHIP	0.0033μF	10%	50V	C450	1-126-963-11	ELECT	4.7μF	20%	50V
C294	1-130-495-00	MYLAR	0.1μF	5%	50V	C451	1-126-933-11	ELECT	100μF	20%	16V
C296	1-126-961-11	ELECT	2.2μF	20%	50V	C453	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C297	1-163-251-11	CERAMIC CHIP	100pF	5%	50V	C454	1-130-489-00	MYLAR	0.033μF	5%	50V
C299	1-126-959-11	ELECT	0.47μF	20%	50V	C456	1-126-933-11	ELECT	100μF	20%	16V
C300	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	C457	1-126-934-11	ELECT	220μF	20%	16V
C301	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	C458	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C302	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	C459	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C303	1-126-933-11	ELECT	100μF	20%	16V	C460	1-126-943-11	ELECT	2200μF	20%	25V
C304	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V	C461	1-126-943-11	ELECT	2200μF	20%	25V
C305	1-163-017-00	CERAMIC CHIP	0.0047μF	10%	50V	C462	1-126-961-11	ELECT	2.2μF	20%	50V
C306	1-126-959-11	ELECT	0.47μF	20%	50V	C463	1-126-961-11	ELECT	2.2μF	20%	50V
C307	1-126-959-11	ELECT	0.47μF	20%	50V	C464	1-126-933-11	ELECT	100μF	20%	16V
C308	1-126-963-11	ELECT	4.7μF	20%	50V	C465	1-128-551-11	ELECT	22μF	20%	25V
C309	1-163-133-00	CERAMIC CHIP	470pF	5%	50V	C466	1-128-551-11	ELECT	22μF	20%	25V
C310	1-163-229-11	CERAMIC CHIP	12pF	5%	50V	C467	1-104-664-11	ELECT	47μF	20%	25V
C311	1-126-960-11	ELECT	1μF	20%	50V	C468	1-126-963-11	ELECT	4.7μF	20%	50V
C312	1-115-419-11	CERAMIC CHIP	3300pF	5%	25V	C469	1-128-551-11	ELECT	22μF	20%	25V
C313	1-163-259-91	CERAMIC CHIP	220pF	5%	50V	C470	1-104-664-11	ELECT	47μF	20%	25V
C314	1-128-551-11	ELECT	22μF	20%	25V	C473	1-104-665-11	ELECT	100μF	20%	25V
C315	1-163-113-00	CERAMIC CHIP	68pF	5%	50V	C474	1-130-495-00	MYLAR	0.1μF	5%	50V
C315	1-163-245-11	CERAMIC CHIP	56pF	5%	50V	C475	1-130-495-00	MYLAR	0.1μF	5%	50V
C316	1-163-275-11	CERAMIC CHIP	0.001μF	5%	50V	C476	1-130-495-00	MYLAR	0.1μF	5%	50V
C317	1-104-664-11	ELECT	47μF	20%	16V	C477	1-130-495-00	MYLAR	0.1μF	5%	50V
C318	1-126-933-11	ELECT	100μF	20%	16V	C681	1-128-551-11	ELECT	22μF	20%	25V
C319	1-126-964-11	ELECT	10μF	20%	50V	C682	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C320	1-126-934-11	ELECT	220μF	20%	16V	C683	1-126-935-11	ELECT	470μF	20%	16V
C321	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V	C684	1-126-933-11	ELECT	100μF	20%	16V
C323	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	C685	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C324	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V	C686	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C325	1-126-964-11	ELECT	10μF	20%	50V	C687	1-128-551-11	ELECT	22μF	20%	25V
C326	1-104-664-11	ELECT	47μF	20%	25V	C688	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C327	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	C801	1-163-143-00	CERAMIC CHIP	0.0012μF	5%	50V
C328	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V	C802	1-163-016-00	CERAMIC CHIP	0.0039μF	10%	50V
C329	1-128-551-11	ELECT	22μF	20%	25V	C803	1-163-016-00	CERAMIC CHIP	0.0039μF	10%	50V
C330	1-128-551-11	ELECT	22μF	20%	25V	C804	1-163-038-91	CERAMIC CHIP	0.1μF		25V
C331	1-128-551-11	ELECT	22μF	20%	25V	C805	1-163-038-91	CERAMIC CHIP	0.1μF		25V
C332	1-128-551-11	ELECT	22μF	20%	25V	C806	1-104-664-11	ELECT	47μF	20%	25V
C418	1-126-964-11	ELECT	10μF	20%	50V	C807	1-163-038-91	CERAMIC CHIP	0.1μF		25V
C427	1-126-964-11	ELECT	10μF	20%	50V	C808	1-163-016-00	CERAMIC CHIP	0.0039μF	10%	50V
C433	1-126-963-11	ELECT	4.7μF	20%	50V	C809	1-163-016-00	CERAMIC CHIP	0.0039μF	10%	50V
C437	1-130-489-00	MYLAR	0.033μF	5%	50V	C810	1-163-038-91	CERAMIC CHIP	0.1μF		25V
C438	1-104-664-11	ELECT	47μF	20%	25V	C811	1-104-664-11	ELECT	47μF	20%	25V
C439	1-126-960-11	ELECT	1μF	20%	50V	C812	1-163-038-91	CERAMIC CHIP	0.1μF		25V
C440	1-126-963-11	ELECT	4.7μF	20%	50V	C813	1-104-664-11	ELECT	47μF	20%	25V
C441	1-130-477-00	MYLAR	0.0033μF	5%	50V	C814	1-163-259-91	CERAMIC CHIP	220pF	5%	50V
C442	1-130-489-00	MYLAR	0.033μF	5%	50V	C815	1-163-259-91	CERAMIC CHIP	220pF	5%	50V
C443	1-130-471-00	MYLAR	0.001μF	5%	50V	C816	1-163-038-91	CERAMIC CHIP	0.1μF		25V
C444	1-126-963-11	ELECT	4.7μF	20%	50V	C817	1-163-038-91	CERAMIC CHIP	0.1μF		25V
C445	1-126-963-11	ELECT	4.7μF	20%	50V	C818	1-163-259-91	CERAMIC CHIP	220pF	5%	50V
C446	1-130-477-00	MYLAR	0.0033μF	5%	50V	C819	1-163-259-91	CERAMIC CHIP	220pF	5%	50V
C447	1-130-489-00	MYLAR	0.033μF	5%	50V	C820	1-163-038-91	CERAMIC CHIP	0.1μF		25V
						C821	1-104-664-11	ELECT	47μF	20%	25V
						C822	1-163-038-91	CERAMIC CHIP	0.1μF		25V



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C823	1-104-664-11	ELECT	47μF 20% 25V	C893	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C824	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	C894	1-104-664-11	ELECT	47μF 20% 25V
C825	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C897	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C826	1-107-823-11	CERAMIC CHIP	0.47μF 10% 16V	C898	1-126-934-11	ELECT	220μF 20% 16V
C827	1-107-823-11	CERAMIC CHIP	0.47μF 10% 16V	C899	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C828	1-107-823-11	CERAMIC CHIP	0.47μF 10% 16V	C900	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C829	1-107-823-11	CERAMIC CHIP	0.47μF 10% 16V	C901	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C830	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C902	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C831	1-104-664-11	ELECT	47μF 20% 25V	C903	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C832	1-163-235-11	CERAMIC CHIP	22pF 5% 50V	C904	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C833	1-104-664-11	ELECT	47μF 20% 25V	C905	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C834	1-164-161-11	CERAMIC CHIP	0.0022μF 10% 50V	C906	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C835	1-163-235-11	CERAMIC CHIP	22pF 5% 50V	C907	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C842	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	C908	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C843	1-104-664-11	ELECT	47μF 20% 25V	C909	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C845	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C910	1-163-222-11	CERAMIC CHIP	5pF 0.25pF 50V
C848	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C911	1-164-690-91	CERAMIC CHIP	0.0022μF 5% 50V
C849	1-104-664-11	ELECT	47μF 20% 25V	C912	1-104-664-11	ELECT	47μF 20% 25V
C850	1-104-664-11	ELECT	47μF 20% 25V	C913	1-104-664-11	ELECT	47μF 20% 25V
C851	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C914	1-104-664-11	ELECT	47μF 20% 25V
C852	1-104-664-11	ELECT	47μF 20% 25V	C915	1-104-664-11	ELECT	47μF 20% 25V
C853	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C916	1-104-664-11	ELECT	47μF 20% 25V
C854	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C917	1-104-664-11	ELECT	47μF 20% 25V
C855	1-163-001-11	CERAMIC CHIP	220pF 10% 50V	C918	1-163-275-11	CERAMIC CHIP	0.001μF 5% 50V
C856	1-104-664-11	ELECT	47μF 20% 25V	C919	1-163-275-11	CERAMIC CHIP	0.001μF 5% 50V
C858	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C920	1-163-275-11	CERAMIC CHIP	0.001μF 5% 50V
C862	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	C921	1-163-275-11	CERAMIC CHIP	0.001μF 5% 50V
C863	1-163-231-11	CERAMIC CHIP	15pF 5% 50V	C922	1-163-275-11	CERAMIC CHIP	0.001μF 5% 50V
C864	1-163-239-11	CERAMIC CHIP	33pF 5% 50V	C923	1-163-275-11	CERAMIC CHIP	0.001μF 5% 50V
C865	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	C926	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
C866	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C927	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C867	1-109-982-11	CERAMIC CHIP	1μF 10% 10V	C928	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C868	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C929	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C869	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	C930	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C870	1-104-664-11	ELECT	47μF 20% 25V	C931	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C871	1-126-963-11	ELECT	4.7μF 20% 50V	C932	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C872	1-163-239-11	CERAMIC CHIP	33pF 5% 50V	C933	1-163-017-00	CERAMIC CHIP	0.0047μF 10% 50V
C873	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C934	1-163-017-00	CERAMIC CHIP	0.0047μF 10% 50V
C875	1-104-664-11	ELECT	47μF 20% 25V	C935	1-163-017-00	CERAMIC CHIP	0.0047μF 10% 50V
C876	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C936	1-163-017-00	CERAMIC CHIP	0.0047μF 10% 50V
C877	1-104-664-11	ELECT	47μF 20% 25V	C937	1-163-017-00	CERAMIC CHIP	0.0047μF 10% 50V
C878	1-104-664-11	ELECT	47μF 20% 25V	C938	1-163-017-00	CERAMIC CHIP	0.0047μF 10% 50V
C879	1-104-664-11	ELECT	47μF 20% 25V	C951	1-163-019-00	CERAMIC CHIP	0.0068μF 10% 50V
C880	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C952	1-163-019-00	CERAMIC CHIP	0.0068μF 10% 50V
C881	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C953	1-163-019-00	CERAMIC CHIP	0.0068μF 10% 50V
C882	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C954	1-163-019-00	CERAMIC CHIP	0.0068μF 10% 50V
C883	1-104-664-11	ELECT	47μF 20% 25V	C955	1-163-019-00	CERAMIC CHIP	0.0068μF 10% 50V
C884	1-104-664-11	ELECT	47μF 20% 25V	C956	1-163-019-00	CERAMIC CHIP	0.0068μF 10% 50V
C885	1-104-664-11	ELECT	47μF 20% 25V	C957	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C886	1-104-664-11	ELECT	47μF 20% 25V	C958	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C887	1-104-664-11	ELECT	47μF 20% 25V	C959	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C888	1-104-664-11	ELECT	47μF 20% 25V	C960	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C889	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C961	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C890	1-104-664-11	ELECT	47μF 20% 25V	C962	1-163-038-91	CERAMIC CHIP	0.1μF 25V
C891	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C963	1-104-664-11	ELECT	47μF 20% 25V
C892	1-104-664-11	ELECT	47μF 20% 25V	C964	1-104-664-11	ELECT	47μF 20% 25V



REF. NO.	PART NO.	DESCRIPTION	REMARK		
C965	1-104-664-11	ELECT	47μF	20%	25V
C966	1-104-664-11	ELECT	47μF	20%	25V
C967	1-104-664-11	ELECT	47μF	20%	25V
C968	1-104-664-11	ELECT	47μF	20%	25V
C969	1-163-038-91	CERAMIC CHIP	0.1μF		25V
C970	1-163-038-91	CERAMIC CHIP	0.1μF		25V
C971	1-104-664-11	ELECT	47μF	20%	25V
C1101	1-126-935-11	ELECT	470μF	20%	16V
C1102	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1103	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1104	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1105	1-128-551-11	ELECT	22μF	20%	25V
C1106	1-128-551-11	ELECT	22μF	20%	25V
C1107	1-126-959-11	ELECT	0.47μF	20%	50V
C1108	1-128-551-11	ELECT	22μF	20%	25V
C1109	1-126-959-11	ELECT	0.47μF	20%	50V
C1110	1-126-959-11	ELECT	0.47μF	20%	50V
C1111	1-126-959-11	ELECT	0.47μF	20%	50V
C1112	1-128-551-11	ELECT	22μF	20%	25V
C1113	1-128-551-11	ELECT	22μF	20%	25V
C1114	1-128-551-11	ELECT	22μF	20%	25V
C1115	1-126-959-11	ELECT	0.47μF	20%	50V
C1116	1-126-964-11	ELECT	10μF	20%	50V
C1117	1-126-964-11	ELECT	10μF	20%	50V
C1118	1-128-551-11	ELECT	22μF	20%	25V
C1119	1-126-964-11	ELECT	10μF	20%	50V
C1120	1-126-964-11	ELECT	10μF	20%	50V
C1121	1-126-960-11	ELECT	1μF	20%	50V
C1122	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1123	1-128-551-11	ELECT	22μF	20%	25V
C1124	1-126-959-11	ELECT	0.47μF	20%	50V
C1125	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1126	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1127	1-126-959-11	ELECT	0.47μF	20%	50V
C1129	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1130	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1131	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1132	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1133	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1134	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1601	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1602	1-163-133-00	CERAMIC CHIP	470pF	5%	50V
C1603	1-164-344-11	CERAMIC CHIP	0.068μF	10%	25V
C1604	1-163-019-00	CERAMIC CHIP	0.0068μF	10%	50V
C1605	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1606	1-117-720-11	CERAMIC CHIP	4.7μF		10V
C1607	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1608	1-163-239-11	CERAMIC CHIP	33pF	5%	50V
C1610	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1613	1-164-344-11	CERAMIC CHIP	0.068μF	10%	25V
C1614	1-163-019-00	CERAMIC CHIP	0.0068μF	10%	50V
C1615	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1617	1-163-133-00	CERAMIC CHIP	470pF	5%	50V
C1618	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1619	1-163-038-91	CERAMIC CHIP	0.1μF		25V
C1620	1-104-664-11	ELECT	47μF	20%	25V

REF. NO.	PART NO.	DESCRIPTION	REMARK		
C1701	1-128-551-11	ELECT	22μF	20%	25V
C1702	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1703	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1704	1-126-933-11	ELECT	100μF	20%	16V
C1705	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1706	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1707	1-128-551-11	ELECT	22μF	20%	25V
C1708	1-128-551-11	ELECT	22μF	20%	25V
C1709	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1710	1-163-257-11	CERAMIC CHIP	180pF	5%	50V
C1711	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1712	1-128-551-11	ELECT	22μF	20%	25V
C1713	1-163-017-00	CERAMIC CHIP	0.0047μF	10%	50V
C1714	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1715	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1716	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1717	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1718	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1719	1-163-231-11	CERAMIC CHIP	15pF	5%	50V
C1720	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1721	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1722	1-128-551-11	ELECT	22μF	20%	25V
C1723	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1724	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1725	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1726	1-128-551-11	ELECT	22μF	20%	25V
C1727	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1728	1-128-551-11	ELECT	22μF	20%	25V
C1729	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1730	1-126-959-11	ELECT	0.47μF	20%	50V
C1731	1-163-231-11	CERAMIC CHIP	15pF	5%	50V
C1732	1-163-231-11	CERAMIC CHIP	15pF	5%	50V
C1733	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1735	1-163-127-00	CERAMIC CHIP	270pF	5%	50V
C1901	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1902	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1903	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1904	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1905	1-128-551-11	ELECT	22μF	20%	25V
C1906	1-164-489-11	CERAMIC CHIP	0.22μF	10%	16V
C1907	1-163-251-11	CERAMIC CHIP	100pF	5%	50V
C1908	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1909	1-164-489-11	CERAMIC CHIP	0.22μF	10%	16V
C1910	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V
C1911	1-128-551-11	ELECT	22μF	20%	25V
C1912	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1913	1-164-346-11	CERAMIC CHIP	1μF		16V
C1914	1-163-017-00	CERAMIC CHIP	0.0047μF	10%	50V
C1915	1-164-346-11	CERAMIC CHIP	1μF		16V
C1916	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1917	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1918	1-164-005-11	CERAMIC CHIP	0.47μF		16V
C1919	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1920	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V
C1921	1-126-963-11	ELECT	4.7μF	20%	50V
C1922	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C1923	1-163-005-11	CERAMIC CHIP	470pF 10% 50V	<CONNECTOR>			
C1924	1-126-960-11	ELECT	1μF 20% 50V	CN001	* 1-564-507-11	PLUG, CONNECTOR 4P	
C1925	1-164-005-11	CERAMIC CHIP	0.47μF 16V	CN002	* 1-564-513-11	PLUG, CONNECTOR 10P	
C1926	1-128-551-11	ELECT	22μF 20% 25V	CN003	1-573-979-21	CONNECTOR, BOARD TO BOARD 11P	
C1927	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	CN151	1-695-915-11	TAB (CONTACT)	
C1928	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	CN202	* 1-779-892-11	CONNECTOR, BOARD TO BOARD 10P	
C1929	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	CN203	* 1-564-509-11	PLUG, CONNECTOR 6P	
C1930	1-163-229-11	CERAMIC CHIP	12pF 5% 50V	CN204	* 1-564-512-11	PLUG, CONNECTOR 9P	
C1931	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	CN205	1-695-915-11	TAB (CONTACT)	
C1932	1-128-551-11	ELECT	22μF 20% 25V	CN402	* 1-779-892-11	CONNECTOR, BOARD TO BOARD 10P	
C1933	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	CN403	* 1-564-507-11	PLUG, CONNECTOR 4P	
C1934	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	CN681	* 1-779-892-11	CONNECTOR, BOARD TO BOARD 10P	
C1935	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	CN801	* 1-779-892-11	CONNECTOR, BOARD TO BOARD 10P	
C1936	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	CN802	* 1-564-511-11	PLUG, CONNECTOR 8P	
C1937	1-128-551-11	ELECT	22μF 20% 25V	CN1702	1-764-334-11	PLUG, CONNECTOR 11P	
C1938	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	<DIODE>			
C1939	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D001	8-719-988-61	DIODE 1SS355TE-17	
C1940	1-128-551-11	ELECT	22μF 20% 25V	D002	8-719-988-61	DIODE 1SS355TE-17	
C1941	1-128-551-11	ELECT	22μF 20% 25V	D003	8-719-988-61	DIODE 1SS355TE-17	
C1942	1-128-551-11	ELECT	22μF 20% 25V	D004	8-719-069-55	DIODE UDZS-TE17-5.6B	
C1943	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D005	8-719-988-61	DIODE 1SS355TE-17	
C1944	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D006	8-719-069-55	DIODE UDZS-TE17-5.6B	
C1945	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D007	8-719-069-55	DIODE UDZS-TE17-5.6B	
C1946	1-163-239-11	CERAMIC CHIP	33pF 5% 50V	D151	8-719-977-81	DIODE UDZ-TE-17-33B	
C1947	1-163-239-11	CERAMIC CHIP	33pF 5% 50V	D202	8-719-977-28	DIODE UDZS-TE17-10B	
C1948	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D206	8-719-988-61	DIODE 1SS355TE-17	
C1949	1-126-960-11	ELECT	1μF 20% 50V	D207	8-719-988-61	DIODE 1SS355TE-17	
C1950	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D208	8-719-069-55	DIODE UDZS-TE17-5.6B	
C1951	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D209	8-719-988-61	DIODE 1SS355TE-17	
C1952	1-128-551-11	ELECT	22μF 20% 25V	D301	8-719-988-61	DIODE 1SS355TE-17	
C1953	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D302	8-719-988-61	DIODE 1SS355TE-17	
C1954	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D303	8-719-988-61	DIODE 1SS355TE-17	
C1955	1-163-259-91	CERAMIC CHIP	220pF 5% 50V	D304	8-719-069-59	DIODE UDZS-TE17-8.2B	
C1958	1-163-251-11	CERAMIC CHIP	100pF 5% 50V	D305	8-719-977-28	DIODE UDZS-TE17-10B	
C1959	1-163-251-11	CERAMIC CHIP	100pF 5% 50V	D402	8-719-988-61	DIODE 1SS355TE-17	
C1960	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D403	8-719-988-61	DIODE 1SS355TE-17	
C1961	1-128-551-11	ELECT	22μF 20% 25V	D404	8-719-988-61	DIODE 1SS355TE-17	
C1962	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D405	8-719-988-61	DIODE 1SS355TE-17	
C1963	1-126-960-11	ELECT	1μF 20% 50V	D406	8-719-056-95	DIODE UDZ-TE-17-22B	
C1964	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	D407	8-719-988-61	DIODE 1SS355TE-17	
C1965	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	D408	8-719-988-61	DIODE 1SS355TE-17	
C1966	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	D409	8-719-920-67	DIODE ERC91-02 (EXCEPT 53N77)	
C1967	1-128-551-11	ELECT	22μF 20% 25V	D412	8-719-056-95	DIODE UDZ-TE-17-22B	
C1969	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D413	8-719-056-95	DIODE UDZ-TE-17-22B	
C1970	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D416	8-719-920-67	DIODE ERC91-02 (EXCEPT 53N77)	
C1971	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D418	8-719-056-95	DIODE UDZ-TE-17-22B	
C1972	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	D420	8-719-988-61	DIODE 1SS355TE-17	
<JUMPER RESISTOR>				D421	8-719-988-61	DIODE 1SS355TE-17	
CJ401	1-216-295-91	SHORT	0 (53N77)	D801	8-719-988-61	DIODE 1SS355TE-17	
CJ402	1-216-295-91	SHORT	0 (53N77)	D802	8-719-988-61	DIODE 1SS355TE-17	
CJ403	1-216-295-91	SHORT	0 (53N77)	D803	8-719-988-61	DIODE 1SS355TE-17	
CJ404	1-216-295-91	SHORT	0 (53N77)	D804	8-719-988-61	DIODE 1SS355TE-17	
				D805	8-719-069-55	DIODE UDZS-TE17-5.6B	
				D806	8-719-069-55	DIODE UDZS-TE17-5.6B	

RM-Y906

A

<FERRITE BEAD>



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
IC824	8-759-106-02	IC μ PC4570G2-E2				<IC LINK>	
IC1101	8-752-081-32	IC CXA2079Q		PS401	1-532-984-11	LINK, IC 2A/90V	
IC1601	8-759-638-04	IC Z8622912SSC-00TR		PS402	1-532-984-11	LINK, IC 2A/90V	
IC1602	8-759-638-05	IC Z8613012SSC-00TR				<TRANSISTOR>	
IC1603	8-759-352-91	IC PST9143NL					
IC1701	8-759-701-75	IC NJM7805FA					
IC1702	8-759-568-32	IC TC90A53F(ELP)					
IC1901	8-752-080-75	IC CXA2039M-T6		Q001	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
IC1902	8-752-086-80	IC CXA2019AQ-T4		Q002	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
IC1903	8-759-932-69	IC BU4053BCF-T2		Q003	8-729-027-38	TRANSISTOR DTA144EKA-T146	
IC1904	8-752-058-68	IC CXA1315M-T4		Q004	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
IC1905	8-759-655-57	IC SDA9288XE-B0121-GEG		Q005	8-729-027-38	TRANSISTOR DTA144EKA-T146	
		<JACK>		Q006	8-729-027-38	TRANSISTOR DTA144EKA-T146	
J1101	1-774-751-11	TERMINAL BLOCK, S (VIDEO 3 IN)		Q007	1-801-806-11	TRANSISTOR DTC144EKA-T146	
J1102	1-774-751-11	TERMINAL BLOCK, S (VIDEO 1 IN)		Q008	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
J1103	1-507-667-00	JACK, MIC (CONTROL S OUT)		Q009	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
J1104	1-774-750-11	JACK BLOCK, PIN (AUDIO (VAR/FIX) OUT)		Q010	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
J1105	1-774-749-11	JACK BLOCK, PIN (MONITOR OUT)		Q011	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
J1106	1-785-082-11	JACK BLOCK, PIN 3P (Y/PB/PR)		Q012	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
		<COIL>		Q013	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L001	1-414-183-41	INDUCTOR 10 μ H		Q014	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L004	1-410-397-21	FERRITE 1.1 μ H		Q015	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L151	1-414-187-11	INDUCTOR 47 μ H		Q016	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L152	1-414-187-11	INDUCTOR 47 μ H		Q017	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L153	1-414-187-11	INDUCTOR 47 μ H		Q018	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L154	1-414-183-41	INDUCTOR 10 μ H		Q019	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L155	1-414-187-11	INDUCTOR 47 μ H		Q020	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L211	1-414-857-11	INDUCTOR 100 μ H		Q021	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L212	1-414-856-11	INDUCTOR 10 μ H		Q022	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L681	1-406-975-21	INDUCTOR 47 μ H		Q023	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L801	1-414-183-41	INDUCTOR 10 μ H		Q024	1-801-806-11	TRANSISTOR DTC144EKA-T146	
L802	1-414-183-41	INDUCTOR 10 μ H		Q151	1-801-806-11	TRANSISTOR DTC144EKA-T146	
L803	1-414-183-41	INDUCTOR 10 μ H		Q152	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L804	1-414-183-41	INDUCTOR 10 μ H		Q153	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L809	1-414-183-41	INDUCTOR 10 μ H		Q205	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L816	1-414-183-41	INDUCTOR 10 μ H		Q217	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L823	1-410-494-11	INDUCTOR 1mH		Q218	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L824	1-410-494-11	INDUCTOR 1mH		Q219	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L825	1-410-494-11	INDUCTOR 1mH		Q220	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L826	1-410-494-11	INDUCTOR 1mH		Q221	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L827	1-410-494-11	INDUCTOR 1mH		Q222	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L828	1-410-494-11	INDUCTOR 1mH		Q223	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L829	1-414-183-41	INDUCTOR 10 μ H		Q224	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L830	1-407-495-00	INDUCTOR 1.8mH		Q225	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L831	1-407-495-00	INDUCTOR 1.8mH		Q226	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L832	1-407-495-00	INDUCTOR 1.8mH		Q227	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L833	1-407-495-00	INDUCTOR 1.8mH		Q228	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L834	1-407-495-00	INDUCTOR 1.8mH		Q229	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L835	1-407-495-00	INDUCTOR 1.8mH		Q230	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L843	1-414-183-41	INDUCTOR 10 μ H		Q231	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L1703	1-414-187-11	INDUCTOR 47 μ H		Q232	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
				Q301	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
				Q302	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
				Q303	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
				Q304	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
				Q305	1-801-806-11	TRANSISTOR DTC144EKA-T146	
				Q306	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q401	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	Q1901	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX
Q402	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	Q1902	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX
Q403	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	Q1903	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX
Q404	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	Q1904	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX
Q408	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX				
Q409	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	Q1905	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX
Q410	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	Q1906	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX
Q411	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	Q1907	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX
Q801	1-801-806-11	TRANSISTOR	DTC144EKA-T146	Q1908	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX
Q802	1-801-806-11	TRANSISTOR	DTC144EKA-T146	Q1909	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX
Q803	1-801-806-11	TRANSISTOR	DTC144EKA-T146	Q1910	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX
Q804	1-801-806-11	TRANSISTOR	DTC144EKA-T146	Q1911	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX
Q805	1-801-806-11	TRANSISTOR	DTC144EKA-T146	Q1913	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX
Q806	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	Q1914	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX
Q807	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	Q1915	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX
Q808	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX				
Q809	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	Q1916	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX
Q811	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	Q1917	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX
Q812	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	Q1918	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX
Q813	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	Q1920	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX
Q814	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX			<RESISTOR>	
Q1101	8-729-027-56	TRANSISTOR	DTC143TKA-T146	R001	1-216-041-00	RES-CHIP	470 5% 1/10W
Q1102	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R002	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
Q1103	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R003	1-216-049-91	RES-CHIP	1K 5% 1/10W
Q1104	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R004	1-216-121-91	RES-CHIP	1M 5% 1/10W
Q1105	8-729-027-56	TRANSISTOR	DTC143TKA-T146	R005	1-216-097-91	RES-CHIP	100K 5% 1/10W
Q1106	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX				
Q1107	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R006	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1108	8-729-027-56	TRANSISTOR	DTC143TKA-T146	R007	1-216-073-00	RES-CHIP	10K 5% 1/10W
Q1109	8-729-027-56	TRANSISTOR	DTC143TKA-T146	R008	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1110	8-729-027-56	TRANSISTOR	DTC143TKA-T146	R009	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1111	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	R010	1-216-073-00	RES-CHIP	10K 5% 1/10W
Q1112	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	R011	1-216-049-91	RES-CHIP	1K 5% 1/10W
Q1113	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R013	1-216-073-00	RES-CHIP	10K 5% 1/10W
Q1114	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	R014	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
Q1115	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	R015	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
Q1116	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R016	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1117	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R017	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1118	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R018	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1119	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R019	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1121	1-801-806-11	TRANSISTOR	DTC144EKA-T146	R020	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1122	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R021	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1124	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	R022	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1125	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	R023	1-216-049-91	RES-CHIP	1K 5% 1/10W
Q1601	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R024	1-216-025-91	RES-CHIP	100 5% 1/10W
Q1602	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R025	1-216-025-91	RES-CHIP	100 5% 1/10W
Q1603	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R026	1-216-025-91	RES-CHIP	100 5% 1/10W
Q1701	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX				
Q1702	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R027	1-216-025-91	RES-CHIP	100 5% 1/10W
Q1703	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R028	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
Q1704	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	R029	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
Q1705	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	R030	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1706	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX	R031	1-216-037-00	RES-CHIP	330 5% 1/10W
Q1707	8-729-422-27	TRANSISTOR	2SD601A-QRS-TX				
Q1708	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	R032	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1709	8-729-216-22	TRANSISTOR	2SB709A-QRS-TX	R033	1-216-033-00	RES-CHIP	220 5% 1/10W
				R034	1-216-033-00	RES-CHIP	220 5% 1/10W
				R035	1-216-033-00	RES-CHIP	220 5% 1/10W
				R037	1-216-057-00	RES-CHIP	2.2K 5% 1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R040	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R105	1-216-017-91	RES-CHIP	47 5% 1/10W
R041	1-216-033-00	RES-CHIP	220 5% 1/10W	R106	1-216-017-91	RES-CHIP	47 5% 1/10W
R042	1-216-033-00	RES-CHIP	220 5% 1/10W	R107	1-216-017-91	RES-CHIP	47 5% 1/10W
R043	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R108	1-216-113-00	RES-CHIP	470K 5% 1/10W
R044	1-216-121-91	RES-CHIP	1M 5% 1/10W				
R045	1-216-097-91	RES-CHIP	100K 5% 1/10W	R109	1-216-113-00	RES-CHIP	470K 5% 1/10W
R046	1-216-073-00	RES-CHIP	10K 5% 1/10W	R110	1-216-043-91	RES-CHIP	560 5% 1/10W
R047	1-216-073-00	RES-CHIP	10K 5% 1/10W	R111	1-216-043-91	RES-CHIP	560 5% 1/10W
R048	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R112	1-216-043-91	RES-CHIP	560 5% 1/10W
R049	1-216-049-91	RES-CHIP	1K 5% 1/10W	R113	1-216-113-00	RES-CHIP	470K 5% 1/10W
R050	1-216-049-91	RES-CHIP	1K 5% 1/10W	R114	1-216-045-00	RES-CHIP	680 5% 1/10W
R051	1-216-049-91	RES-CHIP	1K 5% 1/10W	R115	1-216-045-00	RES-CHIP	680 5% 1/10W
R052	1-216-049-91	RES-CHIP	1K 5% 1/10W	R116	1-216-045-00	RES-CHIP	680 5% 1/10W
R053	1-216-049-91	RES-CHIP	1K 5% 1/10W	R117	1-216-295-91	SHORT	0 5% 1/10W
R054	1-216-033-00	RES-CHIP	220 5% 1/10W	R118	1-216-053-00	RES-CHIP	1.5K 5% 1/10W
R055	1-216-033-00	RES-CHIP	220 5% 1/10W	R119	1-216-053-00	RES-CHIP	1.5K 5% 1/10W
R056	1-216-049-91	RES-CHIP	1K 5% 1/10W	R120	1-216-061-00	RES-CHIP	3.3K 5% 1/10W
R057	1-216-049-91	RES-CHIP	1K 5% 1/10W	R121	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R058	1-216-089-91	RES-CHIP	47K 5% 1/10W	R122	1-216-295-91	SHORT	0 5% 1/10W
R059	1-216-089-91	RES-CHIP	47K 5% 1/10W	R123	1-216-017-91	RES-CHIP	47 5% 1/10W
R060	1-216-049-91	RES-CHIP	1K 5% 1/10W	R124	1-216-017-91	RES-CHIP	47 5% 1/10W
R061	1-216-041-00	RES-CHIP	470 5% 1/10W	R125	1-216-017-91	RES-CHIP	47 5% 1/10W
R062	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R127	1-216-025-91	RES-CHIP	100 5% 1/10W
R063	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R128	1-216-025-91	RES-CHIP	100 5% 1/10W
R064	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R129	1-216-073-00	RES-CHIP	10K 5% 1/10W
R066	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R130	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R068	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R131	1-216-073-00	RES-CHIP	10K 5% 1/10W
R070	1-216-033-00	RES-CHIP	220 5% 1/10W	R132	1-216-295-91	SHORT	0 5% 1/10W
R071	1-216-033-00	RES-CHIP	220 5% 1/10W	R135	1-216-295-91	SHORT	0 5% 1/10W
R072	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R151	1-216-025-91	RES-CHIP	100 5% 1/10W
R073	1-216-295-91	SHORT	0 5% 1/10W	R152	1-216-083-00	RES-CHIP	27K 5% 1/10W
R074	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R153	1-216-689-11	RES-CHIP	39K 5% 1/10W
R075	1-216-061-00	RES-CHIP	3.3K 5% 1/10W	R154	1-216-043-91	RES-CHIP	560 5% 1/10W
R077	1-216-053-00	RES-CHIP	1.5K 5% 1/10W	R155	1-216-025-91	RES-CHIP	100 5% 1/10W
R078	1-216-025-91	RES-CHIP	100 5% 1/10W	R156	1-216-045-00	RES-CHIP	680 5% 1/10W
R079	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R157	1-216-049-91	RES-CHIP	1K 5% 1/10W
R084	1-216-025-91	RES-CHIP	100 5% 1/10W	R158	1-216-464-11	METAL OXIDE	18K 5% 2W
R085	1-216-053-00	RES-CHIP	1.5K 5% 1/10W	R159	1-216-041-00	RES-CHIP	470 5% 1/10W
R086	1-216-053-00	RES-CHIP	1.5K 5% 1/10W	R160	1-216-025-91	RES-CHIP	100 5% 1/10W
R087	1-216-053-00	RES-CHIP	1.5K 5% 1/10W	R161	1-216-083-00	RES-CHIP	27K 5% 1/10W
R088	1-216-025-91	RES-CHIP	100 5% 1/10W	R162	1-216-041-00	RES-CHIP	470 5% 1/10W
R089	1-216-055-00	RES-CHIP	1.8K 5% 1/10W	R163	1-216-689-11	RES-CHIP	39K 5% 1/10W
R090	1-216-113-00	RES-CHIP	470K 5% 1/10W	R164	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R091	1-216-017-91	RES-CHIP	47 5% 1/10W	R166	1-216-025-91	RES-CHIP	100 5% 1/10W
R092	1-216-113-00	RES-CHIP	470K 5% 1/10W	R167	1-216-025-91	RES-CHIP	100 5% 1/10W
R093	1-216-017-91	RES-CHIP	47 5% 1/10W	R168	1-216-025-91	RES-CHIP	100 5% 1/10W
R094	1-216-113-00	RES-CHIP	470K 5% 1/10W	R169	1-208-789-11	METAL CHIP	2K 0.5% 1/10W
R095	1-216-017-91	RES-CHIP	47 5% 1/10W	R170	1-216-025-91	RES-CHIP	100 5% 1/10W
R096	1-216-055-00	RES-CHIP	1.8K 5% 1/10W	R171	1-216-295-91	SHORT	0 5% 1/10W
R097	1-216-055-00	RES-CHIP	1.8K 5% 1/10W	R203	1-216-051-00	RES-CHIP	1.2K 5% 1/10W
R099	1-216-041-00	RES-CHIP	470 5% 1/10W	R204	1-216-041-00	RES-CHIP	470 5% 1/10W
R100	1-216-041-00	RES-CHIP	470 5% 1/10W	R207	1-216-041-00	RES-CHIP	470 5% 1/10W
R101	1-216-041-00	RES-CHIP	470 5% 1/10W	R208	1-216-295-91	SHORT	0 5% 1/10W
R102	1-216-113-00	RES-CHIP	470K 5% 1/10W	R274	1-216-073-00	RES-CHIP	10K 5% 1/10W
R103	1-216-113-00	RES-CHIP	470K 5% 1/10W	R275	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R104	1-216-113-00	RES-CHIP	470K 5% 1/10W	R276	1-216-097-91	RES-CHIP	100K 5% 1/10W
				R277	1-216-089-91	RES-CHIP	47K 5% 1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R278	1-216-073-00	RES-CHIP	10K	5%	1/10W	R334	1-216-113-00	RES-CHIP	470K	5%	1/10W
R279	1-216-129-00	RES-CHIP	2.2M	5%	1/10W	R335	1-216-041-00	RES-CHIP	470	5%	1/10W
R280	1-216-073-00	RES-CHIP	10K	5%	1/10W						
R281	1-216-025-91	RES-CHIP	100	5%	1/10W	R336	1-216-049-91	RES-CHIP	1K	5%	1/10W
R282	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	R337	1-216-049-91	RES-CHIP	1K	5%	1/10W
R283	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	R338	1-216-077-91	RES-CHIP	15K	5%	1/10W
R284	1-216-025-91	RES-CHIP	100	5%	1/10W	R339	1-216-049-91	RES-CHIP	1K	5%	1/10W
R285	1-216-049-91	RES-CHIP	1K	5%	1/10W	R340	1-216-041-00	RES-CHIP	470	5%	1/10W
R286	1-216-025-91	RES-CHIP	100	5%	1/10W	R341	1-216-041-00	RES-CHIP	470	5%	1/10W
R287	1-216-025-91	RES-CHIP	100	5%	1/10W	R342	1-216-049-91	RES-CHIP	1K	5%	1/10W
R288	1-216-295-91	SHORT	0			R343	1-216-081-00	RES-CHIP	22K	5%	1/10W
R289	1-216-049-91	RES-CHIP	1K	5%	1/10W	R344	1-216-025-91	RES-CHIP	100	5%	1/10W
R290	1-216-049-91	RES-CHIP	1K	5%	1/10W	R345	1-216-049-91	RES-CHIP	1K	5%	1/10W
R291	1-216-049-91	RES-CHIP	1K	5%	1/10W	R346	1-216-089-91	RES-CHIP	47K	5%	1/10W
R292	1-216-049-91	RES-CHIP	1K	5%	1/10W	R347	1-216-073-00	RES-CHIP	10K	5%	1/10W
R293	1-216-049-91	RES-CHIP	1K	5%	1/10W	R348	1-216-079-00	RES-CHIP	18K	5%	1/10W
R294	1-216-049-91	RES-CHIP	1K	5%	1/10W	R349	1-216-077-91	RES-CHIP	15K	5%	1/10W
R295	1-216-295-91	SHORT	0			R350	1-216-073-00	RES-CHIP	10K	5%	1/10W
R296	1-216-033-00	RES-CHIP	220	5%	1/10W	R351	1-216-041-00	RES-CHIP	470	5%	1/10W
R297	1-216-033-00	RES-CHIP	220	5%	1/10W	R352	1-216-081-00	RES-CHIP	22K	5%	1/10W
R298	1-216-033-00	RES-CHIP	220	5%	1/10W	R353	1-216-113-00	RES-CHIP	470K	5%	1/10W
R299	1-216-033-00	RES-CHIP	220	5%	1/10W	R354	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R300	1-216-033-00	RES-CHIP	220	5%	1/10W	R355	1-216-073-00	RES-CHIP	10K	5%	1/10W
R301	1-216-033-00	RES-CHIP	220	5%	1/10W	R356	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R302	1-216-049-91	RES-CHIP	1K	5%	1/10W	R357	1-216-049-91	RES-CHIP	1K	5%	1/10W
R303	1-216-133-00	RES-CHIP	3.3M	5%	1/10W	R360	1-216-051-00	RES-CHIP	1.2K	5%	1/10W
R304	1-216-059-00	RES-CHIP	2.7K	5%	1/10W	R361	1-208-803-11	METAL CHIP	7.5K	0.5%	1/10W
R305	1-216-066-00	RES-CHIP	5.1K	5%	1/10W	R362	1-208-774-11	METAL CHIP	470	0.5%	1/10W
R306	1-208-774-11	METAL CHIP	470	0.5%	1/10W	R363	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R307	1-208-810-11	METAL CHIP	15K	0.5%	1/10W	R411	1-216-025-91	RES-CHIP	100	5%	1/10W
R308	1-216-109-00	RES-CHIP	330K	5%	1/10W	R412	1-216-025-91	RES-CHIP	100	5%	1/10W
R309	1-216-061-00	RES-CHIP	3.3K	5%	1/10W	R413	1-216-025-91	RES-CHIP	100	5%	1/10W
R310	1-216-033-00	RES-CHIP	220	5%	1/10W	R414	1-216-081-00	RES-CHIP	22K	5%	1/10W
R311	1-216-025-91	RES-CHIP	100	5%	1/10W	R415	1-216-073-00	RES-CHIP	10K	5%	1/10W
R312	1-216-025-91	RES-CHIP	100	5%	1/10W	R418	1-216-025-91	RES-CHIP	100	5%	1/10W
R313	1-216-113-00	RES-CHIP	470K	5%	1/10W	R419	1-216-025-91	RES-CHIP	100	5%	1/10W
R314	1-216-025-91	RES-CHIP	100	5%	1/10W	R420	1-216-025-91	RES-CHIP	100	5%	1/10W
R315	1-216-043-91	RES-CHIP	560	5%	1/10W	R421	1-216-025-91	RES-CHIP	100	5%	1/10W
R316	1-216-049-91	RES-CHIP	1K	5%	1/10W	R422	1-216-025-91	RES-CHIP	100	5%	1/10W
R317	1-216-059-00	RES-CHIP	2.7K	5%	1/10W	R423	1-216-089-91	RES-CHIP	47K	5%	1/10W
R318	1-216-077-91	RES-CHIP	15K	5%	1/10W	R425	1-216-025-91	RES-CHIP	100	5%	1/10W
R319	1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W	R426	1-216-073-00	RES-CHIP	10K	5%	1/10W
R320	1-216-073-00	RES-CHIP	10K	5%	1/10W	R428	1-216-073-00	RES-CHIP	10K	5%	1/10W
R321	1-216-033-00	RES-CHIP	220	5%	1/10W	R429	1-216-073-00	RES-CHIP	10K	5%	1/10W
R322	1-216-073-00	RES-CHIP	10K	5%	1/10W	R430	1-216-041-00	RES-CHIP	470	5%	1/10W
R323	1-216-017-91	RES-CHIP	47	5%	1/10W	R431	1-216-073-00	RES-CHIP	10K	5%	1/10W
R324	1-216-049-91	RES-CHIP	1K	5%	1/10W	R432	1-216-041-00	RES-CHIP	470	5%	1/10W
R325	1-216-073-00	RES-CHIP	10K	5%	1/10W	R433	1-216-041-00	RES-CHIP	470	5%	1/10W
R326	1-216-073-00	RES-CHIP	10K	5%	1/10W	R434	1-216-097-91	RES-CHIP	100K	5%	1/10W
R327	1-216-073-00	RES-CHIP	10K	5%	1/10W	R435	1-216-073-00	RES-CHIP	10K	5%	1/10W
R328	1-216-049-91	RES-CHIP	1K	5%	1/10W	R436	1-216-079-00	RES-CHIP	18K	5%	1/10W
R329	1-216-073-00	RES-CHIP	10K	5%	1/10W	R437	1-216-046-00	RES-CHIP	750	5%	1/10W
R330	1-216-073-00	RES-CHIP	10K	5%	1/10W	R438	1-216-073-00	RES-CHIP	10K	5%	1/10W
R331	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	R440	1-216-046-00	RES-CHIP	750	5%	1/10W
R332	1-216-073-00	RES-CHIP	10K	5%	1/10W	R441	1-216-049-91	RES-CHIP	1K	5%	1/10W
R333	1-216-049-91	RES-CHIP	1K	5%	1/10W	R442	1-216-041-00	RES-CHIP	470	5%	1/10W
						R443	1-216-073-00	RES-CHIP	10K	5%	1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R444	1-216-077-91	RES-CHIP	15K 5% 1/10W	R836	1-216-049-91	RES-CHIP	1K 5% 1/10W
R445	1-216-079-00	RES-CHIP	18K 5% 1/10W	R838	1-216-025-91	RES-CHIP	100 5% 1/10W
R446	1-216-085-00	RES-CHIP	33K 5% 1/10W	R839	1-216-025-91	RES-CHIP	100 5% 1/10W
R447	1-215-451-00	METAL	18K 1% 1/4W (EXCEPT 53N77)	R840	1-216-025-91	RES-CHIP	100 5% 1/10W
R447	1-215-453-00	METAL	22K 1% 1/4W (53N77)	R842	1-216-025-91	RES-CHIP	100 5% 1/10W
R448	1-215-451-00	METAL	18K 1% 1/4W (EXCEPT 53N77)	R843	1-216-025-91	RES-CHIP	100 5% 1/10W
R448	1-215-453-00	METAL	22K 1% 1/4W (53N77)	R844	1-216-025-91	RES-CHIP	100 5% 1/10W
R449	1-216-049-91	RES-CHIP	1K 5% 1/10W	R846	1-216-025-91	RES-CHIP	100 5% 1/10W
R451	1-216-073-00	RES-CHIP	10K 5% 1/10W	R847	1-216-033-00	RES-CHIP	220 5% 1/10W
R452	1-216-083-00	RES-CHIP	27K 5% 1/10W	R848	1-216-025-91	RES-CHIP	100 5% 1/10W
R455	1-216-083-00	RES-CHIP	27K 5% 1/10W	R849	1-216-041-00	RES-CHIP	470 5% 1/10W
R458	1-249-389-11	CARBON	4.7 5% 1/4W	R850	1-216-041-00	RES-CHIP	470 5% 1/10W
R459	1-249-389-11	CARBON	4.7 5% 1/4W	R851	1-216-041-00	RES-CHIP	470 5% 1/10W
R460	1-216-089-91	RES-CHIP	47K 5% 1/10W	R852	1-208-814-91	METAL CHIP	22K 0.5% 1/10W
R461	1-216-121-91	RES-CHIP	100 5% 1/10W	R853	1-216-025-91	RES-CHIP	100 5% 1/10W
R462	1-216-075-00	RES-CHIP	12K 5% 1/10W	R854	1-216-025-91	RES-CHIP	100 5% 1/10W
R463	1-216-089-91	RES-CHIP	47K 5% 1/10W	R855	1-216-025-91	RES-CHIP	100 5% 1/10W
R464	1-216-089-91	RES-CHIP	47K 5% 1/10W	R856	1-216-033-00	RES-CHIP	220 5% 1/10W
R465	1-216-121-91	RES-CHIP	1M 5% 1/10W	R857	1-216-025-91	RES-CHIP	100 5% 1/10W
R466	1-216-079-00	RES-CHIP	18K 5% 1/10W	R858	1-216-073-00	RES-CHIP	10K 5% 1/10W
R467	1-216-077-91	RES-CHIP	15K 5% 1/10W	R859	1-216-081-00	RES-CHIP	22K 5% 1/10W
R468	1-216-295-91	SHORT	0	R860	1-216-025-91	RES-CHIP	100 5% 1/10W
R474	1-216-049-91	RES-CHIP	1K 5% 1/10W	R861	1-216-073-00	RES-CHIP	10K 5% 1/10W
R801	1-500-245-11	FERRITE	0μH	R862	1-216-073-00	RES-CHIP	10K 5% 1/10W
R802	1-500-245-11	FERRITE	0μH	R863	1-216-025-91	RES-CHIP	100 5% 1/10W
R803	1-500-245-11	FERRITE	0μH	R864	1-208-801-11	METAL CHIP	6.2K 0.5% 1/10W
R804	1-500-245-11	FERRITE	0μH	R865	1-216-025-91	RES-CHIP	100 5% 1/10W
R805	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R866	1-216-025-91	RES-CHIP	100 5% 1/10W
R806	1-216-113-00	RES-CHIP	470K 5% 1/10W	R867	1-216-025-91	RES-CHIP	100 5% 1/10W
R808	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R868	1-216-025-91	RES-CHIP	100 5% 1/10W
R810	1-216-295-91	SHORT	0	R869	1-216-025-91	RES-CHIP	100 5% 1/10W
R811	1-216-109-00	RES-CHIP	330K 5% 1/10W	R870	1-216-073-00	RES-CHIP	10K 5% 1/10W
R813	1-216-117-00	RES-CHIP	680K 5% 1/10W	R871	1-216-025-91	RES-CHIP	100 5% 1/10W
R814	1-216-117-00	RES-CHIP	680K 5% 1/10W	R872	1-216-025-91	RES-CHIP	100 5% 1/10W
R815	1-216-025-91	RES-CHIP	100 5% 1/10W	R873	1-216-025-91	RES-CHIP	100 5% 1/10W
R816	1-216-049-91	RES-CHIP	1K 5% 1/10W	R874	1-216-025-91	RES-CHIP	100 5% 1/10W
R817	1-216-025-91	RES-CHIP	100 5% 1/10W	R875	1-216-295-91	SHORT	0
R818	1-216-025-91	RES-CHIP	100 5% 1/10W	R876	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R819	1-216-025-91	RES-CHIP	100 5% 1/10W	R877	1-208-816-11	METAL CHIP	27K 0.5% 1/10W
R820	1-216-295-91	SHORT	0	R878	1-216-049-91	RES-CHIP	1K 5% 1/10W
R821	1-216-295-91	SHORT	0	R879	1-216-295-91	SHORT	0
R822	1-216-295-91	SHORT	0	R880	1-216-049-91	RES-CHIP	1K 5% 1/10W
R823	1-216-295-91	SHORT	0	R881	1-216-025-91	RES-CHIP	100 5% 1/10W
R824	1-216-025-91	RES-CHIP	100 5% 1/10W	R882	1-216-033-00	RES-CHIP	220 5% 1/10W
R825	1-216-025-91	RES-CHIP	100 5% 1/10W	R883	1-216-033-00	RES-CHIP	220 5% 1/10W
R828	1-216-049-91	RES-CHIP	1K 5% 1/10W	R884	1-216-049-91	RES-CHIP	1K 5% 1/10W
R829	1-216-073-00	RES-CHIP	10K 5% 1/10W	R885	1-216-025-91	RES-CHIP	100 5% 1/10W
R830	1-216-041-00	RES-CHIP	470 5% 1/10W	R887	1-414-551-11	FERRITE	0μH
R831	1-216-049-91	RES-CHIP	1K 5% 1/10W	R888	1-216-025-91	RES-CHIP	100 5% 1/10W
R832	1-216-073-00	RES-CHIP	10K 5% 1/10W	R891	1-216-073-00	RES-CHIP	10K 5% 1/10W
R833	1-216-049-91	RES-CHIP	1K 5% 1/10W	R892	1-208-802-11	METAL CHIP	6.8K 0.5% 1/10W
R834	1-216-049-91	RES-CHIP	1K 5% 1/10W	R893	1-216-073-00	RES-CHIP	10K 5% 1/10W
				R894	1-216-033-00	RES-CHIP	220 5% 1/10W
				R895	1-216-025-91	RES-CHIP	100 5% 1/10W
				R896	1-216-121-91	RES-CHIP	1M 5% 1/10W
				R897	1-216-049-91	RES-CHIP	1K 5% 1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R898	1-216-049-91	RES-CHIP	1K	5%	1/10W	R968	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R899	1-216-033-00	RES-CHIP	220	5%	1/10W	R970	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R900	1-216-025-91	RES-CHIP	100	5%	1/10W						
R901	1-216-033-00	RES-CHIP	220	5%	1/10W	R972	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R902	1-216-033-00	RES-CHIP	220	5%	1/10W	R974	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R903	1-216-025-91	RES-CHIP	100	5%	1/10W	R976	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R904	1-216-033-00	RES-CHIP	220	5%	1/10W	R978	1-208-810-11	METAL CHIP	15K	0.5%	1/10W
R905	1-216-025-91	RES-CHIP	100	5%	1/10W	R979	1-208-817-11	METAL CHIP	30K	0.5%	1/10W
R906	1-216-025-91	RES-CHIP	100	5%	1/10W	R980	1-208-817-11	METAL CHIP	30K	0.5%	1/10W
R907	1-216-025-91	RES-CHIP	100	5%	1/10W	R981	1-208-817-11	METAL CHIP	30K	0.5%	1/10W
R908	1-216-025-91	RES-CHIP	100	5%	1/10W	R982	1-208-817-11	METAL CHIP	30K	0.5%	1/10W
R910	1-216-025-91	RES-CHIP	100	5%	1/10W	R983	1-208-817-11	METAL CHIP	30K	0.5%	1/10W
R911	1-216-025-91	RES-CHIP	100	5%	1/10W	R985	1-208-810-11	METAL CHIP	15K	0.5%	1/10W
R912	1-216-049-91	RES-CHIP	1K	5%	1/10W	R987	1-208-817-11	METAL CHIP	30K	0.5%	1/10W
R913	1-216-025-91	RES-CHIP	100	5%	1/10W	R989	1-208-817-11	METAL CHIP	30K	0.5%	1/10W
R914	1-216-049-91	RES-CHIP	1K	5%	1/10W	R991	1-208-817-11	METAL CHIP	30K	0.5%	1/10W
R915	1-216-049-91	RES-CHIP	1K	5%	1/10W	R993	1-208-817-11	METAL CHIP	30K	0.5%	1/10W
R916	1-216-049-91	RES-CHIP	1K	5%	1/10W	R994	1-208-817-11	METAL CHIP	30K	0.5%	1/10W
R917	1-216-025-91	RES-CHIP	100	5%	1/10W	R996	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R918	1-208-806-11	METAL CHIP	10K	0.5%	1/10W	R997	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R919	1-216-061-00	RES-CHIP	3.3K	5%	1/10W	R998	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R920	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R999	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R922	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1000	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R923	1-216-043-91	RES-CHIP	560	5%	1/10W	R1001	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R924	1-216-053-00	RES-CHIP	1.5K	5%	1/10W	R1002	1-208-810-11	METAL CHIP	15K	0.5%	1/10W
R925	1-216-043-91	RES-CHIP	560	5%	1/10W	R1003	1-208-818-11	METAL CHIP	33K	0.5%	1/10W
R926	1-216-053-00	RES-CHIP	1.5K	5%	1/10W	R1010	1-216-295-91	SHORT	0		
R928	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R1011	1-216-295-91	SHORT	0		
R929	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1012	1-216-295-91	SHORT	0		
R932	1-208-792-11	METAL CHIP	2.7K	0.5%	1/10W	R1013	1-216-295-91	SHORT	0		
R935	1-216-025-91	RES-CHIP	100	5%	1/10W	R1014	1-216-295-91	SHORT	0		
R936	1-216-025-91	RES-CHIP	100	5%	1/10W	R1015	1-216-295-91	SHORT	0		
R937	1-216-025-91	RES-CHIP	100	5%	1/10W	R1101	1-216-041-00	RES-CHIP	470	5%	1/10W
R938	1-208-766-11	METAL CHIP	220	0.5%	1/10W	R1102	1-216-041-00	RES-CHIP	470	5%	1/10W
R939	1-208-766-11	METAL CHIP	220	0.5%	1/10W	R1103	1-216-022-00	RES-CHIP	75	5%	1/10W
R941	1-216-061-00	RES-CHIP	3.3K	5%	1/10W	R1106	1-216-041-00	RES-CHIP	470	5%	1/10W
R942	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	R1107	1-216-041-00	RES-CHIP	470	5%	1/10W
R943	1-216-041-00	RES-CHIP	470	5%	1/10W	R1108	1-216-113-00	RES-CHIP	470K	5%	1/10W
R945	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R1109	1-216-113-00	RES-CHIP	470K	5%	1/10W
R950	1-216-043-91	RES-CHIP	560	5%	1/10W	R1110	1-216-089-91	RES-CHIP	47K	5%	1/10W
R951	1-216-053-00	RES-CHIP	1.5K	5%	1/10W	R1111	1-216-025-91	RES-CHIP	100	5%	1/10W
R952	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1112	1-216-022-00	RES-CHIP	75	5%	1/10W
R953	1-216-025-91	RES-CHIP	100	5%	1/10W	R1113	1-216-022-00	RES-CHIP	75	5%	1/10W
R954	1-216-025-91	RES-CHIP	100	5%	1/10W	R1114	1-216-022-00	RES-CHIP	75	5%	1/10W
R955	1-216-025-91	RES-CHIP	100	5%	1/10W	R1115	1-216-113-00	RES-CHIP	470K	5%	1/10W
R956	1-216-025-91	RES-CHIP	100	5%	1/10W	R1116	1-216-113-00	RES-CHIP	470K	5%	1/10W
R957	1-216-025-91	RES-CHIP	100	5%	1/10W	R1117	1-216-022-00	RES-CHIP	75	5%	1/10W
R958	1-216-025-91	RES-CHIP	100	5%	1/10W	R1118	1-216-022-00	RES-CHIP	75	5%	1/10W
R959	1-208-806-11	METAL CHIP	10K	0.5%	1/10W	R1119	1-216-022-00	RES-CHIP	75	5%	1/10W
R960	1-208-806-11	METAL CHIP	10K	0.5%	1/10W	R1120	1-216-113-00	RES-CHIP	470K	5%	1/10W
R961	1-208-806-11	METAL CHIP	10K	0.5%	1/10W	R1121	1-216-113-00	RES-CHIP	470K	5%	1/10W
R962	1-208-806-11	METAL CHIP	10K	0.5%	1/10W	R1122	1-216-022-00	RES-CHIP	75	5%	1/10W
R963	1-208-806-11	METAL CHIP	10K	0.5%	1/10W	R1123	1-216-022-00	RES-CHIP	75	5%	1/10W
R964	1-208-806-11	METAL CHIP	10K	0.5%	1/10W	R1124	1-216-022-00	RES-CHIP	75	5%	1/10W
R965	1-208-806-11	METAL CHIP	10K	0.5%	1/10W	R1126	1-216-113-00	RES-CHIP	470K	5%	1/10W
R966	1-208-806-11	METAL CHIP	10K	0.5%	1/10W	R1127	1-216-113-00	RES-CHIP	470K	5%	1/10W
						R1128	1-216-019-00	RES-CHIP	56	5%	1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1129	1-216-017-91	RES-CHIP	47 5% 1/10W	R1211	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R1130	1-216-025-91	RES-CHIP	100 5% 1/10W	R1212	1-216-025-91	RES-CHIP	100 5% 1/10W
R1131	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R1213	1-216-025-91	RES-CHIP	100 5% 1/10W
R1132	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1214	1-216-025-91	RES-CHIP	100 5% 1/10W
R1135	1-216-041-00	RES-CHIP	470 5% 1/10W	R1215	1-216-025-91	RES-CHIP	100 5% 1/10W
R1136	1-216-041-00	RES-CHIP	470 5% 1/10W	R1216	1-216-025-91	RES-CHIP	100 5% 1/10W
R1137	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1217	1-216-025-91	RES-CHIP	100 5% 1/10W
R1138	1-216-089-91	RES-CHIP	47K 5% 1/10W	R1218	1-216-025-91	RES-CHIP	100 5% 1/10W
R1139	1-216-041-00	RES-CHIP	470 5% 1/10W	R1221	1-216-025-91	RES-CHIP	100 5% 1/10W
R1140	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1222	1-216-295-91	SHORT	0
R1141	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1223	1-216-025-91	RES-CHIP	100 5% 1/10W
R1142	1-216-089-91	RES-CHIP	47K 5% 1/10W	R1601	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R1143	1-216-049-91	RES-CHIP	1K 5% 1/10W	R1603	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1144	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R1604	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1147	1-216-041-00	RES-CHIP	470 5% 1/10W	R1605	1-208-802-11	METAL CHIP	6.8K 0.5% 1/10W
R1148	1-216-041-00	RES-CHIP	470 5% 1/10W	R1607	1-208-806-11	METAL CHIP	10K 0.5% 1/10W
R1150	1-216-049-91	RES-CHIP	1K 5% 1/10W	R1609	1-216-025-91	RES-CHIP	100 5% 1/10W
R1151	1-216-105-91	RES-CHIP	220K 5% 1/10W	R1610	1-216-025-91	RES-CHIP	100 5% 1/10W
R1156	1-216-025-91	RES-CHIP	100 5% 1/10W	R1614	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1157	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1615	1-208-802-11	METAL CHIP	6.8K 0.5% 1/10W
R1158	1-216-025-91	RES-CHIP	100 5% 1/10W	R1616	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1159	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1617	1-216-081-00	RES-CHIP	22K 5% 1/10W
R1160	1-216-025-91	RES-CHIP	100 5% 1/10W	R1618	1-216-033-00	RES-CHIP	220 5% 1/10W
R1161	1-216-049-91	RES-CHIP	1K 5% 1/10W	R1619	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R1162	1-216-081-00	RES-CHIP	22K 5% 1/10W	R1621	1-208-806-11	METAL CHIP	10K 0.5% 1/10W
R1163	1-216-089-91	RES-CHIP	47K 5% 1/10W	R1622	1-216-033-00	RES-CHIP	220 5% 1/10W
R1164	1-216-093-91	RES-CHIP	68K 5% 1/10W	R1623	1-216-025-91	RES-CHIP	100 5% 1/10W
R1165	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1624	1-216-025-91	RES-CHIP	100 5% 1/10W
R1166	1-216-097-91	RES-CHIP	100K 5% 1/10W	R1627	1-216-061-00	RES-CHIP	3.3K 5% 1/10W
R1167	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1701	1-208-806-11	METAL CHIP	10K 0.5% 1/10W
R1168	1-216-081-00	RES-CHIP	22K 5% 1/10W	R1702	1-216-047-91	RES-CHIP	820 5% 1/10W
R1169	1-216-089-91	RES-CHIP	47K 5% 1/10W	R1703	1-208-806-11	METAL CHIP	10K 0.5% 1/10W
R1170	1-216-089-91	RES-CHIP	47K 5% 1/10W	R1704	1-216-114-00	RES-CHIP	510K 5% 1/10W
R1171	1-216-049-91	RES-CHIP	1K 5% 1/10W	R1706	1-216-469-11	METAL OXIDE	12 5% 3W
R1172	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1707	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1173	1-216-049-91	RES-CHIP	1K 5% 1/10W	R1708	1-208-776-11	METAL CHIP	560 0.5% 1/10W
R1174	1-208-774-11	METAL CHIP	470 0.5% 1/10W	R1711	1-216-295-91	SHORT	0
R1175	1-208-774-11	METAL CHIP	470 0.5% 1/10W	R1712	1-208-800-11	METAL CHIP	5.6K 0.5% 1/10W
R1180	1-216-089-91	RES-CHIP	47K 5% 1/10W	R1714	1-208-808-11	METAL CHIP	12K 0.5% 1/10W
R1182	1-216-049-91	RES-CHIP	1K 5% 1/10W	R1715	1-216-295-91	SHORT	0
R1183	1-208-774-11	METAL CHIP	470 0.5% 1/10W	R1717	1-216-295-91	SHORT	0
R1184	1-208-766-11	METAL CHIP	220 0.5% 1/10W	R1720	1-208-804-11	METAL CHIP	8.2K 0.5% 1/10W
R1187	1-216-025-91	RES-CHIP	100 5% 1/10W	R1721	1-208-757-11	METAL CHIP	91 0.5% 1/10W
R1188	1-216-025-91	RES-CHIP	100 5% 1/10W	R1722	1-208-776-11	METAL CHIP	560 0.5% 1/10W
R1191	1-216-025-91	RES-CHIP	100 5% 1/10W	R1724	1-216-041-00	RES-CHIP	470 5% 1/10W
R1193	1-216-041-00	RES-CHIP	470 5% 1/10W	R1725	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R1197	1-216-041-00	RES-CHIP	470 5% 1/10W	R1726	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R1202	1-216-025-91	RES-CHIP	100 5% 1/10W	R1727	1-208-776-11	METAL CHIP	560 0.5% 1/10W
R1203	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1728	1-208-776-11	METAL CHIP	560 0.5% 1/10W
R1204	1-216-025-91	RES-CHIP	100 5% 1/10W	R1729	1-208-800-11	METAL CHIP	5.6K 0.5% 1/10W
R1205	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1730	1-208-800-11	METAL CHIP	5.6K 0.5% 1/10W
R1206	1-216-025-91	RES-CHIP	100 5% 1/10W	R1736	1-216-041-00	RES-CHIP	470 5% 1/10W
R1207	1-216-049-91	RES-CHIP	1K 5% 1/10W	R1738	1-208-774-11	METAL CHIP	470 0.5% 1/10W
R1208	1-216-025-91	RES-CHIP	100 5% 1/10W	R1739	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1209	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1741	1-216-041-00	RES-CHIP	470 5% 1/10W
R1210	1-216-025-91	RES-CHIP	100 5% 1/10W	R1742	1-216-049-91	RES-CHIP	1K 5% 1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK
R1743	1-208-768-11	METAL CHIP	240 0.5% 1/10W
R1745	1-208-772-11	METAL CHIP	390 0.5% 1/10W
R1746	1-216-025-91	RES-CHIP	100 5% 1/10W
R1747	1-216-025-91	RES-CHIP	100 5% 1/10W
R1901	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1902	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1903	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R1904	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R1905	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R1906	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R1907	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1908	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1909	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R1910	1-216-061-00	RES-CHIP	3.3K 5% 1/10W
R1911	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R1912	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R1913	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R1914	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1915	1-216-033-00	RES-CHIP	220 5% 1/10W
R1916	1-216-045-00	RES-CHIP	680 5% 1/10W
R1917	1-216-061-00	RES-CHIP	3.3K 5% 1/10W
R1918	1-216-025-91	RES-CHIP	100 5% 1/10W
R1919	1-216-025-91	RES-CHIP	100 5% 1/10W
R1920	1-216-073-00	RES-CHIP	10K 5% 1/10W
R1921	1-216-109-00	RES-CHIP	330K 5% 1/10W
R1923	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1924	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1925	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1926	1-208-774-11	METAL CHIP	470 0.5% 1/10W
R1927	1-216-025-91	RES-CHIP	100 5% 1/10W
R1928	1-216-025-91	RES-CHIP	100 5% 1/10W
R1929	1-208-801-11	METAL CHIP	6.2K 0.5% 1/10W
R1930	1-216-295-91	SHORT	0
R1931	1-216-071-00	RES-CHIP	8.2K 5% 1/10W
R1932	1-216-077-91	RES-CHIP	15K 5% 1/10W
R1933	1-216-025-91	RES-CHIP	100 5% 1/10W
R1934	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1935	1-216-073-00	RES-CHIP	10K 5% 1/10W
R1936	1-216-053-00	RES-CHIP	1.5K 5% 1/10W
R1937	1-216-073-00	RES-CHIP	10K 5% 1/10W
R1938	1-216-025-91	RES-CHIP	100 5% 1/10W
R1939	1-216-025-91	RES-CHIP	100 5% 1/10W
R1940	1-216-025-91	RES-CHIP	100 5% 1/10W
R1941	1-216-073-00	RES-CHIP	10K 5% 1/10W
R1942	1-216-025-91	RES-CHIP	100 5% 1/10W
R1943	1-216-053-00	RES-CHIP	1.5K 5% 1/10W
R1944	1-216-073-00	RES-CHIP	10K 5% 1/10W
R1945	1-216-025-91	RES-CHIP	100 5% 1/10W
R1947	1-216-295-91	SHORT	0
R1948	1-216-025-91	RES-CHIP	100 5% 1/10W
R1949	1-216-025-91	RES-CHIP	100 5% 1/10W
R1950	1-216-025-91	RES-CHIP	100 5% 1/10W
R1951	1-216-089-91	RES-CHIP	47K 5% 1/10W
R1952	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1953	1-216-025-91	RES-CHIP	100 5% 1/10W
R1954	1-216-025-91	RES-CHIP	100 5% 1/10W

REF. NO.	PART NO.	DESCRIPTION	REMARK
R1955	1-216-089-91	RES-CHIP	47K 5% 1/10W
R1956	1-208-806-11	METAL CHIP	10K 0.5% 1/10W
R1957	1-216-041-00	RES-CHIP	470 5% 1/10W
R1958	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R1959	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1960	1-208-778-11	METAL CHIP	680 0.5% 1/10W
R1961	1-208-778-11	METAL CHIP	680 0.5% 1/10W
R1962	1-208-778-11	METAL CHIP	680 0.5% 1/10W
R1963	1-216-069-00	RES-CHIP	6.8K 5% 1/10W
R1964	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1965	1-216-025-91	RES-CHIP	100 5% 1/10W
R1966	1-216-041-00	RES-CHIP	470 5% 1/10W
R1967	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1968	1-216-049-91	RES-CHIP	1K 5% 1/10W
R1969	1-208-774-11	METAL CHIP	470 0.5% 1/10W
R1970	1-208-780-11	METAL CHIP	820 0.5% 1/10W
R1972	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R1974	1-216-097-91	RES-CHIP	100K 5% 1/10W
R1975	1-216-041-00	RES-CHIP	470 5% 1/10W
R1976	1-208-776-11	METAL CHIP	560 0.5% 1/10W
R1977	1-216-075-00	RES-CHIP	12K 5% 1/10W
R1978	1-216-081-00	RES-CHIP	22K 5% 1/10W
R1979	1-216-033-00	RES-CHIP	220 5% 1/10W
R1980	1-216-033-00	RES-CHIP	220 5% 1/10W
R1981	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R1982	1-216-097-91	RES-CHIP	100K 5% 1/10W
R1983	1-208-794-11	METAL CHIP	3.3K 0.5% 1/10W
<TUNER>			
TU151	8-598-431-00	TUNER, FSS BTF-WA411	
TU152	8-598-430-00	TUNER, FSS BTF-FA401	
<CRYSTAL>			
X001	1-781-589-21	VIBRATOR, CRYSTAL 16MHz	
X202	1-567-505-11	OSCILLATOR, CRYSTAL 3.58MHz	
X203	1-579-583-11	VIBRATOR, CERAMIC 503.5kHz	
X801	1-767-925-21	VIBRATOR, CRYSTAL 12MHz	
X1901	1-579-583-11	VIBRATOR, CERAMIC 503.5kHz	
X1902	1-567-505-11	OSCILLATOR, CRYSTAL 3.58MHz	
X1903	1-760-095-21	VIBRATOR, CRYSTAL 20.48MHz	

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

**KP-43T75/48S75/
53N77/53S75/61S75**
RM-Y906



- The components identified by Δ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
	* A-1316-437-A G BOARD, COMPLETE (53S75/53N77)			C555	1-104-665-11	ELECT	100 μ F 20% 25V
	*****			C556	1-104-665-11	ELECT	100 μ F 20% 25V
	* A-1316-471-A G BOARD, COMPLETE (48S75/61S75)			C557	1-128-562-11	ELECT	47 μ F 20% 100V
	*****			C563	1-104-664-11	ELECT	47 μ F 20% 25V
	* A-1316-475-A G BOARD, COMPLETE (43T75)			C564	1-102-129-00	CERAMIC	0.01 μ F 10% 50V
	*****			C565	1-102-129-00	CERAMIC	0.01 μ F 10% 50V
	* A-1316-498-A G BOARD, COMPLETE						
	(61S75 Serial No. 9,500,001-)			C566	1-104-666-11	ELECT	220 μ F 20% 25V
	*****			C567	1-106-387-00	MYLAR	0.068 μ F 5% 200V
	* A-1316-499-A G BOARD, COMPLETE			C601 Δ	1-136-311-11	MYLAR	0.47 μ F 20% 125V
	(53S75 Serial No. 9,500,001-)			C602	1-129-722-00	FILM	0.047 μ F 5% 630V
	*****			C604 Δ	1-113-920-11	CERAMIC	0.0022 μ F 20% 250V
	1-533-223-11 HOLDER, FUSE						
	* 4-039-590-01 SHIELD, TRANSFORMER			C606 Δ	1-113-920-11	CERAMIC	0.0022 μ F 20% 250V
	4-382-854-11 SCREW (M3X10), P, SW (+)			C607 Δ	1-136-311-11	MYLAR	0.47 μ F 20% 125V
	7-682-952-09 SCREW +PSW 3X16			C608	1-107-670-11	ELECT	10 μ F 20% 400V
				C609	1-130-467-00	MYLAR	470pF 5% 50V
				C610	1-130-471-00	MYLAR	0.001 μ F 5% 50V
	<CAPACITOR>						
C501	1-126-959-11	ELECT	0.47 μ F 20% 50V	C611	1-104-350-11	ELECT(BLOCK)	1000 μ F 20% 250V
C502	1-102-002-00	CERAMIC	680pF 10% 500V	C612	1-104-350-11	ELECT(BLOCK)	1000 μ F 20% 250V
C505	1-106-383-00	MYLAR	0.047 μ F 10% 200V	C613	1-136-165-00	MYLAR	0.1 μ F 5% 50V
C506	1-102-212-00	CERAMIC	820pF 10% 500V	C614	1-130-467-00	MYLAR	470pF 5% 50V
C508	1-102-002-00	CERAMIC	680pF 10% 500V	C615	1-104-331-11	CERAMIC	0.0022 μ F 10% 1KV
C510	1-130-471-00	MYLAR	0.001 μ F 5% 50V	C616	1-130-471-00	MYLAR	0.001 μ F 5% 50V
C513	1-126-933-11	ELECT	100 μ F 20% 16V	C617	1-137-605-11	MYLAR	0.01 μ F 10% 250V
C514	1-130-495-00	MYLAR	0.1 μ F 5% 50V	C618	1-126-965-11	ELECT	22 μ F 20% 50V
C515	1-126-960-11	ELECT	1 μ F 20% 50V	C619	1-104-664-11	ELECT	47 μ F 20% 16V
C516	1-126-965-11	ELECT	22 μ F 20% 50V	C620	1-136-175-00	MYLAR	0.68 μ F 5% 50V
Δ C517 Δ		CERAMIC	2KV	C621	1-136-175-00	MYLAR	0.68 μ F 5% 50V
C518	1-130-487-00	MYLAR	0.022 μ F 5% 50V	C622	1-136-171-00	MYLAR	0.33 μ F 5% 50V
C521 Δ	1-128-660-91	FILM	0.039 μ F 3% 630V	C623	1-136-171-00	MYLAR	0.33 μ F 5% 50V
C522 Δ	1-117-658-11	FILM	14000pF 3% 1.2KV	C624	1-104-330-91	CERAMIC	470pF 10% 1KV
C525	1-136-479-11	FILM	0.001 μ F 5% 50V	C625	1-104-664-11	ELECT	47 μ F 20% 16V
C526	1-130-475-00	MYLAR	0.0022 μ F 5% 50V	C626	1-104-664-11	ELECT	47 μ F 20% 16V
C527	1-129-702-00	FILM	0.001 μ F 5% 630V	C651	1-164-644-11	CERAMIC	330pF 10% 500V
C529	1-130-495-00	MYLAR	0.1 μ F 5% 50V	C654	1-126-953-11	ELECT	2200 μ F 20% 35V
C531	1-117-673-11	FILM	1.5 μ F 5% 250V	C655	1-126-953-11	ELECT	2200 μ F 20% 35V
C533	1-106-359-00	MYLAR	0.0047 μ F 5% 100V	C656	1-102-121-00	CERAMIC	0.0022 μ F 10% 50V
C534	1-162-116-00	CERAMIC	680pF 10% 2KV	C657	1-126-768-11	ELECT	2200 μ F 20% 16V
C535	1-162-116-00	CERAMIC	680pF 10% 2KV	C658	1-126-943-11	ELECT	2200 μ F 20% 25V
C536	1-126-965-11	ELECT	22 μ F 20% 50V	C659	1-126-943-11	ELECT	2200 μ F 20% 25V
C537	1-102-244-00	CERAMIC	220pF 10% 500V	C662	1-123-024-21	ELECT	33 μ F 160V
C538	1-106-359-00	MYLAR	0.0047 μ F 5% 100V	C663	1-104-665-11	ELECT	100 μ F 20% 25V
C540	1-107-645-11	ELECT	22 μ F 20% 160V	C664	1-107-910-11	ELECT	100 μ F 20% 35V
C542	1-102-228-00	CERAMIC	470pF 10% 500V	C665	1-126-934-11	ELECT	220 μ F 20% 10V
C543	1-117-813-11	FILM	0.75 μ F 5% 250V	C666	1-126-927-11	ELECT	2200 μ F 20% 10V
C544	1-110-626-11	ELECT	330 μ F 20% 160V	C667	1-104-664-11	ELECT	47 μ F 20% 25V
C545	1-162-114-00	CERAMIC	0.0047 μ F 2KV	C668	1-104-664-11	ELECT	47 μ F 20% 25V
C546	1-107-649-11	ELECT	2.2 μ F 20% 250V	C669	1-104-664-11	ELECT	47 μ F 20% 25V
C547	1-126-971-11	ELECT	470 μ F 20% 50V	C670	1-106-343-00	MYLAR	0.001 μ F 10% 200V
C548	1-104-665-11	ELECT	100 μ F 20% 25V	C671	1-106-343-00	MYLAR	0.001 μ F 10% 200V
C549	1-130-489-00	MYLAR	0.033 μ F 5% 50V	C672	1-104-664-11	ELECT	47 μ F 20% 25V
C550	1-104-665-11	ELECT	100 μ F 20% 25V	C673	1-126-960-11	ELECT	1 μ F 20% 50V
C551	1-126-971-11	ELECT	470 μ F 20% 50V	C674	1-104-664-11	ELECT	47 μ F 20% 25V
C552	1-130-489-00	MYLAR	0.033 μ F 5% 50V	C676	1-126-940-11	ELECT	330 μ F 20% 25V
C553	1-126-935-11	ELECT	470 μ F 20% 16V	C678	1-104-665-11	ELECT	100 μ F 20% 25V
C554	1-126-935-11	ELECT	470 μ F 20% 16V	C679	1-104-664-11	ELECT	47 μ F 20% 25V
				C680	1-128-551-11	ELECT	22 μ F 20% 25V



Les composants identifiés par
une trame et une marque Δ
sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.

The components identified by
shading and mark Δ are critical
for safety.
Replace only with part number
specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C1501	1-130-495-00	MYLAR	0.1 μ F 5% 50V	<CONNECTOR>			
C1502	1-126-941-11	ELECT	470 μ F 20% 25V	CN501	* 1-779-890-11	CONNECTOR, BOARD TO BOARD 10P	
C1504	1-102-106-00	CERAMIC	100pF 10% 50V	CN502	* 1-506-371-00	PIN, CONNECTOR 2P	
C1505	1-104-664-11	ELECT	47 μ F 20% 25V	CN503	* 1-564-513-11	PLUG, CONNECTOR 10P	
C1506	1-102-106-00	CERAMIC	100pF 10% 50V	CN504	* 1-580-689-11	PIN, CONNECTOR (PC BOARD) 4P	
C1507	1-126-942-61	ELECT	1000 μ F 20% 25V	CN505	* 1-580-689-11	PIN, CONNECTOR (PC BOARD) 4P	
C1508	1-102-121-00	CERAMIC	0.0022 μ F 10% 50V	CN506	* 1-580-689-11	PIN, CONNECTOR (PC BOARD) 4P	
C1510	1-126-941-11	ELECT	470 μ F 20% 25V	CN507	* 1-691-134-11	PIN, CONNECTOR (PC BOARD) 2P	
C1511	1-126-964-11	ELECT	10 μ F 20% 50V	CN508	1-695-915-11	TAB (CONTACT)	
C1512	1-126-933-11	ELECT	100 μ F 20% 16V	(53S75/61S75 Serial No. 9,500,001-)			
C1513	1-126-964-11	ELECT	10 μ F 20% 50V	CN601	* 1-580-843-11	PIN, CONNECTOR (POWER)	
C1516	1-104-665-11	ELECT	100 μ F 20% 25V	CN605	* 1-779-890-11	CONNECTOR, BOARD TO BOARD 10P	
C1517	1-130-471-00	MYLAR	0.001 μ F 5% 50V	CN651	* 1-779-890-11	CONNECTOR, BOARD TO BOARD 10P	
C1518	1-102-125-00	CERAMIC	0.0047 μ F 10% 50V	CN652	* 1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P	
C1519	1-102-106-00	CERAMIC	100pF 10% 50V	CN653	1-695-915-11	TAB (CONTACT)	
C1520	1-126-933-11	ELECT	100 μ F 20% 16V	CN1501	* 1-564-507-11	PLUG, CONNECTOR 4P	
C1521	1-126-941-11	ELECT	470 μ F 20% 25V	CN1502	* 1-779-890-11	CONNECTOR, BOARD TO BOARD 10P	
C1522	1-126-941-11	ELECT	470 μ F 20% 25V	CN1503	* 1-564-507-11	PLUG, CONNECTOR 4P	
C1523	1-126-964-11	ELECT	10 μ F 20% 50V	CN1504	* 1-564-507-11	PLUG, CONNECTOR 4P	
C1524	1-102-106-00	CERAMIC	100pF 10% 50V	CN1505	* 1-564-507-11	PLUG, CONNECTOR 4P	
C1525	1-102-852-91	CERAMIC	47pF 5% 50V	CN1506	* 1-564-506-11	PLUG, CONNECTOR 3P	
C1526	1-136-177-00	MYLAR	1 μ F 5% 50V	CN1507	* 1-564-506-11	PLUG, CONNECTOR 3P	
C1527	1-102-125-00	CERAMIC	0.0047 μ F 10% 50V	CN1508	* 1-564-506-11	PLUG, CONNECTOR 3P	
C1528	1-126-941-11	ELECT	470 μ F 20% 25V	<DIODE>			
C1530	1-102-106-00	CERAMIC	100pF 10% 50V	D501	8-719-109-85	DIODE MTZJ-T-77-5.1B	
C1531	1-102-106-00	CERAMIC	100pF 10% 50V	D505	8-719-110-41	DIODE MTZJ-T-77-15B	
C1533	1-126-941-11	ELECT	470 μ F 20% 25V	D506	8-719-921-63	DIODE MTZJ-T-77-7.5B	
C1534	1-102-125-00	CERAMIC	0.0047 μ F 10% 50V	D507	8-719-991-33	DIODE 1SS133T-77	
C1536	1-102-106-00	CERAMIC	100pF 10% 50V	D513	8-719-991-33	DIODE 1SS133T-77	
C1537	1-102-125-00	CERAMIC	0.0047 μ F 10% 50V	D517	8-719-979-85	DIODE RGP15J-6040G23	
C1538	1-126-941-11	ELECT	470 μ F 20% 25V	D518	8-719-945-80	DIODE ERC06-15S	
C1539	1-104-665-11	ELECT	100 μ F 20% 25V	D520	8-719-302-43	DIODE RGP10GPKG23	
C1540	1-126-941-11	ELECT	470 μ F 20% 25V	D522	Δ 8-719-302-43	DIODE EL1Z-V1	
C1541	1-102-125-00	CERAMIC	0.0047 μ F 10% 50V	D525	8-719-018-82	DIODE RGP02-20EL-6394	
C1542	1-102-125-00	CERAMIC	0.0047 μ F 10% 50V	D526	8-719-018-82	DIODE RGP02-20EL-6394	
C1543	1-102-129-00	CERAMIC	0.01 μ F 10% 50V	D528	8-719-908-03	DIODE GP08DPKG23	
C1544	1-102-129-00	CERAMIC	0.01 μ F 10% 50V	D529	8-719-302-43	DIODE RGP10GPKG23	
C1545	1-126-933-11	ELECT	100 μ F 20% 16V	D530	8-719-991-33	DIODE 1SS133T-77	
C1546	1-102-125-00	CERAMIC	0.0047 μ F 10% 50V	D531	8-719-991-33	DIODE 1SS133T-77	
C1547	1-130-487-00	MYLAR	0.022 μ F 5% 50V	D532	8-719-908-03	DIODE GP08DPKG23	
C1548	1-136-177-00	MYLAR	1 μ F 5% 50V	D533	8-719-302-43	DIODE RGP10GPKG23	
C1549	1-130-471-00	MYLAR	0.001 μ F 5% 50V	D534	8-719-302-43	DIODE RGP10GPKG23	
C1550	1-104-665-11	ELECT	100 μ F 20% 25V	D601	8-719-068-00	DIODE ERC04-06SE	
C1551	1-102-121-00	CERAMIC	0.0022 μ F 10% 50V	D602	8-719-068-00	DIODE ERC04-06SE	
C1552	1-106-220-00	MYLAR	0.1 μ F 5% 100V	D603	Δ 8-719-510-53	DIODE D4SB60L-F	
C1555	1-104-665-11	ELECT	100 μ F 20% 25V	D604	8-719-110-41	DIODE MTZJ-T-77-15B	
C1556	1-104-665-11	ELECT	100 μ F 20% 25V	D605	8-719-110-49	DIODE MTZJ-T-77-18B	
C1557	1-126-969-11	ELECT	220 μ F 20% 50V	D607	8-719-991-33	DIODE 1SS133T-77	
C1559	1-137-401-11	MYLAR	0.22 μ F 5% 100V	D609	8-719-948-45	DIODE ERA22-08TP3	
C1560	1-126-942-61	ELECT	1000 μ F 20% 25V	D610	8-719-510-48	DIODE D1N20R-TA	
C1561	1-102-121-00	CERAMIC	0.0022 μ F 10% 50V	D650	8-719-028-45	DIODE D2L20U-F	
C1562	1-102-125-00	CERAMIC	0.0047 μ F 10% 50V	D651	8-719-063-70	DIODE D1NL20U-TA	
C1563	1-137-370-11	MYLAR	0.01 μ F 5% 50V	D652	8-719-028-45	DIODE D2L20U-F	
C1566	1-137-370-11	MYLAR	0.01 μ F 5% 50V	D653	8-719-028-45	DIODE D2L20U-F	
C1570	1-130-471-00	MYLAR	0.001 μ F 5% 50V				
C1571	1-102-074-00	CERAMIC	0.001 μ F 10% 50V				
C1572	1-102-074-00	CERAMIC	0.001 μ F 10% 50V				

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.


KP-43T75/48S75/
53N77/53S75/61S75
RM-Y906





REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D654	8-719-057-96	DIODE D10SC6M-4012		IC502	8-759-133-90	IC μ PC339C	
D655	8-719-052-91	DIODE D4SBS4-F		IC601 Δ	8-729-045-39	TRANSISTOR MX0842AB-F	
D656	8-719-028-45	DIODE D2L20U-F		IC651	8-759-103-93	IC μ PC393C	
D657	8-719-028-45	DIODE D2L20U-F		IC652	8-759-701-84	IC NJM7905FA	
D658	8-719-063-70	DIODE D1NL20U-TA		IC653	8-759-701-75	IC NJM7805FA	
D659	8-719-063-70	DIODE D1NL20U-TA		IC654 Δ	8-749-012-13	IC DM-58	
D660	8-719-028-45	DIODE D2L20U-F		IC655	8-759-450-47	IC BA05T	
D661	8-719-991-33	DIODE 1SS133T-77		IC1501	8-752-068-36	IC CXA1726AS	
D662	8-719-991-33	DIODE 1SS133T-77		IC1502	8-749-014-37	IC STK392-150	
D663	8-719-991-33	DIODE 1SS133T-77		IC1504	8-759-634-51	IC NJM4558D	
D664	8-719-981-94	DIODE MTZJ-T-77-2.7A		IC1505	8-759-634-51	IC NJM4558D	
D665	8-719-991-33	DIODE 1SS133T-77		IC1506	8-749-014-37	IC STK392-150	
D666	8-719-991-33	DIODE 1SS133T-77		IC1507	8-759-634-51	IC NJM4558D	
D667	8-719-032-12	DIODE D1NS6-TR		IC1509	8-759-593-33	IC LA78045	
D668	8-719-110-61	DIODE MTZJ-T-77-24A					
D669	8-719-921-86	DIODE MTZJ-T-77-13				<COIL>	
D670	8-719-027-22	DIODE D3S6M-F		L501	1-412-533-21	INDUCTOR 47 μ H	
D671	8-719-027-22	DIODE D3S6M-F		L502	1-414-187-11	INDUCTOR 47 μ H	
D672	8-719-200-82	DIODE 11ES2-TA2B		L503	1-459-104-00	COIL, DUST CORE	
D673	8-719-991-33	DIODE 1SS133T-77		L504 Δ	1-419-082-11	COIL, HORIZONTAL LINEARITY	
D674	8-719-991-33	DIODE 1SS133T-77		L505	1-412-552-11	INDUCTOR 2.2mH	
D675	8-719-110-17	DIODE MTZJ-T-77-10B					
D676	8-719-109-72	DIODE MTZJ-T-77-3.9B		L601 Δ	1-433-900-11	TRANSFORMER, LINE FILTER	
D677	8-719-991-33	DIODE 1SS133T-77		L651	1-419-389-21	INDUCTOR 8.2 μ H	
D680	8-719-991-33	DIODE 1SS133T-77		L652	1-419-389-21	INDUCTOR 8.2 μ H	
D1501	8-719-109-89	DIODE MTZJ-T-77-5.6B		L653	1-406-975-21	INDUCTOR 47 μ H	
D1503	8-719-921-40	DIODE MTZJ-T-77-4.7B		L654	1-410-396-41	FERRITE 0.45 μ H	
D1504	8-719-110-08	DIODE MTZJ-T-77-8.2B					
D1505	8-719-110-41	DIODE MTZJ-T-77-15B		L655	1-410-396-41	FERRITE 0.45 μ H	
D1506	8-719-110-41	DIODE MTZJ-T-77-15B		L656	1-412-525-31	INDUCTOR 10 μ H	
D1507	8-719-110-41	DIODE MTZJ-T-77-15B		L657	1-412-525-31	INDUCTOR 10 μ H	
D1509	8-719-110-41	DIODE MTZJ-T-77-15B		L658	1-412-525-31	INDUCTOR 10 μ H	
D1510	8-719-110-41	DIODE MTZJ-T-77-15B		L659	1-412-521-31	INDUCTOR 4.7 μ H	
D1513	8-719-110-41	DIODE MTZJ-T-77-15B					
D1515	8-719-110-41	DIODE MTZJ-T-77-15B		L660	1-412-521-31	INDUCTOR 4.7 μ H	
D1520	8-719-109-93	DIODE MTZJ-T-77-6.2B		L1501	1-412-533-21	INDUCTOR 47 μ H	
D1521	8-719-109-93	DIODE MTZJ-T-77-6.2B		L1502	1-412-533-21	INDUCTOR 47 μ H	
D1522	8-719-924-16	DIODE MTZJ-T-77-24		L1509	1-412-533-21	INDUCTOR 47 μ H	
D1523	8-719-924-16	DIODE MTZJ-T-77-24		L1510	1-412-533-21	INDUCTOR 47 μ H	
D1525	8-719-908-03	DIODE GP08DPKG23					
JW168	8-719-018-82	DIODE RGP02-20EL-6394		L1511	1-412-533-21	INDUCTOR 47 μ H	
				L1512	1-412-533-21	INDUCTOR 47 μ H	
				L1513	1-412-525-31	INDUCTOR 10 μ H	
				L1514	1-412-911-11	FERRITE 0 μ H	
				L1515	1-412-911-11	FERRITE 0 μ H	
						<NEON LAMP>	
				NL501	1-517-778-21	LAMP, NEON	
				NL502	1-517-778-21	LAMP, NEON	
				NL503	1-517-778-21	LAMP, NEON	
				NL504	1-517-778-21	LAMP, NEON	
				NL505	1-517-778-21	LAMP, NEON	
						<IC LINK>	
				PS501	1-533-593-11	LINK, IC	
				PS1501	1-533-593-11	LINK, IC	
				PS1502	1-533-593-11	LINK, IC	
				PS1503	1-533-593-11	LINK, IC	
				PS1504	1-533-593-11	LINK, IC	

**KP-43T75/48S75/
53N77/53S75/61S75**
RM-Y906


 




• The components identified by  in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Les composants identifiés par une trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark  are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
PS1505	1-533-593-11	LINK, IC	
PS1506	1-533-593-11	LINK, IC	
<TRANSISTOR>			
Q501	8-729-048-47	TRANSISTOR 2SC2688(5)-LK	
Q502	8-729-048-46	TRANSISTOR 2SD2578-RF	
Q503	8-729-931-45	TRANSISTOR IRF614-LF	
Q505	8-729-032-61	TRANSISTOR 2SC5022-02	
Q506	8-729-119-76	TRANSISTOR 2SA1309A-QRSTA	
Q507	8-729-032-61	TRANSISTOR 2SC5022-02	
Q601	8-729-046-40	TRANSISTOR 2SK2663	
Q602	8-729-922-39	TRANSISTOR 2SD2144S-TP-V	
Q651	8-729-119-76	TRANSISTOR 2SA1309A-QRSTA	
Q652	8-729-922-39	TRANSISTOR 2SD2144S-TP-V	
Q653	8-729-119-76	TRANSISTOR 2SA1309A-QRSTA	
Q654	8-729-119-76	TRANSISTOR 2SA1309A-QRSTA	
Q655	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA	
Q656	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA	
Q657	8-729-119-76	TRANSISTOR 2SA1309A-QRSTA	
Q658	8-729-119-76	TRANSISTOR 2SA1309A-RTA	
Q1501	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA	
Q1502	8-729-119-76	TRANSISTOR 2SA1309A-QRSTA	
Q1503	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA	
Q1505	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA	
Q1506	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA	
Q1508	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA	
Q1509	8-729-119-76	TRANSISTOR 2SA1309A-QRSTA	
Q1511	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA	
<RESISTOR>			
R501	1-247-843-11	CARBON 3.3K 5%	1/4W
R502	1-249-419-11	CARBON 1.5K 5%	1/4W
R503	1-260-336-11	CARBON 4.7K 5%	1/2W
R504	1-260-087-11	CARBON 100 5%	1/2W
R505	1-260-087-11	CARBON 100 5%	1/2W
R506	1-216-481-11	METAL OXIDE 1.2K 5%	3W
R507	1-216-481-11	METAL OXIDE 1.2K 5%	3W
R508	1-216-481-11	METAL OXIDE 1.2K 5%	3W
R509	1-260-337-11	CARBON 5.6K 5%	1/2W
R510	1-249-421-11	CARBON 2.2K 5%	1/4W
R511	1-215-879-11	METAL OXIDE 47K 5%	1W
R512	1-249-422-11	CARBON 2.7K 5%	1/4W
R513	1-249-422-11	CARBON 2.7K 5%	1/4W
R514	1-249-422-11	CARBON 2.7K 5%	1/4W
R515	1-260-131-11	CARBON 470K 5%	1/2W
R517	1-247-891-00	CARBON 330K 5%	1/4W
R519	1-215-445-00	METAL 10K 1%	1/4W
R522	1-215-399-00	METAL 120 1%	1/4W
R523	1-247-895-91	CARBON 470K 5%	1/4W
R524	1-247-863-91	CARBON 22K 5%	1/4W
R525	1-249-428-11	CARBON 8.2K 5%	1/4W
R526	1-249-437-11	CARBON 47K 5%	1/4W
R527	1-249-428-11	CARBON 8.2K 5%	1/4W
R528	1-249-437-11	CARBON 47K 5%	1/4W
R529	1-249-439-11	CARBON 68K 5%	1/4W

REF. NO.	PART NO.	DESCRIPTION	REMARK
R530	1-249-428-11	CARBON 8.2K 5%	1/4W
R531	1-249-429-11	CARBON 10K 5%	1/4W
R532	1-249-430-11	CARBON 12K 5%	1/4W
R535	1-247-887-00	CARBON 220K 5%	1/4W
 R536 		METAL	1/4W
R537	1-247-863-91	CARBON 22K 5%	1/4W
R538	1-215-443-00	METAL 8.2K 1%	1/4W
R542	1-249-424-11	CARBON 3.9K 5%	1/4W
R543	1-260-135-11	CARBON 1M 5%	1/2W
R544	1-249-405-11	CARBON 100 5%	1/4W
 R545 		METAL	1/4W
R546	1-215-456-00	METAL 30K 1%	1/4W
R548	1-215-449-00	METAL 15K 1%	1/4W
R550	1-215-910-00	METAL OXIDE 68 5%	3W
R551	1-215-910-00	METAL OXIDE 68 5%	3W
R556	1-249-437-11	CARBON 47K 5%	1/4W
R563	1-247-887-00	CARBON 220K 5%	1/4W
R566	1-215-868-00	METAL OXIDE 680 5%	1W
R567	1-249-437-11	CARBON 47K 5%	1/4W
R568	1-249-405-11	CARBON 100 5%	1/4W
R569	1-260-314-11	CARBON 68 5%	1/2W
R570	1-247-807-31	CARBON 100 5%	1/4W
R571	1-215-917-11	METAL OXIDE 1K 5%	3W
R572	1-216-490-11	METAL OXIDE 39K 5%	3W
R573	1-214-912-00	METAL 91K 1%	1/2W
R574	1-216-490-11	METAL OXIDE 39K 5%	3W
R575	1-247-863-91	CARBON 22K 5%	1/4W
R576	1-247-881-00	CARBON 120K 5%	1/4W
R577	1-214-923-00	METAL 270K 1%	1/2W
R578	1-216-490-11	METAL OXIDE 39K 5%	3W
R579	1-216-490-11	METAL OXIDE 39K 5%	3W
R580	1-249-413-11	CARBON 470 5%	1/4W
R581	1-247-807-31	CARBON 100 5%	1/4W
R582	1-260-292-11	CARBON 1 5%	1/2W
R583	1-260-117-11	CARBON 33K 5%	1/2W
R584	1-249-377-11	CARBON 0.47 5%	1/4W
R586	1-215-862-11	METAL OXIDE 68 5%	1W (48S75/61S75)
R586	1-215-863-11	METAL OXIDE 100 5%	1W (43T75)
R586	1-215-864-00	METAL OXIDE 150 5%	1W (53N77/53S75)
R587	1-216-349-00	METAL OXIDE 1 5%	1W
R588	1-215-862-11	METAL OXIDE 68 5%	1W (48S75/61S75)
R588	1-215-863-11	METAL OXIDE 100 5%	1W (43T75)
R588	1-215-864-00	METAL OXIDE 150 5%	1W (53N77/53S75)
R589	1-247-807-31	CARBON 100 5%	1/4W
R590	1-260-127-11	CARBON 220K 5%	1/2W
R591	1-216-391-11	METAL OXIDE 1.5 5%	3W (53S75/61S75 Serial No. 9,500,001-)
R591	1-216-392-11	METAL OXIDE 1.8 5%	3W (EXCET 53S75/61S75 Serial No. 9,500,001-)
R592	1-247-863-91	CARBON 22K 5%	1/4W
R593	1-249-429-11	CARBON 10K 5%	1/4W



Les composants identifiés par
une trame et une marque Δ
sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.

The components identified by
shading and mark Δ are critical
for safety.
Replace only with part number
specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R594	1-249-377-11	CARBON	0.47 5% 1/4W	R680	1-249-429-11	CARBON	10K 5% 1/4W
R595	1-249-377-11	CARBON	0.47 5% 1/4W	R681	1-249-429-11	CARBON	10K 5% 1/4W
R596	1-249-377-11	CARBON	0.47 5% 1/4W	R682	1-249-417-11	CARBON	1K 5% 1/4W
R597	1-260-288-11	CARBON	0.47 5% 1/2W	R683	1-249-417-11	CARBON	1K 5% 1/4W
R598	1-249-377-11	CARBON	0.47 5% 1/4W	R684	1-249-425-11	CARBON	4.7K 5% 1/4W
R599	1-249-429-11	CARBON	10K 5% 1/4W	R685	1-249-417-11	CARBON	1K 5% 1/4W
R600	1-247-863-91	CARBON	22K 5% 1/4W	R686	1-215-445-00	METAL	10K 1% 1/4W
R601 Δ	1-219-776-11	CARBON	2.2M 10% 1/2W	R687	1-215-429-00	METAL	2.2K 1% 1/4W
R602 Δ	1-219-759-11	CARBON	1M 5% 1/2W	R688	1-215-429-00	METAL	2.2K 1% 1/4W
R603 Δ	1-240-881-11	CMT-MELF	0.82 5% 20W	R689	1-249-417-11	CARBON	1K 5% 1/4W
R604	1-260-298-51	CARBON	3.3 5% 1/2W	R690	1-215-437-00	METAL	4.7K 1% 1/4W
R605	1-249-415-11	CARBON	680 5% 1/4W	R691	1-249-417-11	CARBON	1K 5% 1/4W
R606 Δ	1-240-881-11	CMT-MELF	0.82 5% 20W	R1501	1-214-800-11	METAL	2.2 1% 1/2W
R607	1-249-389-11	CARBON	4.7 5% 1/4W	R1502	1-214-800-11	METAL	2.2 1% 1/2W
R608	1-247-791-91	CARBON	22 5% 1/4W	R1503	1-215-421-00	METAL	1K 1% 1/4W
R609	1-240-205-91	CARBON	22M 5% 1/2W	R1504	1-215-433-00	METAL	3.3K 1% 1/4W
R610	1-260-127-11	CARBON	220K 5% 1/2W	R1505	1-247-815-91	CARBON	220 5% 1/4W
R611	1-260-127-11	CARBON	220K 5% 1/2W	R1506	1-247-815-91	CARBON	220 5% 1/4W
R612 Δ	1-202-933-61	FUSIBLE	0.1 10% 1/2W	R1507	1-215-433-00	METAL	3.3K 1% 1/4W
R613	1-249-413-11	CARBON	470 5% 1/4W	R1508	1-215-421-00	METAL	1K 1% 1/4W
R615	1-249-437-11	CARBON	47K 5% 1/4W	R1509	1-214-800-11	METAL	2.2 1% 1/2W
R616	1-249-421-11	CARBON	2.2K 5% 1/4W	R1510	1-214-800-11	METAL	2.2 1% 1/2W
R617	1-216-349-00	METAL OXIDE	1 5% 1W	R1511	1-214-800-11	METAL	2.2 1% 1/2W
R618	1-260-127-11	CARBON	220K 5% 1/2W	R1512	1-214-800-11	METAL	2.2 1% 1/2W
R619	1-216-349-00	METAL OXIDE	1 5% 1W	R1513	1-215-421-00	METAL	1K 1% 1/4W
R620	1-215-493-00	METAL	1M 1% 1/4W	R1514	1-215-433-00	METAL	3.3K 1% 1/4W
R621	1-260-127-11	CARBON	220K 5% 1/2W	R1515	1-247-815-91	CARBON	220 5% 1/4W
R622	1-249-441-11	CARBON	100K 5% 1/4W	R1516	1-249-429-11	CARBON	10K 5% 1/4W
R623	1-260-127-11	CARBON	220K 5% 1/2W	R1517	1-247-887-00	CARBON	220K 5% 1/4W
R624	1-260-127-11	CARBON	220K 5% 1/2W	R1518	1-249-429-11	CARBON	10K 5% 1/4W
R652	1-249-377-11	CARBON	0.47 5% 1/4W	R1519	1-249-437-11	CARBON	47K 5% 1/4W
R654	1-216-365-00	METAL OXIDE	0.47 5% 2W	R1520	1-247-881-00	CARBON	120K 5% 1/4W
R655	1-260-288-11	CARBON	0.47 5% 1/2W	R1521	1-215-474-00	METAL	160K 1% 1/4W
R656	1-249-377-11	CARBON	0.47 5% 1/4W	R1522	1-214-800-11	METAL	2.2 1% 1/2W
R657	1-215-421-00	METAL	1K 1% 1/4W	R1523	1-214-800-11	METAL	2.2 1% 1/2W
R658	1-249-429-11	CARBON	10K 5% 1/4W	R1524	1-215-421-00	METAL	1K 1% 1/4W
R659	1-215-446-00	METAL	11K 1% 1/4W	R1525	1-215-433-00	METAL	3.3K 1% 1/4W
R660	1-215-439-00	METAL	5.6K 1% 1/4W	R1526	1-247-815-91	CARBON	220 5% 1/4W
R661	1-215-481-00	METAL	330K 1% 1/4W	R1527	1-247-815-91	CARBON	220 5% 1/4W
R662	1-215-445-00	METAL	10K 1% 1/4W	R1528	1-215-433-00	METAL	3.3K 1% 1/4W
R663	1-215-445-00	METAL	10K 1% 1/4W	R1529	1-215-421-00	METAL	1K 1% 1/4W
R664	1-249-425-11	CARBON	4.7K 5% 1/4W	R1530	1-214-800-11	METAL	2.2 1% 1/2W
R665	1-249-425-11	CARBON	4.7K 5% 1/4W	R1531	1-214-800-11	METAL	2.2 1% 1/2W
R666	1-247-887-00	CARBON	220K 5% 1/4W	R1532	1-214-800-11	METAL	2.2 1% 1/2W
R667	1-249-425-11	CARBON	4.7K 5% 1/4W	R1533	1-249-441-11	CARBON	100K 5% 1/4W
R668	1-249-429-11	CARBON	10K 5% 1/4W	R1534	1-214-800-11	METAL	2.2 1% 1/2W
R669	1-247-807-31	CARBON	100 5% 1/4W	R1535	1-215-421-00	METAL	1K 1% 1/4W
R670	1-249-417-11	CARBON	1K 5% 1/4W	R1536	1-215-433-00	METAL	3.3K 1% 1/4W
R671	1-249-429-11	CARBON	10K 5% 1/4W	R1537	1-247-815-91	CARBON	220 5% 1/4W
R672	1-249-417-11	CARBON	1K 5% 1/4W	R1538	1-249-429-11	CARBON	10K 5% 1/4W
R673	1-249-425-11	CARBON	4.7K 5% 1/4W	R1539	1-249-428-11	CARBON	8.2K 5% 1/4W
R675	1-249-429-11	CARBON	10K 5% 1/4W	R1540	1-249-417-11	CARBON	1K 5% 1/4W
R676	1-249-417-11	CARBON	1K 5% 1/4W	R1541	1-247-843-11	CARBON	3.3K 5% 1/4W
R677	1-249-417-11	CARBON	1K 5% 1/4W	R1542	1-249-429-11	CARBON	10K 5% 1/4W
R678	1-249-425-11	CARBON	4.7K 5% 1/4W	R1543	1-249-429-11	CARBON	10K 5% 1/4W
R679	1-247-807-31	CARBON	100 5% 1/4W	R1544	1-249-419-11	CARBON	1.5K 5% 1/4W
				R1548	1-249-438-11	CARBON	56K 5% 1/4W



Les composants identifiés par
une trame et une marque Δ
sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.

The components identified by
shading and mark Δ are critical
for safety.
Replace only with part number
specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1549	1-214-800-11	METAL	2.2	1%	1/2W		
R1550	1-215-447-00	METAL	12K	1%	1/4W		
R1551	1-249-428-11	CARBON	8.2K	5%	1/4W		
R1552	1-214-800-11	METAL	2.2	1%	1/2W		
R1554	1-215-449-00	METAL	15K	1%	1/4W		
R1555	1-247-807-31	CARBON	100	5%	1/4W		
R1556	1-247-863-91	CARBON	22K	5%	1/4W		
R1557	1-249-429-11	CARBON	10K	5%	1/4W		
R1558	1-249-429-11	CARBON	10K	5%	1/4W		
R1559	1-215-857-11	METAL OXIDE	10	5%	1W		
R1560	1-216-452-11	METAL OXIDE	180	5%	2W		
R1561	1-249-429-11	CARBON	10K	5%	1/4W		
R1562	1-249-429-11	CARBON	10K	5%	1/4W		
R1563	1-249-429-11	CARBON	10K	5%	1/4W		
R1564	1-215-445-00	METAL	10K	1%	1/4W		
R1565	1-249-429-11	CARBON	10K	5%	1/4W		
R1566	1-249-427-11	CARBON	6.8K	5%	1/4W		
R1567	1-247-863-91	CARBON	22K	5%	1/4W		
R1568	1-249-429-11	CARBON	10K	5%	1/4W		
R1570	1-249-383-11	CARBON	1.5	5%	1/4W		
R1576	1-249-429-11	CARBON	10K	5%	1/4W		
R1577	1-215-447-00	METAL	12K	1%	1/4W		
R1578	1-249-429-11	CARBON	10K	5%	1/4W		
R1579	1-215-421-00	METAL	1K	1%	1/4W		
R1580	1-215-421-00	METAL	1K	1%	1/4W		
R1581	1-215-474-00	METAL	160K	1%	1/4W		
R1582	1-249-421-11	CARBON	2.2K	5%	1/4W		
R1583	1-247-807-31	CARBON	100	5%	1/4W		
R1584	1-247-863-91	CARBON	22K	5%	1/4W		
R1585	1-215-449-00	METAL	15K	1%	1/4W		
R1586	1-249-441-11	CARBON	100K	5%	1/4W		
R1587	1-249-414-11	CARBON	560	5%	1/4W		
R1588	1-249-414-11	CARBON	560	5%	1/4W		
R1589	1-249-414-11	CARBON	560	5%	1/4W		
R1590	1-249-414-11	CARBON	560	5%	1/4W		
R1591	1-249-414-11	CARBON	560	5%	1/4W		
R1592	1-249-414-11	CARBON	560	5%	1/4W		
R1593	1-216-475-11	METAL OXIDE	120	5%	3W		
R1594	1-216-475-11	METAL OXIDE	120	5%	3W		
R1595	1-216-475-11	METAL OXIDE	120	5%	3W		
R1596	1-216-475-11	METAL OXIDE	120	5%	3W		
R1597	1-216-475-11	METAL OXIDE	120	5%	3W		
R1598	1-216-475-11	METAL OXIDE	120	5%	3W		
R1599	1-249-429-11	CARBON	10K	5%	1/4W		
R1600	1-247-807-31	CARBON	100	5%	1/4W		
R1601	1-249-437-11	CARBON	47K	5%	1/4W		
R1602	1-247-807-31	CARBON	100	5%	1/4W		
R1603	1-249-418-11	CARBON	1.2K	5%	1/4W		
R1604	1-249-429-11	CARBON	10K	5%	1/4W		
R1609	1-215-445-00	METAL	10K	1%	1/4W		
R1610	1-247-807-31	CARBON	100	5%	1/4W		
R1611	1-247-807-31	CARBON	100	5%	1/4W		
R1612	1-249-429-11	CARBON	10K	5%	1/4W		
R1613	1-249-429-11	CARBON	10K	5%	1/4W		
R1615	1-215-445-00	METAL	10K	1%	1/4W		
				<RELAY>			
				RY601 Δ 1-755-266-11 RELAY, AC POWER			
				<SPARK GAP>			
				SG501 1-519-466-11 GAP, SPARK			
				SG502 1-519-466-11 GAP, SPARK			
				<TRANSFORMER>			
				T501 Δ 1-433-836-11 TRANSFORMER, HORIZONTAL DRIVE			
				T502 Δ 1-433-876-11 TRANSFORMER, FERRITE (PMT)			
				T504 Δ 1-453-238-31 FLYBACK TRANS ASSY			
				T601 Δ 1-433-871-11 TRANSFORMER, CONVERTER (PIT)			
				T602 Δ 1-433-844-11 TRANSFORMER, CONVERTER			
				T603 Δ 1-429-992-21 TRANSFORMER, CONVERTER (PRT)			
				<THERMISTOR>			
				TH1501 1-807-925-11 THERMISTOR			
				<TEST PIN>			
				TP501 * 1-535-881-21 TERMINAL, TP (AUTO INSERTION)			
				<VARISTOR>			
				VDR601 Δ 1-801-073-31 VARISTOR TNR14V471K660			

				* A-1331-922-A CR BOARD, COMPLETE			

				4-382-854-11 SCREW (M3X10), P, SW (+)			
				<CAPACITOR>			
				C701 1-104-570-11 CERAMIC 0.001 μ F 10% 2KV			
				C703 1-104-664-11 ELECT 47 μ F 20% 25V			
				C706 1-102-114-00 CERAMIC 470PF 10% 50V			
				C708 1-102-113-00 CERAMIC 390PF 10% 50V			
				C709 1-101-880-00 CERAMIC 47PF 5% 50V			
				C710 1-162-115-00 CERAMIC 330PF 10% 2KV			
				C711 1-161-830-00 CERAMIC 0.0047 μ F 500V			
				C712 1-107-662-11 ELECT 22 μ F 20% 250V			
				<CONNECTOR>			
				CN701 * 1-564-507-11 PLUG, CONNECTOR 4P			
				CN702 * 1-564-512-11 PLUG, CONNECTOR 9P			
				CN703 1-785-879-11 CONNECTOR, ONE TOUCH			
				CN704 Δ 1-251-182-11 SOCKET, CRT			
				CN705 1-695-915-11 TAB (CONTACT)			
				CN706 1-695-915-11 TAB (CONTACT)			

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

**KP-43T75/48S75/
53N77/53S75/61S75**
RM-Y906



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<DIODE>				* A-1331-923-A CG BOARD, COMPLETE *****			
D705	8-719-991-33	DIODE 1SS133T-77		4-382-854-11 SCREW (M3X10), P, SW (+)			
D706	8-719-991-33	DIODE 1SS133T-77		<CAPACITOR>			
D707	8-719-991-33	DIODE 1SS133T-77		C731	1-104-664-11	ELECT 47 μ F 20% 25V	
D708	8-719-991-33	DIODE 1SS133T-77		C732	1-104-570-11	CERAMIC 0.001 μ F 10% 2KV	
D709	8-719-991-33	DIODE 1SS133T-77		C733	1-102-114-00	CERAMIC 470PF 10% 50V	
<COIL>				C734	1-102-114-00	CERAMIC 470PF 10% 50V	
L701	1-414-188-41	INDUCTOR 68 μ H		C735	1-101-880-00	CERAMIC 47PF 5% 50V	
L702	1-412-911-11	FERRITE 0 μ H		C736	1-161-830-00	CERAMIC 0.0047 μ F 500V	
<NEON LAMP>				C737	1-162-115-00	CERAMIC 330PF 10% 2KV	
NL701	1-517-778-21	LAMP, NEON		C738	1-107-662-11	ELECT 22 μ F 20% 250V	
<TRANSISTOR>				C1301	1-106-343-00	MYLAR 0.001 μ F 10% 200V	
Q704	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA		C1302	1-107-639-11	ELECT 47 μ F 20% 160V	
Q705	8-729-326-11	TRANSISTOR 2SC2611		C1303	1-126-933-11	ELECT 100 μ F 20% 16V	
Q706	8-729-200-17	TRANSISTOR 2SA1091-O		C1305	1-126-933-11	ELECT 100 μ F 20% 16V	
<RESISTOR>				C1308	1-106-383-00	MYLAR 0.047 μ F 10% 200V	
R701	1-219-743-11	CARBON 100 5% 1/2W		C1309	1-106-383-00	MYLAR 0.047 μ F 10% 200V	
R702	1-260-132-11	CARBON 560K 5% 1/2W		C1310	1-126-960-11	ELECT 1 μ F 20% 50V	
R703	1-216-486-00	METAL OXIDE 8.2K 5% 3W F		C1312	1-161-830-00	CERAMIC 0.0047 μ F 500V	
R704	1-215-476-00	METAL 200K 1% 1/4W		C1313	1-102-129-00	CERAMIC 0.01 μ F 10% 50V	
R711	1-247-807-31	CARBON 100 5% 1/4W		C1314	1-102-129-00	CERAMIC 0.01 μ F 10% 50V	
R712	1-249-404-00	CARBON 82 5% 1/4W		C1315	1-126-933-11	ELECT 100 μ F 20% 16V	
R713	1-216-486-00	METAL OXIDE 8.2K 5% 3W F		<CONNECTOR>			
R714	1-249-393-11	CARBON 10 5% 1/4W		CN731	* 1-564-512-11	PLUG, CONNECTOR 9P	
R715	1-249-419-11	CARBON 1.5K 5% 1/4W		CN732	* 1-564-507-11	PLUG, CONNECTOR 4P	
R718	1-260-133-11	CARBON 680K 5% 1/2W		CN733	* 1-564-508-11	PLUG, CONNECTOR 5P	
R719	1-249-425-11	CARBON 4.7K 5% 1/4W		CN734	* 1-564-513-11	PLUG, CONNECTOR 10P	
R720	1-260-099-11	CARBON 1K 5% 1/2W		CN735	* 1-564-512-11	PLUG, CONNECTOR 9P	
R721	1-260-099-11	CARBON 1K 5% 1/2W		CN736	* 1-564-512-11	PLUG, CONNECTOR 9P	
R722	1-260-087-11	CARBON 100 5% 1/2W		CN737	1-785-879-11	CONNECTOR, ONE TOUCH	
R723	1-412-911-11	FERRITE 0 μ H		CN738	1-695-915-11	TAB (CONTACT)	
<SPARK GAP>				CN739	1-695-915-11	TAB (CONTACT)	
SG701	1-519-422-11	GAP, SPARK		CN740 Δ	1-251-182-11	SOCKET, CRT	
SG702	1-517-729-31	GAP, SPARK		CN1301*	1-564-506-11	PLUG, CONNECTOR 3P	
<TEST PIN>				CN1302*	1-564-506-11	PLUG, CONNECTOR 3P	
TP701	* 1-535-881-21	TERMINAL, TP (AUTO INSERTION)		CN1303*	1-564-506-11	PLUG, CONNECTOR 3P	
*****				CN1304*	1-564-509-11	PLUG, CONNECTOR 6P	
<DIODE>				<COIL>			
D731	8-719-991-33	DIODE 1SS133T-77		L731	1-414-188-41	INDUCTOR 68 μ H	
D732	8-719-991-33	DIODE 1SS133T-77		L732	1-412-911-11	FERRITE 0 μ H	
D733	8-719-991-33	DIODE 1SS133T-77		<DIODE>			
D734	8-719-991-33	DIODE 1SS133T-77		D736	8-719-109-85	DIODE RD5.1ES-B2	
D735	8-719-991-33	DIODE 1SS133T-77		D1304	8-719-991-33	DIODE 1SS133T-77	
<COIL>				<COIL>			
L731	1-414-188-41	INDUCTOR 68 μ H		L731	1-414-188-41	INDUCTOR 68 μ H	
L732	1-412-911-11	FERRITE 0 μ H		L732	1-412-911-11	FERRITE 0 μ H	



Les composants identifiés par
une trame et une marque Δ
sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.

The components identified by
shading and mark Δ are critical
for safety.
Replace only with part number
specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK			
L1301	1-412-911-11	FERRITE	0μH			
L1302	1-412-911-11	FERRITE	0μH			
<NEON LAMP>						
NL731	1-517-778-21	LAMP, NEON				
<TRANSISTOR>						
Q731	8-729-423-33	TRANSISTOR	2SC3311A-QRSTA			
Q732	8-729-326-11	TRANSISTOR	2SC2611			
Q733	8-729-200-17	TRANSISTOR	2SA1091-O			
Q734	8-729-119-76	TRANSISTOR	2SA1175-HFE			
Q1301	8-729-017-06	TRANSISTOR	2SC4793			
Q1302	8-729-017-05	TRANSISTOR	2SA1837			
Q1303	8-729-119-76	TRANSISTOR	2SA1175-HFE			
Q1304	8-729-423-33	TRANSISTOR	2SC3311A-QRSTA			
Q1305	8-729-423-33	TRANSISTOR	2SC3311A-QRSTA			
Q1306	8-729-423-33	TRANSISTOR	2SC3311A-QRSTA			
<RESISTOR>						
R731	1-219-743-11	CARBON	100	5%	1/2W	
R732	1-260-132-11	CARBON	560K	5%	1/2W	
R733	1-247-807-31	CARBON	100	5%	1/4W	
R734	1-260-087-11	CARBON	100	5%	1/2W	
R735	1-249-403-11	CARBON	68	5%	1/4W	
R736	1-216-486-00	METAL OXIDE	8.2K	5%	3W	F
R737	1-249-393-11	CARBON	10	5%	1/4W	
R738	1-249-414-11	CARBON	560	5%	1/4W	
R739	1-216-486-00	METAL OXIDE	8.2K	5%	3W	F
R741	1-249-425-11	CARBON	4.7K	5%	1/4W	
R742	1-260-099-11	CARBON	1K	5%	1/2W	
R743	1-247-881-00	CARBON	120K	5%	1/4W	
R744	1-260-133-11	CARBON	680K	5%	1/2W	
R745	1-260-099-11	CARBON	1K	5%	1/2W	
R746	1-249-437-11	CARBON	47K	5%	1/4W	
R747	1-249-438-11	CARBON	56K	5%	1/4W	
R753	1-412-911-11	FERRITE	0μH			
R1301	1-215-916-11	METAL OXIDE	680	5%	3W	F
R1302	1-215-916-11	METAL OXIDE	680	5%	3W	F
R1303	1-249-400-11	CARBON	39	5%	1/4W	F
R1304	1-249-391-11	CARBON	6.8	5%	1/4W	F
R1305	1-249-391-11	CARBON	6.8	5%	1/4W	F
R1306	1-249-429-11	CARBON	10K	5%	1/4W	
R1307	1-260-311-11	CARBON	39	5%	1/2W	
R1308	1-249-419-11	CARBON	1.5K	5%	1/4W	
R1310	1-249-441-11	CARBON	100K	5%	1/4W	
R1311	1-249-419-11	CARBON	1.5K	5%	1/4W	F
R1314	1-249-419-11	CARBON	1.5K	5%	1/4W	
R1315	1-249-399-11	CARBON	33	5%	1/4W	
R1319	1-249-413-11	CARBON	470	5%	1/4W	
R1321	1-249-406-11	CARBON	120	5%	1/4W	
R1323	1-249-377-11	CARBON	0.47	5%	1/4W	F
R1324	1-249-425-11	CARBON	4.7K	5%	1/4W	
R1325	1-249-431-11	CARBON	15K	5%	1/4W	
R1327	1-249-441-11	CARBON	100K	5%	1/4W	

REF. NO.	PART NO.	DESCRIPTION	REMARK			
R1328	1-249-435-11	CARBON	33K	5%	1/4W	
<SPARK GAP>						
SG731	1-519-422-11	GAP, SPARK				
SG732	1-517-729-31	GAP, SPARK				
<TEST PIN>						
TP731	* 1-535-881-21	TERMINAL, TP (AUTO INSERTION)				
TP732	* 1-535-881-21	TERMINAL, TP (AUTO INSERTION)				
TP733	* 1-535-881-21	TERMINAL, TP (AUTO INSERTION)				

* A-1331-924-A CB BOARD, COMPLETE						

4-382-854-11 SCREW (M3X10), P, SW (+)						
<CAPACITOR>						
C761	1-104-664-11	ELECT	47μF	20%	25V	
C762	1-104-570-11	CERAMIC	0.001μF	10%	2KV	
C763	1-102-114-00	CERAMIC	470PF	10%	50V	
C764	1-102-112-00	CERAMIC	330PF	10%	50V	
C765	1-101-880-00	CERAMIC	47PF	5%	50V	
C767	1-162-115-00	CERAMIC	330PF	10%	2KV	
C768	1-126-964-11	ELECT	10μF	20%	50V	
C769	1-161-830-00	CERAMIC	0.0047μF		500V	
C770	1-107-662-11	ELECT	22μF	20%	250V	
<CONNECTOR>						
CN761	* 1-564-508-11	PLUG, CONNECTOR 5P				
CN762	* 1-564-512-11	PLUG, CONNECTOR 9P				
CN763	1-785-879-11	CONNECTOR, ONE TOUCH				
CN764	1-695-915-11	TAB (CONTACT)				
CN765	1-695-915-11	TAB (CONTACT)				
CN766	Δ 1-251-182-11	SOCKET, CRT				
<DIODE>						
D761	8-719-991-33	DIODE	1SS133T-77			
D762	8-719-991-33	DIODE	1SS133T-77			
D763	8-719-991-33	DIODE	1SS133T-77			
D764	8-719-991-33	DIODE	1SS133T-77			
D765	8-719-991-33	DIODE	1SS133T-77			
<COIL>						
L761	1-414-188-41	INDUCTOR	68μH			
L762	1-412-911-11	FERRITE	0μH			
<NEON LAMP>						
NL761	1-517-778-21	LAMP, NEON				



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<TRANSISTOR>				<RESISTOR>			
Q761	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA		R1291	1-247-807-31	CARBON 100 5% 1/4W	
Q762	8-729-326-11	TRANSISTOR 2SC2611		*****			
Q763	8-729-119-76	TRANSISTOR 2SA1175-HFE		* A-1372-619-A HA BOARD, COMPLETE			
Q764	8-729-200-17	TRANSISTOR 2SA1091-O		*****			
<RESISTOR>				<CONNECTOR>			
R761	1-219-743-11	CARBON 100 5% 1/2W		CN1202*	1-564-517-11	PLUG, CONNECTOR 2P	
R762	1-260-132-11	CARBON 560K 5% 1/2W		CN1203*	1-564-522-11	PLUG, CONNECTOR 7P	
R763	1-247-807-31	CARBON 100 5% 1/4W		<DIODE>			
R764	1-216-486-00	METAL OXIDE 8.8K 5% 3W F		D1201	8-719-053-43	DIODE SLR-325VCT31	
R765	1-247-807-31	CARBON 100 5% 1/4W		<RESISTOR>			
R766	1-216-486-00	METAL OXIDE 8.2K 5% 3W F		R1201	1-249-431-11	CARBON 15K 5% 1/4W	
R767	1-249-393-11	CARBON 10 5% 1/4W		R1202	1-249-425-11	CARBON 4.7K 5% 1/4W	
R768	1-249-418-11	CARBON 1.2K 5% 1/4W		R1203	1-249-417-11	CARBON 1K 5% 1/4W	
R770	1-249-404-00	CARBON 82 5% 1/4W		R1204	1-249-419-11	CARBON 1.5K 5% 1/4W	
R771	1-249-426-11	CARBON 5.6K 5% 1/4W		R1205	1-249-421-11	CARBON 2.2K 5% 1/4W	
R772	1-249-435-11	CARBON 33K 5% 1/4W		R1206	1-247-815-91	CARBON 220 5% 1/4W	
R773	1-260-099-11	CARBON 1K 5% 1/2W		<SWITCH>			
R775	1-249-425-11	CARBON 4.7K 5% 1/4W		S1201	1-572-198-11	SWITCH, KEYBOARD (FLASH FOCUS)	
R776	1-260-133-11	CARBON 680K 5% 1/2W		S1202	1-572-198-11	SWITCH, KEYBOARD (TV/VIDEO)	
R777	1-260-099-11	CARBON 1K 5% 1/2W		S1203	1-572-198-11	SWITCH, KEYBOARD (VOLUME -)	
R778	1-259-880-11	CARBON 2.2M 5% 1/2W		S1204	1-572-198-11	SWITCH, KEYBOARD (VOLUME +)	
R779	1-260-087-11	CARBON 100 5% 1/2W		S1205	1-572-198-11	SWITCH, KEYBOARD (CHANNEL -)	
R783	1-412-911-11	FERRITE 0μH		S1206	1-572-198-11	SWITCH, KEYBOARD (CHANNEL +)	
<SPARK GAP>				S1207	1-572-198-11	SWITCH, KEYBOARD (POWER)	
SG761	1-519-422-11	GAP, SPARK		*****			
SG762	1-517-729-31	GAP, SPARK		* A-1372-620-A HB BOARD, COMPLETE			
<TEST PIN>				*****			
TP761	* 1-535-881-21	TERMINAL, TP (AUTO INSERTION)		<CAPACITOR>			
*****				C1251	1-128-551-11	ELECT 22μF 20% 25V	
* A-1372-618-A HC BOARD, COMPLETE				C1252	1-128-551-11	ELECT 22μF 20% 25V	
*****				C1253	1-128-551-11	ELECT 22μF 20% 25V	
<CAPACITOR>				C1254	1-128-551-11	ELECT 22μF 20% 25V	
C1291	1-126-791-11	ELECT 10μF 20% 16V		C1255	1-128-551-11	ELECT 22μF 20% 25V	
<CONNECTOR>				<CONNECTOR>			
CN1291*	1-564-518-11	PLUG, CONNECTOR 3P		CN1252*	1-564-517-11	PLUG, CONNECTOR 2P	
<DIODE>				CN1253*	1-564-526-11	PLUG, CONNECTOR 11P	
D1291	8-719-066-43	DIODE GPIU28Y					
D1292	8-719-109-89	DIODE RD5.6ESB2					
D1293	8-719-109-89	DIODE RD5.6ESB2					



Les composants identifiés par
une trame et une marque Δ
sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.

The components identified by
shading and mark Δ are critical
for safety.
Replace only with part number
specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
<DIODE>			
D1251	8-719-110-17	DIODE RD10ESB2	
D1252	8-719-110-17	DIODE RD10ESB2	
D1253	8-719-110-17	DIODE RD10ESB2	
D1254	8-719-110-17	DIODE RD10ESB2	
D1255	8-719-110-17	DIODE RD10ESB2	
D1256	8-719-110-17	DIODE RD10ESB2	
<JACK>			
J1251	1-770-361-11	TERMINAL BLOCK, S	
<RESISTOR>			
R1251	1-249-429-11	CARBON 10K 5% 1/4W	
R1252	1-249-424-11	CARBON 3.9K 5% 1/4W	
R1253	1-249-421-11	CARBON 2.2K 5% 1/4W	
R1254	1-249-418-11	CARBON 1.2K 5% 1/4W	
R1255	1-249-425-11	CARBON 4.7K 5% 1/4W	
R1256	1-247-804-11	CARBON 75 5% 1/4W	
R1257	1-247-895-91	CARBON 470K 5% 1/4W	
R1258	1-247-895-91	CARBON 470K 5% 1/4W	
R1259	1-247-804-11	CARBON 75 5% 1/4W	
R1260	1-247-804-11	CARBON 75 5% 1/4W	
<SWITCH>			
S1251	1-572-198-11	SWITCH, KEYBOARD (SELECT)	
S1252	1-572-198-11	SWITCH, KEYBOARD (+)	
S1253	1-572-198-11	SWITCH, KEYBOARD (-)	
S1254	1-572-198-11	SWITCH, KEYBOARD (MENU)	
S1255	1-572-198-11	SWITCH, KEYBOARD (SET UP)	

* A-1390-933-A S BOARD, COMPLETE			

<CONNECTOR>			
CN3001*	1-564-506-11	PLUG, CONNECTOR 3P	
<DIODE>			
D3001	8-719-109-89	DIODE RD5.6ESB2	
<SWITCH>			
S3001	1-528-911-21	BATTERY, SOLAR	

REF. NO.	PART NO.	DESCRIPTION	REMARK
MISCELLANEOUS			

Δ 1-223-925-11	RESISTOR ASSY (HIGH-VOLTAGE)	(FOCUS PACK)	
Δ 1-451-469-21	COIL ASSY, VM	(53S75/61S75 Serial No. 9,500,001-)	
Δ 1-451-496-11	DEFLECTION YOKE	(EXCEPT 53S75/61S75 Serial No. 9,500,001-)	
Δ 1-451-496-21	DEFLECTION YOKE	(53S75/61S75 Serial No. 9,500,001-)	
Δ 1-452-790-21	NECK ASSY	(EXCEPT 53S75/61S75 Serial No. 9,500,001-)	
Δ 1-452-909-31	MAGNET ASSY, 4 POLE	(EXCEPT 53S75/61S75 Serial No. 9,500,001-)	
Δ 1-453-238-31	FLAYBACK TRANS ASSY (T504)		
1-500-021-11	CLAMP, SLEEVE FERRITE		
1-529-396-11	SPEAKER (10cm) (EXCEPT 53N77)		
1-529-401-11	SPEAKER (13cm) (53N77)		
1-529-403-11	SPEAKER (6.6cm) (53N77)		
1-556-945-21	CABLE, P-P		
* 1-557-056-31	CABLE, P-P		
Δ 1-790-001-11	CORD, AC POWER (WITH CONNECTOR)	(43T75,48S75,61S75)	
Δ 1-790-130-11	CORD, AC POWER (WITH CONNECTOR)	(53N77,53S75)	
Δ 8-598-414-20	CHANGER, ANTENNA AS-2F		
Δ 8-598-955-30	BLOCK ASSY, HIGH-VOLTAGE		
Δ 8-733-570-15	CRT 07MXC2(G)(HEATER)	(EXCEPT 53S75/61S75 Serial No. 9,500,001-)	
Δ 8-733-571-15	CRT 07MXC2(R)(HEATER) (43T75)		
Δ 8-733-572-15	CRT 07MXC3(R)(HEATER)	(48S75,53N77,53S75)	
Δ 8-733-573-15	CRT 07MXC4(R)(HEATER) (61S75)		
Δ 8-733-574-15	CRT 07MAC2(B)(HEATER) (43T75)		
Δ 8-733-575-15	CRT 07MAC3(B)(HEATER)	(48S75,53N77,53S75)	
Δ 8-733-576-15	CRT 07MAC4(B)(HEATER) (61S75)		
Δ A-1501-520-A	COUPLER ASSY, CRT (B)	(61S75 Serial No. 9,500,001-)	
Δ A-1501-521-A	COUPLER ASSY, CRT (R)	(61S75 Serial No. 9,500,001-)	
Δ A-1501-522-A	COUPLER ASSY, CRT (G)	(53S75/61S75 Serial No. 9,500,001-)	
Δ A-1501-526-A	COUPLER ASSY, CRT (R)	(53S75 Serial No. 9,500,001-)	
Δ A-1501-527-A	COUPLER ASSY, CRT (B)	(53S75 Serial No. 9,500,001-)	

ACCESSORIES AND PACKING MATERIALS			

* 4-041-423-01	SHEET, PROTECTION (43T75/48S75)		
* 4-041-425-01	BAG, PROTECTION (48S75)		
* 4-041-426-01	BAG, PROTECTION (53N77/53S75)		
* 4-042-463-01	SHEET, PROTECTION (53N77/53S75/61S75)		
* 4-049-155-01	BAG, PROTECTION (43T75)		

REF. NO.	PART NO.	DESCRIPTION	REMARK
	* 4-069-525-01	CUSHION (UPPER) (ASSY) (48S75)	
	* 4-069-526-01	CUSHION (LOWER) (ASSY) (48S75)	
	* 4-069-531-01	INDIVIDUAL CARTON (48S75)	
	* 4-069-532-01	PLATE, BOTTOM (48S75)	
	* 4-069-533-01	TRAY (48S75)	
	* 4-069-537-01	ASSY, CUSHION (UPPER) (43T75)	
	* 4-069-538-01	ASSY, CUSHION (LOWER) (43T75)	
	* 4-069-543-01	INDIVIDUAL CARTON (43T75)	
	* 4-069-545-01	TRAY (43T75)	
	* 4-069-573-01	INDIVIDUAL CARTON (53N77/53S75)	
	* 4-069-574-01	BOARD, BOTTOM (53N77/53S75)	
	* 4-069-575-01	TRAY (53N77/53S75)	
	* 4-069-576-01	CUSHION (UPPER) (ASSY) (53N77/53S75)	
	* 4-069-577-01	CUSHION (LOWER) (ASSY) (53N77)	
	* 4-069-582-01	INDIVIDUAL CARTON (61S75)	
	* 4-069-583-01	BOARD, BOTTOM (61S75)	
	* 4-069-584-01	TRAY (61S75)	
	* 4-069-585-01	CUSHION (UPPER) (ASSY) (61S75)	
	* 4-069-591-01	CUSHION (LOWER) (ASSY) (53S75)	
	* 4-069-594-01	CUSHION (LOWER) (ASSY) (61S75)	
	* 4-076-420-01	BAG, PROTECTION (61S75)	
	4-077-171-11	MANUAL, INSTRUCTION	
	4-077-171-21	MANUAL, INSTRUCTION	
	4-077-171-31	MANUAL, INSTRUCTION	
	4-077-171-41	MANUAL, INSTRUCTION	
		REMOTE COMMANDER	

	1-418-469-11	REMOTE COMMANDER (RM-Y906)	
	4-978-977-01	COVER, BATTERY (FOR RM-Y906)	